



Raymarine®

RAY90 / RAY91

Operation Instructions

Legal notices

Trademark and patents notice

Raymarine®, **Tacktick®**, **Pathfinder®**, **Clear Pulse®**, **Truzoom®**, **SeaTalk®**, **SeaTalk HS™**, **SeaTalk NG™**, and **MicroNet™**, are registered or claimed trademarks of Raymarine UK Ltd.

FLIR®, **Fishidy®**, **Fishing Hot Spots®**, **YachtSense™**, **DockSense®**, **RangeFusion™**, **DownVision®**, **SideVision®**, **RealVision®**, **HyperVision™**, **Wi-Fish®**, **Dragonfly®**, **Element®**, **Quantum®**, **Cyclone™**, **Alpha™**, **Axiom®**, **Infrared Everywhere**, **The World's Sixth Sense** and **ClearCruise®** are registered or claimed trademarks of Teledyne FLIR LLC.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

Content notice

Please ensure that you have obtained this document only from Raymarine, and that it is the **latest** available version.

There are numerous third-party Internet websites (such as www.manualslib.com) hosting Raymarine product manuals. These websites are not authorized by Raymarine to do so, and are often hosting illegitimate or older versions of Raymarine product manuals, which may contain inaccurate or misleading information.

To obtain the latest official documentation for a Raymarine product, please visit the official Raymarine website: www.docs.raymarine.com

Artificial Intelligence (AI) content notice

There are numerous third-party **Artificial Intelligence (AI)** services available to the public, which are capable of providing a summary or transcription of the information provided by official Raymarine publications or websites, either in written or audio/video formats. These services may alter, supplement, or convey the original information provided by Raymarine in inaccurate or misleading ways.

Please ensure that you have obtained this document only from Raymarine, and that it is the **latest** available version.

CONTENTS

CHAPTER 1 IMPORTANT INFORMATION.....	11	CHAPTER 3 PRODUCT AND SYSTEM OVERVIEW.....	18
Safety warnings.....	11	3.1 Product overview.....	19
Certified Installation	11	3.2 Required additional components.....	19
Product warnings.....	11	3.3 Optional wired components	19
Regulatory notices.....	12	Extension cables	19
Compliance Statement (Part 15.19)	12	3.4 Optional wireless components.....	20
FCC Interference Statement (Part 15.105 (b))	12	3.5 Compatible MFDs / Chartplotters.....	20
Innovation, Science and Economic Development Canada (ISED)	12	3.6 Incompatible Raymarine® MFDs / Chartplotters	21
Licensing	13	3.7 Software updates.....	21
Water ingress	13	Checking software versions.....	21
Disclaimer.....	13	Ray90/Ray91 software.....	21
Declaration of Conformity.....	13	Performing software updates — Raymic handset.....	22
PSTI Compliance.....	14	CHAPTER 4 LICENSING.....	23
Product disposal.....	14	4.1 VDES, IRR 2020 and BIPT Requirements.....	24
Warranty policy and registration.....	14	VDES Overview.....	24
Technical accuracy	14	VDES applicability	24
Publication copyright.....	14	VDES and IRR 2020 requirements.....	25
CHAPTER 2 DOCUMENT AND PRODUCT INFORMATION	15	BIPT Requirements (Belgium only)	25
2.1 Applicable products	16	4.2 Licensing	25
2.2 Applicable software version	16	USA licensing requirements	25
2.3 Product documentation	16	Canada licensing requirements.....	26
SeaTalk NG documentation.....	16	Europe licensing requirements	26
2.4 Printed (hardcopy) product manuals.....	16	Rest of World licensing requirements	28
2.5 Document illustrations.....	17	Additional information — Ray90 / Ray91	28
2.6 Document conventions.....	17		

Additional information - wireless handset.....	28	RF interference.....	38
Additional information - wireless charging holster	28	Compass safe distance	39
Additional information - wireless hub	29	EMC installation guidelines	39
Additional information - wireless speaker.....	29	Suppression ferrites.....	39
4.3 Obtain MMSI (Maritime Mobile Service Identity) number	29	Connections to other equipment	39
4.4 Automatic Transmitter Identification System (ATIS).....	30	7.4 GNSS (GPS) location requirements	39
CHAPTER 5 PARTS SUPPLIED.....	31	7.5 Antenna mounting and EME exposure	40
5.1 Parts supplied	32	7.6 Multiple antenna installations.....	40
CHAPTER 6 PRODUCT DIMENSIONS	33	7.7 Loud hailer location requirements	40
6.1 Product dimensions — Base station.....	34	7.8 Wireless product location requirements.....	40
6.2 Product dimensions — speakers.....	34	Wireless location requirements for optimum performance.....	40
6.3 Product dimensions — Wired handset (Raymic)	35	Pre-installation site survey.....	41
6.4 Product dimensions — Wireless hub.....	35	CHAPTER 8 CABLES AND CONNECTIONS — GENERAL INFORMATION.....	43
6.5 Product dimensions — Wireless handset and holster	36	8.1 General cabling guidance.....	44
CHAPTER 7 LOCATION REQUIREMENTS	37	Cable types and length	44
7.1 Warnings and cautions.....	38	Cable routing and bend radius.....	44
7.2 Potential ignition source	38	Strain relief.....	44
7.3 General location requirements.....	38	Circuit isolation	44
Ventilation requirements.....	38	Cable shielding.....	45
Mounting surface requirements.....	38	Connections to other equipment	45
Cable routing requirements	38	Dust caps.....	45
Electrical interference	38	Bare-ended wire connections	45
Power supply	38	8.2 Connections overview	45
		CHAPTER 9 MOUNTING.....	47
		9.1 Tools required.....	48
		9.2 Mounting the Base station	48
		9.3 Wired and wireless speaker mounting	48

9.4 Wired handset mounting using the holster	49	14.2 Power distribution	66
9.5 Pass-through panel kit mounting	50	14.3 Power cable extension (12 V systems)	68
9.6 Mounting the wireless hub	51	14.4 Wireless handset charging holster – power connection (Ray63 / Ray73 only)	69
Antenna orientation	51	In-line fuse and thermal breaker ratings	69
Installing the wireless hub antenna extension accessory	52	14.5 Wireless speaker – power connection (Ray63 / Ray73 only)	69
9.7 Mounting the charging holster for the wireless handset	52	In-line fuse and thermal breaker ratings	69
CHAPTER 10 NETWORK CONNECTIONS	54	CHAPTER 15 GETTING STARTED	70
10.1 Connections overview	55	15.1 Licensing	71
10.2 Handset station connection	55	15.2 General radio operating rules	71
Connecting handsets and cables	56	15.3 Handset controls	71
Wired handset extension cables	56	Wireless speaker controls	72
10.3 Wired speaker connection	56	15.4 Powering the Base station	72
10.4 Connecting GNSS (GPS) and VHF antennas	56	Powering the handset	73
10.5 Wireless hub connection	58	15.5 Homescreen overview	73
10.6 Wireless handset connections	58	Status bar symbols	74
CHAPTER 11 NMEA 0183 CONNECTION	59	Main menu overview	75
11.1 NMEA 0183 connection	60	15.6 Multiple station operation	77
CHAPTER 12 NMEA 2000 CONNECTION	61	15.7 Adjusting Brightness and Contrast	77
12.1 NMEA 2000 / SeaTalk NG connection	62	15.8 Shared Brightness	77
Connecting SeaTalk NG cables	62	Enabling Shared Brightness	78
CHAPTER 13 LOUD HAILER CONNECTION	63	15.9 Initial set up	78
13.1 Loud hailer connection	64	15.10 Selecting a language	78
CHAPTER 14 POWER CONNECTIONS	65	15.11 Switching on the AIS receiver	78
14.1 Power connection	66	15.12 Selecting a network type	78
In-line fuse and thermal breaker ratings	66	15.13 Entering your MMSI number	79
		15.14 Entering your ATIS ID	80
		Enabling and disabling ATIS mode	81
		15.15 Changing the radio region	82

15.16 Switching between high and low transmit power	82
15.17 GNSS (GPS) set up.....	82
Enabling and disabling the internal GNSS (GPS)	83
GNSS data source.....	83
Manual GPS source missing or no position data	83
Entering position manually	83
Selecting (GNSS) GPS information to display	83
Setting time format and offset	83

CHAPTER 16 WIRELESS HANDSET STATIONS 84

16.1 Wireless handsets.....	85
Wireless handset charging	85
16.2 Connecting a wireless handset to the hub.....	85
Checking the Wireless hub's password	86
Changing your wireless hub's password	86
Changing the hub's wireless channel	86
16.3 Connecting the wireless speaker to the Wireless handset.....	87
Disconnecting a Wireless speaker	87
16.4 Wireless set-up menu options	88
Wireless hub set-up menu options	88
Wireless handset not connected menu	88

CHAPTER 17 DIGITAL SELECTIVE CALLING (DSC) 90

17.1 Digital Selective Calling (DSC).....	91
---	----

17.2 Distress calls	92
Making a designated distress call	92
Making a Distress call	92
Making a Mayday call	92
Cancelling a distress call before transmission.....	93
Cancelling a distress call after transmission.....	93
Receiving a distress call.....	94
Ignoring a distress call	94
Acknowledging a distress call	95
Manually relaying a distress call	95
Distress relays sent by other stations	95
17.3 Urgency calls.....	95
Making an urgency call	95
Receiving an urgency call.....	96
17.4 Safety calls.....	96
Making a safety call	96
Receiving a safety call	96
17.5 Individual (routine) calls.....	96
Making an Individual call	97
Receiving an Individual call	97
17.6 Group calls	97
Making a group call.....	97
Receiving a group call.....	97
17.7 Position requests	98
Making a position request.....	98
Responding to a position request.....	98

Setting automatic response to position requests.....	98	18.8 Set-up menu options.....	105
17.8 Phonebook.....	98	Display Set-up menu.....	107
Adding a Phonebook entry.....	98	Shared Brightness menu.....	107
Editing a Phonebook entry.....	99	CHAPTER 19 HAILER, FOG HORN, AND INTERCOM.....	108
Deleting a Phonebook entry.....	99	19.1 Hailer Fog Intercom menu.....	109
17.9 Call logs.....	99	19.2 Loud hailer.....	109
Accessing the call logs.....	99	Using the hailer.....	109
17.10 Test calls.....	100	19.3 Fog horn.....	109
Making a Test call.....	100	Using the fog horn in manual mode.....	110
Receiving a test call.....	100	Using automatic fog horn modes.....	110
17.11 DSC set-up menu options.....	100	Switching off Fog Horn mode.....	110
CHAPTER 18 VHF OPERATIONS.....	102	19.4 Intercom.....	110
18.1 Watch modes.....	103	Using the intercom.....	110
Setting Watch mode.....	103	Responding to the intercom.....	110
18.2 Scan Mode.....	103	CHAPTER 20 MAINTENANCE.....	111
Setting Scan mode.....	103	20.1 Maintenance.....	112
18.3 Priority channels.....	103	Routine checks.....	112
Switching between priority channels.....	103	Unit cleaning instructions.....	112
Setting a second priority channel.....	103	CHAPTER 21 TROUBLESHOOTING.....	113
18.4 Sensitivity.....	104	21.1 LED diagnostics — Ray90 / Ray91 Base station.....	114
Switching sensitivity modes.....	104	21.2 LED diagnostics — Wireless (Active) speaker.....	114
18.5 Private channels.....	104	21.3 Troubleshooting.....	115
Selecting a private channel set.....	104	Performing a system reset.....	115
18.6 Automatic Transmitter Identification System (ATIS) and Marcom-C mode.....	104	System test.....	115
Enabling and disabling ATIS mode.....	105	Checking for RF interference.....	115
18.7 AIS receiver.....	105	21.4 Power up troubleshooting.....	116
Switching AIS on and off.....	105		

21.5 Audio troubleshooting (transmission / reception).....	117	CHAPTER 24 SPARES AND ACCESSORIES.....	134
Passive speaker troubleshooting	118	24.1 Ray90 / Ray91 spares	135
21.6 GNSS (GPS) troubleshooting	119	24.2 Extension cables.....	135
21.7 DSC troubleshooting	120	24.3 Accessories	135
Obtain MMSI (Maritime Mobile Service Identity) number	120	24.4 SeaTalk NG cables and accessories	136
21.8 AIS troubleshooting (Ray70 / 73 / 91 only)	121	APPENDIX A NMEA 0183 SENTENCES	141
21.9 Wired handset troubleshooting.....	121	APPENDIX B NMEA 2000 PGN LIST	142
21.10 Wireless troubleshooting (Ray63 / 73 / 90 / 91 only).....	122	APPENDIX C LICENSING AND MMSI ISSUING AUTHORITIES	143
CHAPTER 22 TECHNICAL SUPPORT	125	APPENDIX D VHF CHANNELS.....	146
22.1 Raymarine technical support and servicing	126	APPENDIX E PHONETIC ALPHABET	162
22.2 Viewing product information.....	127	APPENDIX F PROWORDS.....	163
22.3 Learning resources	127		
CHAPTER 23 TECHNICAL SPECIFICATION	128		
23.1 Technical specification — Base station	129		
23.2 Technical specification — Wired handset (Raymic)	131		
23.3 Technical specification — Wired (Passive) speaker.....	131		
23.4 Technical specification — Wireless hub	131		
23.5 Technical specification — Wireless handset.....	132		
23.6 Technical specification — Wireless handset charging holster.....	132		
23.7 Technical specification — Wireless (Active) speaker.....	132		
23.8 Radio usage	133		

CHAPTER 1: IMPORTANT INFORMATION

Safety warnings

Certified Installation

Raymarine recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Contact your Raymarine dealer for further details.



Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury or damage to your vessel. It may also cause poor product performance or invalidate the product warranty.
- Raymarine highly recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Register your warranty on the Raymarine website: www.raymarine.com/warranty



Warning: Switch off power supply

Ensure that the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed to do so in this document.



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



Warning: Maximum Permissible Exposure (MPE)

For optimal radio performance and minimal human exposure to Radio Frequency (RF) electromagnetic energy, you must ensure that the **antenna** is:

- connected to the radio before transmitting
- located where it will be away from people
- located at least 2.21 meters (7.25 ft) from the radio's main unit.

Failure to observe these guidelines may expose those within the Maximum Permissible Exposure (MPE) radius to RF radiation absorption that exceeds the FCC MPE limit.

It is the radio operator's responsibility to ensure that no person comes within this MPE radius.

Product warnings



Warning: 12 Volt dc only

This product must **ONLY** be connected to a 12 V dc power source.



Warning: Chassis grounding

Do NOT ground this product using the chassis ground terminal.

Grounding this product to a vessel's RF ground may cause galvanic corrosion.



Warning: VHF Antenna isolation

To prevent galvanic corrosion your VHF antenna must be isolated from any vessel metalwork using a suitable, insulated (e.g. plastic) mounting bracket.



Warning: Positive ground systems

Do NOT connect this unit to a system which has positive grounding.



Warning: FCC Warning (Part 15.21)

Changes or modifications to this equipment not expressly approved in writing by Raymarine UK Ltd could violate compliance with FCC rules and void the user's authority to operate the equipment.

Caution: Perform regular radio checks

Perform regular radio checks when using your vessel, as recommended in radio training and certification schemes and radio equipment rules of use.

Caution: Ensure proper radio use

Under no circumstances should a DSC distress alert be sent from your radio for test purposes. Such action is a violation of rules of use for radio equipment, and can result in heavy fines.

Regulatory notices

Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Interference Statement (Part 15.105 (b))

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

IEEE and ICNIRP exposure limits

This radio complies with IEEE and ICNIRP exposure limits for uncontrolled RF exposure environments.

The radio operates up to a duty cycle of 50%, and is authorized by FCC in the United States of America, and ISED in Canada.

Innovation, Science and Economic Development Canada (ISED)

This device complies with License-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003(B) / NMB-003(B).

Innovation, Sciences et Développement économique Canada (Français)

Cet appareil est conforme aux normes d'exemption de licence RSS.

Son fonctionnement est soumis aux deux conditions suivantes:

1. cet appareil ne doit pas causer d'interférence, et
2. cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Licensing

Prior to using this product for the first time, please check your national requirements for both operator and equipment licensing.

Important:

It is your responsibility to determine whether a license is required in your area before operating this equipment.

In many regions, the following authorizations are required from the relevant regulatory authority:

1. Ship Station VHF license;
2. Operator's license;
3. MMSI (Maritime Mobile Service Identity) number.

Licenses are typically issued by the National Regulatory Authorities (NRAs) in each country.

For a list of license and MMSI issuing authorities, refer to:

[p.143 – Licensing and MMSI issuing authorities](#)

Important:

It may also be necessary to obtain an Operator's license before an MMSI number can be obtained for your vessel.

The DSC functions of the radio will not work without a valid MMSI number. For more information, refer to:

[p.29 – Obtain MMSI \(Maritime Mobile Service Identity\) number](#)

Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated water ingress protection standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is not installed correctly or subjected to high-pressure washing. Raymarine will not warrant products subjected to high-pressure washing.

Disclaimer

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Third-party hardware, such as converters, adapters, routers, switches, Access Points etc., provided by third parties, may be made available directly to you by other companies or individuals under separate terms and conditions, including separate fees and charges. Raymarine UK Ltd or its affiliates have not tested or screened the third-party hardware.

Raymarine has no control over, and is not responsible for:

- (a) the content and operation of such third-party hardware; or
- (b) the privacy or other practices of such third-party hardware.

The fact that Raymarine's documentation may make reference to such third-party hardware does not indicate any approval or endorsement of any such third-party hardware. Raymarine may reference such third-party hardware only as a convenience.

THIS INFORMATION IS MADE AVAILABLE BY Raymarine ON THE BASIS THAT YOU EXCLUDE TO THE FULLEST EXTENT LAWFULLY PERMITTED ALL LIABILITY WHATSOEVER FOR ANY LOSS OR DAMAGE HOWSOEVER ARISING OUT OF THE USE OF THIS INFORMATION OR RELIANCE UPON THIS INFORMATION.



Raymarine does not exclude **Raymarine's** liability (if any) to you for personal injury or death resulting from **Raymarine UK Ltd** negligence, for fraud or for any matter which it would be illegal to exclude or to attempt to exclude.

Declaration of Conformity

Declaration of Conformity for product sold into EU member state regions.

Raymarine UK Ltd declares that the radio equipment type products listed below are in conformity with the relevant sections of the listed designated standards and / or other normative documents:

- Ray90 DSC VHF Radio, part number: E70492
- Ray91, DSC VHF Radio, part number: E70493

Region	Standard	Mark
UK	EMC Regulations 2016	
EU	Radio Equipment Directive 2014/53/EU	

The original Declaration of Conformity certificate may be viewed on the relevant product page at www.bit.ly/rayvhfseries3-docs

PSTI Compliance

For products sold into the United Kingdom (UK), use the following link to obtain the product's Statement of Compliance with the *Product Security and Telecommunications Infrastructure* (PSTI) Regulations:

Visit the following web address and enter the product's model name or number (SKU) into the provided search field:

- www.bit.ly/rym-sec-com

Product disposal

Dispose of this product in accordance with the WEEE Directive.

The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment which contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly.



Equipment marked with the crossed-out wheeled bin symbol indicates that the equipment should not be disposed of in unsorted household waste. Local authorities in many regions have established collection schemes under which residents can dispose of waste electrical and electronic equipment at a recycling center or other collection point. For more information about suitable collection points for waste electrical and electronic equipment in your region, refer to the Raymarine website: <https://bit.ly/rym-recycling>

Warranty policy and registration

Visit the Raymarine website to **read the latest warranty policy**, and **register** your product's warranty online: www.bit.ly/rym-warranty

It is important that you register your product to receive full warranty benefits. Your product package includes a barcode label indicating the serial number of the unit. This serial number is also provided on a label affixed to the product itself. You will need this serial number when registering your product online.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website to ensure you have the most up-to-date version(s) of the documentation for your product: www.docs.raymarine.com

Publication copyright

Copyright ©2025 Raymarine UK Ltd. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Raymarine UK Ltd.

CHAPTER 2: DOCUMENT AND PRODUCT INFORMATION

CHAPTER CONTENTS

- 2.1 Applicable products — page 16
- 2.2 Applicable software version — page 16
- 2.3 Product documentation — page 16
- 2.4 Printed (hardcopy) product manuals — page 16
- 2.5 Document illustrations — page 17
- 2.6 Document conventions — page 17

2.1 Applicable products

This document is applicable to the following products:

Product	Features
Ray90 (E70492)	<ul style="list-style-type: none">• Supplied with a wired handset and speaker.
Ray91 (E70493)	<ul style="list-style-type: none">• Includes built-in AIS receiver.• Supplied with a wired handset and speaker.

2.2 Applicable software version

Product software is updated regularly to add new features and improve existing functionality.

This document has been updated to reflect the following Ray90 / 91 software version:

Applicable software version:
v1.61a

Check the website for the latest software:

Ray90 / 91 software download link
https://bit.ly/rayvhfseries3-download

2.3 Product documentation

The following documentation is applicable to your product:

Documentation number	Description
81377	Ray90 / Ray91 installation and operation instructions (this document)
87329	Ray90 / Ray91 mounting template
87358	Wired / Wireless speaker mounting template
87331	Wireless hub mounting template
87357	Wireless handset charging holster mounting template
87359	Wired handset holster mounting template

All documents are available to download in PDF format from the Raymarine® website: www.raymarine.com/manuals

SeaTalk NG documentation

Document	Description
81300	SeaTalk NG reference manual: Planning and connection of systems based around the SeaTalk NG network.
87121	SeaTalk 1 to SeaTalk NG converter installation instructions: Installation and connection of the SeaTalk 1 to SeaTalk NG converter.


2.4 Printed (hardcopy) product manuals

All applicable user documentation for your product is available on our website to view or download free-of-charge. If you would prefer a **printed** (hardcopy) product manual, a Print Shop service is available, enabling you to purchase a high-quality, professionally-printed manual for your product, delivered directly to your door.

Printed manuals are ideal for keeping onboard your vessel, as a useful source of reference whenever you need assistance with your product.

Printed manuals are provided by a third-party (**Lulu Press**).

To order a printed manual, use the Lulu Press website link provided below. The manual will then be printed and delivered to the address you specify. Once an order is placed, it typically takes Lulu Press approximately 5 to 10 working days to print and deliver a printed manual.

Supplier	How to purchase
	<ol style="list-style-type: none">1. Click the following link.2. In the displayed search field, enter the required document number, e.g. <i>81406</i>
	www.bit.ly/rym_printshop

Note:

- Accepted methods of payment for printed manuals are credit cards and PayPal.
- Printed manuals can be shipped worldwide.

2.5 Document illustrations

Your product and if applicable, its user interface may differ slightly from that shown in the illustrations in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

2.6 Document conventions

The following conventions are used throughout this document.

Formatting of user interface menus and settings.

References to menus, setting options and physical buttons are formatted using square brackets [].

Examples:

- “You can select your desired cartography from the *[Cartography selection]* menu.”
- “MFD apps are accessed from the *[Homescreen]*.”
- “Press the *[Home]* button to return to the Homescreen.”

Procedures for performing specific tasks using the product’s user interface.

The term “**Select**” is used to refer to the action of:

- Touchscreen control — using your finger to select a menu option or item on the screen.
- Physical buttons — Highlighting an item using the navigational controls and confirming the selection by pressing the *[OK]* button.

Examples:

- “Select *[Ok]* to confirm your selection.”
- “Select *[Set-up]*”

Procedures for navigating menu hierarchies.

Menu hierarchies are used in this document to provide a quick summary on how to access a particular function or menu option.

Examples:

- “The internal sonar module is turned off from the Fishfinder app menu: *[Menu > Set-up > Sounder Set-up > Internal Sounder]*.”
- “The internal GPS can be switched off from the GPS settings menu: *[Homescreen > Status area > Satellites > Settings > Internal GPS]*.”


CHAPTER 3: PRODUCT AND SYSTEM OVERVIEW

CHAPTER CONTENTS

- 3.1 Product overview — page 19
- 3.2 Required additional components — page 19
- 3.3 Optional wired components — page 19
- 3.4 Optional wireless components — page 20
- 3.5 Compatible MFDs / Chartplotters — page 20
- 3.6 Incompatible Raymarine® MFDs / Chartplotters — page 21
- 3.7 Software updates — page 21

3.1 Product overview

The Ray90 and Ray91 are 12 V dc, Class D Digital Selective Calling (DSC) VHF radios. DSC enables you to make and receive calls to a specific radio, and to transmit and receive position information to and from a selected radio. DSC also allows transmission of a distress alert, to all radios within range, at the touch of a button. Once a DSC request is sent and acknowledged voice communication is carried out on the channel chosen by the caller. The radio can transmit and receive on all available US, Canadian, International and Private marine VHF channels.

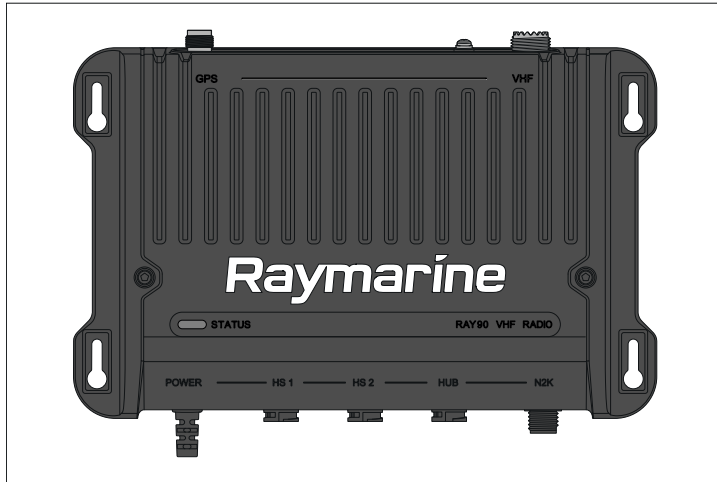

The Ray90 includes the following features:

- Built-in GNSS (GPS) receiver requiring an external antenna.
- Up to 2 fully functioning wired handset stations with wired speaker connections.
- Connect to a wireless hub to add up to 3 fully functioning wireless handset stations with wireless speaker connections.
- With an optional loud hailer connected the radio can also be used as a fog horn or loud public address (PA) system.

The Ray91 includes the same features as the Ray90 and also has a built-in AIS receiver.

3.2 Required additional components

Your product requires a VHF antenna to function as a radio. If you intend to use the radio's internal GNSS (GPS) receiver then you will also require a GNSS (GPS) passive antenna to be connected.

Part number	Description
N / A	Third-party 50 Ω VHF antenna
A80288	Passive GNSS (GPS) antenna

3.3 Optional wired components

The following optional components can be purchased to create a second wired handset station.

Part number	Description
A80289	Wired handset

Note:

- To be compatible with the Ray90 / Ray91, the Wired handset must be running software version V1.23 or greater.
- A passive speaker can be connected to the handset using adaptor cable A80297.

A80542	Wired speaker (passive)
---------------	-------------------------

Extension cables

The following extension cables are available:

Part number	Description
A80291	Wired handset extension cable 5 m (16.4 ft)
A80292	Wired handset extension cable 10 m (32.8 ft)
A80290	Wired handset extension cable 15 m (49.2 ft)
A80297	Wired handset adaptor cable with male RCA audio (400 mm 1.3 ft)

3.4 Optional wireless components

Your radio supports connection of wireless handsets and speakers via a wireless hub, enabling creation of additional fully functional, wireless handset stations.

The following wireless components are available:

Part number	Component	Description
A80540	Wireless hub	Allows connection of up to 3 Wireless handsets.
A80544	Wireless handset (including holster)	Wireless handset with inductive charging and wireless speaker connection.
A80543	Wireless speaker (Active)	Connects to the Wireless handset.

3.5 Compatible MFDs / Chartplotters

Important compatibility information.

- This product is compatible with third-party MFDs / Chartplotters. For more information, refer to the device's instruction manual.
- This product is compatible with the following Raymarine® MFDs / Chartplotters:

Compatible Raymarine® MFDs	Required MFD software version
Axiom 2 Series: Axiom 2 Pro Axiom 2 XL	<ul style="list-style-type: none"> • Axiom 2 Pro: <i>LightHouse 4, v4.3.54 or later</i> • Axiom 2 XL: <i>LightHouse 4, v4.4 or later</i>
Axiom Series: Axiom, Axiom+, Axiom Pro, Axiom XL	<ul style="list-style-type: none"> • LightHouse 3, v3.0 or later • LightHouse 4, v4.1 or later

Compatible Raymarine® MFDs	Required MFD software version
eS Series: eS75, eS77, eS78, eS97, eS98, eS127, eS128, eS165	<ul style="list-style-type: none"> • LightHouse 2, Release 12 or later • LightHouse 3, versions 3.0 to 3.12
gS Series: gS95, gS125, gS165, gS195	<ul style="list-style-type: none"> • LightHouse 2, Release 12 or later • LightHouse 3, versions 3.0 to 3.12
“New” a Series: a65, a67, a68, a75, a77, a78, a95, a95, a97, a98, a125, a127, a128	<ul style="list-style-type: none"> • LightHouse 2, Release 12 or later
“New” c Series: c95, c97, c125, c127	<ul style="list-style-type: none"> • LightHouse 2, Release 12 or later
“New” e Series: e7, e7D, e95, e97, e125, e127, e165	<ul style="list-style-type: none"> • LightHouse 2, Release 12 or later
E-Series Widescreen: E90W, E120W, E140W	<ul style="list-style-type: none"> • v2.65
C-Series Widescreen: C90W, C120W, C140W	<ul style="list-style-type: none"> • v2.35
“Classic” E-Series: E80, E120	<ul style="list-style-type: none"> • v5.69
G-Series: GPM400	<ul style="list-style-type: none"> • v4.66

Note:

To obtain the latest software for your Raymarine products, visit:
www.raymarine.com/software

3.6 Incompatible Raymarine® MFDs / Chartplotters

This product is NOT compatible with the following Raymarine® MFDs / Chartplotters:

Incompatible Raymarine MFD Series	Required MFD software version
“Classic” C-Series C70, C80, C120	• Not compatible
“Classic” A-Series A50, A50D, A57D, A60, A65, A70, A70D	• Not compatible

3.7 Software updates

Raymarine® periodically releases software updates for its products. These updates provide new features, current feature enhancements and bug fixes which improves product performance and usability.

Check the Raymarine® website regularly to ensure you have the latest software for your products: www.raymarine.com/software

The software update process requires a compatible MFD, powered by LightHouse™ 2 release 13.37 or above, or LightHouse™ 3 version LH3.2 or above.

- Please refer to the operation instructions for your MFD / operating system version for details on how to perform the software update, alternatively refer to the instructions provided on the software download area for your product on the Raymarine website: www.raymarine.com/software.
- The MFD used to perform the software update must be the designated Data master and be connected / networked to the product being updated.
- If you are in any doubt as to the correct procedure for updating your product software, please refer to your local authorized dealer or Raymarine® technical support for assistance.

Caution: Installing software updates

- The software update process is carried out at your own risk. Before initiating the update process ensure you have backed up any important files.
- Ensure that the product(s) has a reliable power supply and that the update process is not interrupted.
- Damage caused by an incomplete update is not covered by Raymarine warranty.
- By downloading the software update package, you agree to these terms.

Checking software versions

You can check the software version of your radio and connected components.

From the Homescreen:

1. Select [*Menu > Set-up > Maintenance > About this unit*].
2. Scroll down.

Software versions of connected components are displayed.

Ray90/Ray91 software

The following Ray90/Ray91 components include software that can be updated:

- Base station
- Wired handsets
- Wireless hub
- Wireless handsets

Performing the software update process using a compatible MFD will update the software for all connected components.

Note:

- Prior to performing the software update process, ensure that all components are powered on and that any Wireless handsets are plugged into their charging holsters.
- Wired handsets that contain software versions below VH1.32 must be placed into software update mode and updated separately from the Base station.

Performing software updates — Raymic handset

If your wired handset is running software version v1.40 or above, the handset will be updated automatically at the same time as the Base station. If your handset is running a software version earlier than v1.40, your Base station and handset must be updated separately.

- The radio must be connected to a compatible MFD over SeaTalk NG.
 - The Data master MFD must be used to perform the software update.
 - Once you have updated your Base station software, follow the steps below to update your handset.
1. Ensure a memory card that contains the necessary software files is inserted into the card reader of your MFD.
 2. With the Radio's Base station powered on, turn off the Raymic Handset by pressing the *[Power]* button located on the top of the Handset.
 3. Press and hold the *[Distress]* and *[PTT]* buttons on the Handset.
 4. Press the Handset *[Power]* button for one second, until the backlight turns on, and then release all 3 buttons.
The Handset is now in update mode.
 5. Now check for software updates using your MFD:
 - **LightHouse 2** — From the Homescreen, select: *[Set-up > Maintenance > Check Card for Updates]*.
 - **LightHouse 3** — From the Homescreen, select: *[Settings > Update software > Check SD card]*.
 - **LightHouse 4** — From the Homescreen, select: *[Settings > Update software > Check SD card]*.
 6. Select your Radio and select *[Update]*.

(The LCD backlight will flash when the update is in progress.)

7. When the update is complete, check your radio's software version.
8. Remove the memory card from the card reader.

CHAPTER 4: LICENSING

CHAPTER CONTENTS

- 4.1 VDES, IRR 2020 and BIPT Requirements — page 24
- 4.2 Licensing — page 25
- 4.3 Obtain MMSI (Maritime Mobile Service Identity) number — page 29
- 4.4 Automatic Transmitter Identification System (ATIS) — page 30

4.1 VDES, IRR 2020 and BIPT Requirements

Marine VHF radio operators and owners need to be aware of the following regulations restricting the use of certain VHF channels / frequencies in certain regions, from: 1 January 2024.

Note:

- **VEDS** (*VHF Digital Data Exchange System*)
- **IRR 2020** (*International Radio Regulations*)
- **BIPT** (*Belgian Institute for Postal Services and Telecommunications*)

VDES Overview

VDES refers to a (relatively) recent development in VHF communications, which allows certain VHF channels to be used for the sending and receiving of digital data, instead of voice communications. As VDES combines multiple existing VHF channels, a number of changes are required to existing VHF channels, in order to prevent interference. However, while the changes implemented in the software update described in this document make your Class D VHF radio VDES-compliant (in the **Europe CEPT** band), the radio does not gain any new VDES functionality as a result of this update.

In terms of VDES implementation, in 2015, the ITU World Radio Communication Conference (WRC-15) decided to re-allocate VHF channels which had previously been in use for analogue voice communications, for VDES. At this time, only European CEPT regions have agreed to implement this change, which is **mandatory from 1 January 2024**, following the *CEPT ECC Decision (19)03*. For more information, refer to: <https://docdb.cept.org/download/1452>

VDES applicability

The VDES implementation has mixed applicability, **depending on the region in which your Radio operator license applies:**

Region	VDES Applicability	Frequency band to use
European CEPT countries	Anyone using a VHF radio in these European seaways MUST adhere to the channel usage regulations described below, by 1 January 2024 .	EUR (Europe CEPT)
USA & Canada	NOT adopting VDES at this time. Anyone using a VHF radio exclusively in these regions only does not need to comply with the VDES, IRR 2020, or BIPT regulations, at this time.	<ul style="list-style-type: none"> • USA • CAN (Canada)
Other countries (incl. UK)	Not yet formally adopted VDES. VHF radio users in these regions should follow developments published on the respective Government websites.	INT (International)

Note:

To ensure your VHF radio is compliant to these requirements, new channel configurations are required, available via a software update:

- **Ray53/63/73:** *v2.06 (app) / v2.27 (boot)*
- **Ray90/91:** *v1.59 (app) / v1.09 (boot)*

To obtain the new software, visit the Raymarine® website: <https://www.raymarine.com/en-us/support/software-updates-and-documents>

Important:

If your VHF Radio is currently configured in **MARCOM-C** mode, the software in your Radio **MUST** be updated by a Raymarine Service Dealer.

This is because any Radio in MARCOM-C mode, once updated to the latest software, will use channels in the INT (International) Channel set, in a non-compliant configuration.

VDES and IRR 2020 requirements

To comply with the VDES & IRR 2020 Regulations, **a software update will provide a new channel configuration:**

Channel(s)	New Configuration
24, 25, 26, 84, 85, 86	<ul style="list-style-type: none"> These channels are NOT selectable in the EUR frequency band. These channels must NOT be used in the INT frequency band, in regions that have adopted VDES.
27, 28	<ul style="list-style-type: none"> These channels are disabled in the INT and EUR frequency bands (all ATIS modes).
1027, 1028	<ul style="list-style-type: none"> These channels have been added, for use in the INT and EUR frequency bands.

BIPT Requirements (Belgium only)

To comply with the latest BIPT Regulations, **a software update will provide a new channel configuration:**

Channel(s)	New Configuration
96	<ul style="list-style-type: none"> This private channel is disabled.
(Private channel) 31 (“Holland”)	<ul style="list-style-type: none"> This channel has been renamed “MARINA”, and added as Belgium Private Channel in the INT and EUR frequency bands, and will also remain private in Holland.

Note:

If your VHF radio is set to the EUR (*Europe CEPT*) Frequency band and ATIS is set to *ON*, you cannot change to the INT (*International*) Frequency band until ATIS is set to *OFF*.

4.2 Licensing

Prior to using this product for the first time, please check your national requirements for both operator and equipment licensing.

Important:

It is your responsibility to determine whether a license is required in your area before operating this equipment.

In many regions, the following authorizations are required from the relevant regulatory authority:

1. Ship Station VHF license;
2. Operator’s license;
3. MMSI (Maritime Mobile Service Identity) number.

Licenses are typically issued by the National Regulatory Authorities (NRAs) in each country.

For a list of license and MMSI issuing authorities, refer to:

[p.143 – Licensing and MMSI issuing authorities](#)

Important:

It may also be necessary to obtain an Operator’s license before an MMSI number can be obtained for your vessel. The DSC functions of the radio will not work without a valid MMSI number. For more information, refer to:

[p.29 – Obtain MMSI \(Maritime Mobile Service Identity\) number](#)

USA licensing requirements

FCC station license requirement

An FCC Ship Radio Station License and Call Sign are not required for most recreational vessels travelling in US waters. However, you must obtain a license if your vessel travels to foreign ports.

Ships that use MF/HF single side-band radio, satellite communications, or telegraphy must be licensed by the FCC.

For more information, refer to the FCC website (**Licensing** tab): <https://www.fcc.gov/bureau-divisions/mobility-division/ship-radio-stations#block-menu-block-4>

Canada licensing requirements

You do not need a license to operate this product within the sovereign waters of Canada or the United States of America (USA).

You will need a license to operate this radio outside of Canada or the USA. To obtain licensing information, visit the Innovation, Science and Economic Development Canada (ISED) (previously known as Industry Canada) website: <https://www.tc.gc.ca/eng/marinesafety/oep-navigation-radiocomms-faqs-1489.htm>.

Europe licensing requirements

Before the first use of a VHF radio in countries in Europe, the following authorizations MUST be obtained from the relevant regulatory authority.

- **Ship Station VHF license** — this authorizes the use of two-way VHF communications with other vessels, aircraft and shore stations. This license is applicable to a specific vessel, and is usually valid for the lifetime of the vessel. If you ever sell your vessel in the future, you will need to arrange for the transfer of the Ship Station VHF license to the new vessel owner.
- **Operator’s license** — this authorizes an individual operator to conduct two-way VHF communications with other vessels, aircraft and shore stations. For most non-commercial operators, this license is usually referred to as a “Restricted Radiotelephone Operator Permit”, or “Restricted Certificate of Competence in Radiotelephone”.
- **MMSI (Maritime Mobile Service Identity) number** — a 9 digit number which is sent over a radio frequency channel in order to identify the originating vessel/station. If your vessel already has an MMSI number, the same MMSI number must be used to program your VHF radio. In Europe, the MMSI number can be programmed into the unit by the user. **In some regions, you must obtain a radio operator’s licence before an MMSI number will be issued.** In these areas, you can request an MMSI number from the same authority that issues the Operator’s license or Ship Station VHF licence.

It is also the radio operator’s responsibility to be familiar with all relevant rules and regulations related to radio use. In regions in which a VHF transceiver is compulsory, a current copy of the applicable government rules and regulations must be accessible to the operator.

The following table lists the relevant issuing authority for licences in each region, along with a link to the relevant website. Many authorities allow you to apply for a license online.

Country		Regulatory authority	Website
Austria	AT	Austrian Regulatory Authority for Broadcasting and Telecommunications	http://www.rtr.at
Belgium	BE	Belgian Institute for Postal services and Telecommunications (BIPT)	http://www.bipt.be
Bulgaria	BG	Communications Regulation Commission	http://www.crc.bg
Croatia	HR	Croatian Post and Electronic Communications Agency	http://www.hakom.hr/default.aspx?id=7
Cyprus	CY	Office of Electronic Communications & Postal Regulation	http://www.ocepr.org.cy/nqcontent.cfm?a_id=767&tt=ocepr&lang=gr
Czech Republic	CZ	The Czech Telecommunication Office	http://www.ctu.eu/main.php?pageid=178
Denmark	DK	Danish Energy Agency	https://ens.dk/en
Estonia	EE	Estonian Competition Authority	http://www.konkurentsiamet.ee/?lang=en

Country		Regulatory authority	Website
Finland	FI	Finnish Communications Regulatory Authority	http://www.ficora.fi/en
France	FR	Autorité de Régulation des Communications Électroniques et des Postes	http://www.arcep.fr
Germany	DE	Bundesnetzagentur	http://www.bundesnetzagentur.de
Greece	EL	Hellenic Telecommunications and Post Commission	http://www.eett.gr/opencms/opencms/EETT_EN/index.html
Hungary	HU	National Media and Infocommunication Authority	http://www.nmhh.hu
Iceland	IS	Post and Telecom Administration	http://www.pfs.is/default.aspx?cat_id=101
Ireland	IE	Commission for Communications Regulation	http://www.comreg.ie
Italy	IT	Autorità per le Garanzie nelle Comunicazioni	http://www.agcom.it
Lichtenstein	LI	Office for Communications	http://www.llv.li/amtstellen/llv-ak-english-page.htm
Lithuania	LT	Communications Regulatory Authority	http://www.rtt.lt/en/home.html
Luxembourg	LU	Institut luxembourgeois de régulation	http://www.ilr.public.lu
Latvia	LV	Elektronisko sakaru direkcija	https://www.vases.lv/lv/content/juras-sakaru-atlaujas

Country		Regulatory authority	Website
Malta	MT	Malta Communications Authority	http://www.mca.org.mt
Holland	NL	Autoriteit Consument & Markt	https://www.acm.nl/nl
Norway	NO	Norwegian Communications Authority	http://www.nkom.no
Poland	PL	Prezes Urzędu Komunikacji Elektronicznej	http://www.uke.gov.pl
Portugal	PT	Autoridade Nacional de Comunicações	https://www.anacom.pt
Romania	RO	National Authority for Management and Regulation in Communications of Romania	http://www.ancom.org.ro/en
Slovenia	SI	Agency for communication networks and services of the Republic of Slovenia	http://www.akos-rs.si/akos-ang
Slovakia	SK	Telecommunications Regulatory Authority of the Slovak Republic	http://www.teleoff.gov.sk/index.php?ID=9
Spain	ES	Comisión Nacional de los Mercados y la Competencia	https://www.cnmcm.es/en
Sweden	SE	Swedish Post and Telecom Authority	http://www.pts.se
Switzerland	CH	Office fédéral de la communication	http://www.bakom.admin.ch/themen/frequenzen/00689/01563/index.html?lang=fr

Country	Regulatory authority	Website
Turkey	TR Information And Communication Technologies Authority	http://eng.btk.gov.tr
United Kingdom and Northern Ireland	UK(NI) OFCOM	http://www.ofcom.org.uk

Rest of World licensing requirements

In many regions, the following authorizations are required from the relevant regulatory authority:

1. Ship Station VHF license;
2. Operator's license;
3. MMSI (Maritime Mobile Service Identity) number.

Licenses are typically issued by the National Regulatory Authorities (NRAs) in each country.

Important:

It is your responsibility to determine whether a license is required in your area before operating this equipment.

Additional information — Ray90 / Ray91

The following additional information is required for completing a license application in Canada and the USA.

Additional information	
ISED ID:	4069B-RAY901D
FCC ID	PJ5-RAY901
FCC Type accepted	Parts 2*, 15 and 80
Output power	1 watt (low) and 25 watt (high)
Modulation	FM
Frequency range	155.500 MHz to 163.275 MHz

Note:

* Please be aware that the FCC does not make certificates available for Part 2 Type Approval.

Additional information - wireless handset

Additional information

ISED ID:	4069B-RAY90W
FCC ID:	PJ5-RAY90W
FCC type accepted:	(*) Parts, 2, 15 and 80
Output power:	1. 19 dBm 2. 4dBm
Modulation:	1. MIMO-OFDM/DSSS/CCK 2. GFSK
Frequency:	1. 2412MHz to 2472MHz 2. 2412MHz to 2472MHz

Note:

- ISED previously IC (Industry Canada).
- (*) The FCC does not make available certificates for Part 2 Type Approval.

Additional information - wireless charging holster

Additional information

ISED ID:	4069B-RAYCGR
FCC ID:	PJ5-RAYCGR
FCC type accepted:	(*) Parts 2, 15 and 80
Output power:	5 watt

Additional information	
Modulation:	QI
Frequency:	110KHz to 205KHz

Note:

- ISED previously IC (Industry Canada).
- * The FCC does not make available certificates for Part 2 Type Approval.

Additional information - wireless hub

Additional information	
ISED ID:	4069B–RAYHUB
FCC ID:	PJ5–RAYHUB
FCC type accepted:	(*) Parts 2, 15 and 80
Output power:	19 dbm
Modulation:	MIMO-OFDM/DSSS/CCK
Frequency:	2412-2472MHz

Note:

- ISED previously IC (Industry Canada).
- (*) The FCC does not make available certificates for Part 2 Type Approval.

Additional information - wireless speaker

Additional information	
ISED ID:	4069B–RAYSPK
FCC ID:	PJ5–RAYSPK
FCC type accepted:	(*) Parts 2, 15 and 80

Additional information	
Output power:	4 dbm
Modulation:	GFSK
Frequency:	2412MHz to 2472MHz

Note:

- ISED previously IC (Industry Canada).
- (*) The FCC does not make available certificates for Part 2 Type Approval.

4.3 Obtain MMSI (Maritime Mobile Service Identity) number

Before commencing installation ensure you have obtained an MMSI number for your vessel.

An MMSI is a 9 digit number which is sent over a radio frequency channel in order to identify the originating vessel/station. If your vessel already has an MMSI number (used for a VHF DSC radio) then the same MMSI number must be used to program your product.

Note:
If an MMSI number is not entered, the DSC functionality of your radio will be disabled.

In the United States of America, the MMSI and Static Data must be entered only by a Raymarine® dealer or other appropriately qualified installer of marine communications equipment on board vessels. The user is NOT authorized to do this.

In some areas, a radio operator licence is required before an MMSI number will be issued. You can request an MMSI number from same agency that issues radio or Ship Radio licences in your area.

In Europe and other parts of the world outside of the United States of America, the MMSI and Static data can be set up by the user.

For further details, refer to the relevant Telecommunications Regulatory Body for your area.

For a list of issuing authorities for licences and MMSI numbers in each region, refer to: [p.143 — Licensing and MMSI issuing authorities](#)



Warning: MMSI entry

You can only enter a MMSI number once, if you enter the number incorrectly or need to change your MMSI number, the unit will require re-programming by an authorized Raymarine dealer.

4.4 Automatic Transmitter Identification System (ATIS)

Your product includes ATIS functionality for use on the inland waterways of contracting governments of the *“Regional Arrangement on the Radiocommunication Service for Inland Waterways”* — also known as *“RAINWAT”*.

ATIS adds data at the end of radio transmissions that identifies your station. ATIS operation can be turned on or off as needed via the radio’s menu.

An ATIS ID can be obtained from the same agency that issues radio operator licenses in your area.

Your ATIS ID should be programmed into your product using the instructions provided.

Note:

- Contracting RAINWAT countries include: Austria, Belgium, Bulgaria, Croatia, the Czech Republic, France, Germany, Hungary, Luxembourg, Moldova, Montenegro, the Netherlands, Poland, Romania, Serbia, the Slovak Republic and Switzerland.
- When ATIS is enabled, certain programming steps have been implemented to protect the integrity of the RAINWAT agreement, including the blocking of DSC functions when ATIS is enabled.
- A unique ATIS ID must be entered before ATIS mode can be enabled.
- The ATIS ID can only be entered when the **EUR** channel set is selected.
- **If your VHF radio is set to the EUR (*Europe CEPT*) Frequency band and ATIS is set to *ON*, you cannot change to the INT (*International*) Frequency band until ATIS is set to *OFF*.**


CHAPTER 5: PARTS SUPPLIED

CHAPTER CONTENTS

- 5.1 Parts supplied — page 32

5.1 Parts supplied

The following parts are supplied with your product. Please ensure your box contents are correct before proceeding with the installation.

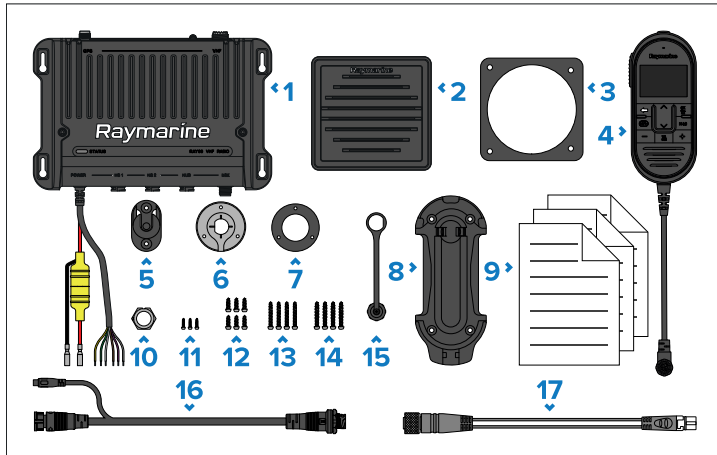

Description	
1	Ray90 / Ray91 VHF DSC Radio base station (including fitted power and data cable).
2	Passive speaker and bezel.
3	Passive speaker mounting gasket.
4	Wired handset.
5	Handset hook plate.
6	Through-panel cable mounting plate.
7	Through-panel cable mounting plate gasket.
8	Wired handset holster.
9	Documentation.
10	Through-panel cable mounting nut.
11	3 x Through-panel cable mounting plate screws.

Description	
12	6 x M4x12 screws (for Handset holster and hook plate mounting).
13	4 x M4x25 screws (for wired speaker mounting).
14	4 x M4x25 screws (for base station mounting).
15	Wired handset adaptor cable with RCA Audio, 400 mm (1.3 ft).
16	DeviceNet to SeaTalk NG adaptor cable, 1 m (3.28 ft).
17	Through-panel cable mounting dust cap.


CHAPTER 6: PRODUCT DIMENSIONS

CHAPTER CONTENTS

- 6.1 Product dimensions — Base station — page 34
- 6.2 Product dimensions — speakers — page 34
- 6.3 Product dimensions — Wired handset (Raymic) — page 35
- 6.4 Product dimensions — Wireless hub — page 35
- 6.5 Product dimensions — Wireless handset and holster — page 36

6.1 Product dimensions — Base station

The Base station dimensions are listed below.

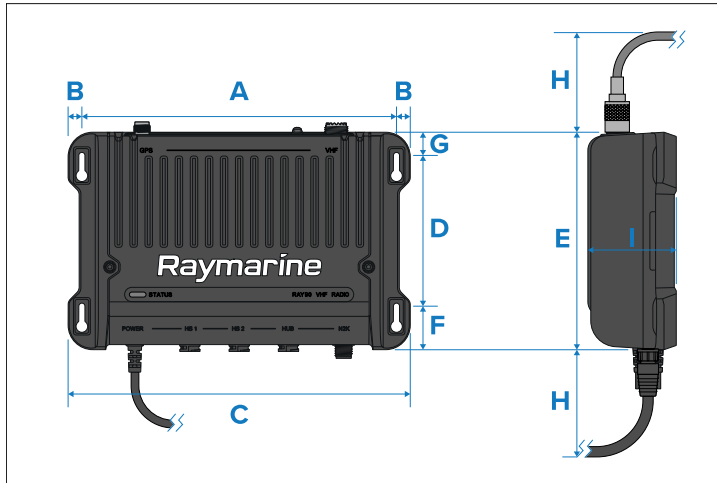


Dimension	
A	217.00 mm (8.54 in)
B	9.50 mm (0.37 in)
C	235.95 mm (9.29 in)
D	104.00 mm (4.09 in)
E	149.95 mm (5.91 in)
F	30.00 mm (1.18 in)
G	14.00 mm (0.55 in)
H	90.00 mm (3.54 in)
I	61.00 mm (2.40 in)

The Base station includes a fitted power cable and data cable. The power cable length is 1.2 m (3.94 ft), and the Data cable length is 420 mm (1.38 ft).

6.2 Product dimensions — speakers

The dimensions for the Passive and Active speakers are shown below.

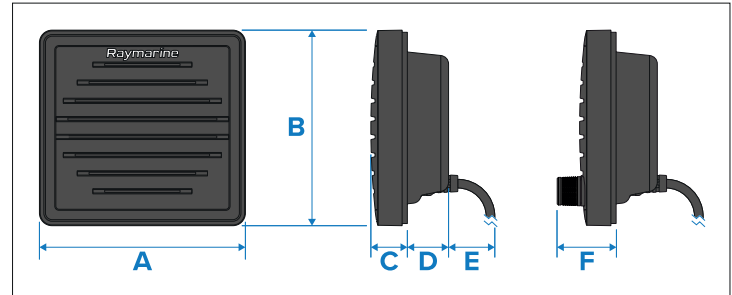


Dimension	
A	118.50 mm (4.67 in)
B	112.5 mm (4.43 in)
C	18.30 mm (0.72 in)
D	26.40 mm (1.04 in)
E	25.00 mm (0.98 in)
F	30.60 mm (1.20 in)

Note:

- The Passive speaker includes a fitted 2 m (6.56 ft) audio cable terminated with a male RCA plug.
- The Active speaker includes a fitted 2 m (6.56 ft) power cable terminated with spade connectors.

6.3 Product dimensions — Wired handset (Raymic)

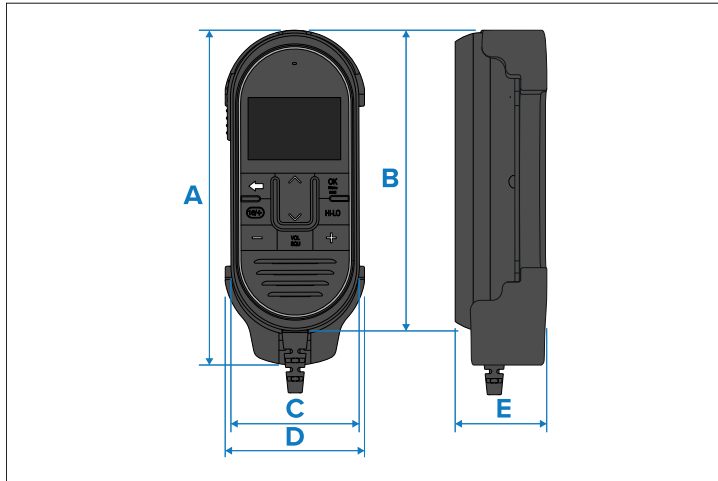


Dimension	
A	167.34 mm (6.59 in)
B	151.00 mm (5.94 in)
C	66.90 mm (2.63 in)
D	70.00 mm (2.76 in)
E	46.70 mm (1.84 in)

Note:

The Handset's fitted, coiled lead can be extended to approximately 1 meter (3.3 ft.). Ensure sufficient space is available below the desired mounting area to accommodate the cable.

6.4 Product dimensions — Wireless hub

The dimensions for the wireless hub are shown below.

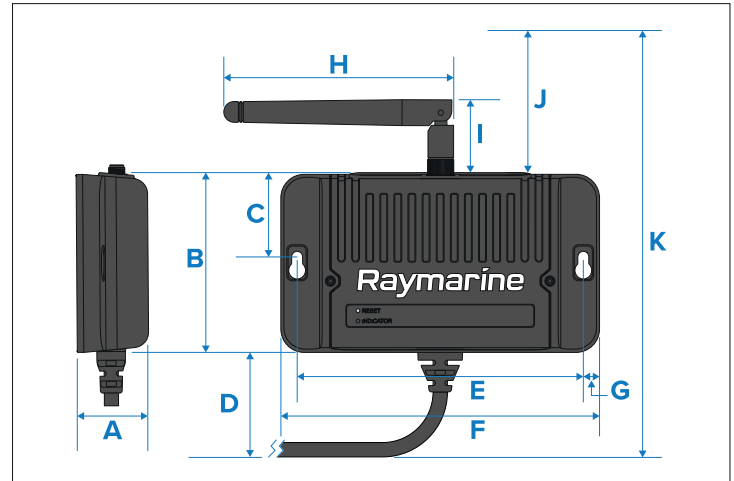


Dimension	
A	26.70 mm (1.05 in)
B	68.04 mm (2.68 in)
C	32.16 mm (1.27 in)
D	70.00 mm (2.76 in)
E	109.20 mm (4.30 in)
F	121.60 mm (4.79 in)
G	6.20 mm (0.24 in)
H	87.72 mm (3.45 in)
I	29.14 mm (1.15 in) Min
J	106.95 mm (4.21 in) Max
K	244.99 mm (9.65 in)

Note:

- The Wireless hub includes a fitted 5 m (16.4 ft) cable for connection to your VHF Radio.
- If the installation requires the cable to be passed through a bulkhead or panelling, a 20 mm (0.79 in) diameter hole is required to allow the connector to pass through.

6.5 Product dimensions — Wireless handset and holster

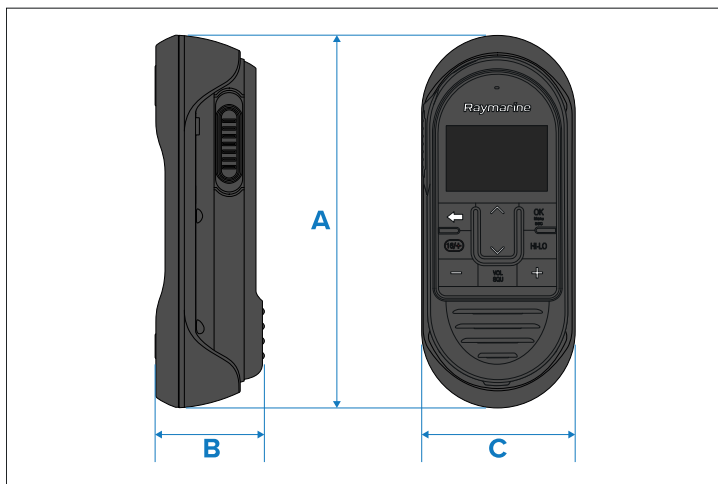**Dimension**

- | | |
|----------|---------------------|
| A | 173.33 mm (6.82 in) |
| B | 50.50 mm (1.99 in) |
| C | 71.41 mm (2.81 in) |

Note:

The charging holster is supplied with a fitted 2 m (6.56 ft) power cable terminated with bare ended wires.

CHAPTER 7: LOCATION REQUIREMENTS

CHAPTER CONTENTS

- 7.1 Warnings and cautions — page 38
- 7.2 Potential ignition source — page 38
- 7.3 General location requirements — page 38
- 7.4 GNSS (GPS) location requirements — page 39
- 7.5 Antenna mounting and EME exposure — page 40
- 7.6 Multiple antenna installations — page 40
- 7.7 Loud hailer location requirements — page 40
- 7.8 Wireless product location requirements — page 40

7.1 Warnings and cautions

Important:

Before proceeding, ensure that you have read and understood the warnings and cautions provided in the following section of this document:

- [p.11 — Important information](#)

7.2 Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

7.3 General location requirements

When selecting a location for the unit it is important to consider a number of factors.

To ensure optimum performance, it is recommended that the display is temporarily powered up and tested, at the chosen location, prior to installation.

Ventilation requirements

To provide adequate airflow:

- Ensure that equipment is mounted in a compartment of suitable size.
- Ensure that ventilation holes are not obstructed.
- Ensure adequate separation of equipment.

Mounting surface requirements

When selecting a mounting surface, ensure that:

- The product will be adequately supported on a secure, flat surface. Do NOT mount units or cut holes in places which may damage the structure of the vessel.
- Sufficient space is available around the product.
- There is nothing behind the mounting surface that may be damaged when drilling.

Cable routing requirements

Ensure you have identified the route that all required cables will take and that sufficient space is available to allow connection of cables:

- Unless otherwise stated, a minimum cable bend radius of 100 mm (3.94 in) is required.
- Where necessary, cable supports should be used to prevent stress on connectors.

Electrical interference

Select a location that is far enough away from equipment that may cause interference, such as motors, generators and radio transmitters/receivers.

Power supply

Select a location that is as close as possible to the vessel's DC power supply. This will help to keep cable runs to a minimum.

RF interference

Certain third-party external electrical equipment can cause Radio Frequency (RF) interference with GNSS (GPS), AIS or VHF devices, if the external equipment is not adequately insulated and emits excessive levels of electromagnetic interference (EMI).

Some common examples of such external equipment include LED lighting (e.g.: navigation lights, searchlights and floodlights, interior and exterior lights) and terrestrial TV tuners.

To minimize interference from such equipment:

- Keep it as far away from GNSS (GPS), AIS or VHF products and their antennas as possible.
- Ensure that any power cables for external equipment are not entangled with the power or data cables for these devices.
- Consider fitting one or more high frequency suppression ferrites to the EMI-emitting device. The ferrite(s) should be rated to be effective in the range 100 MHz to 2.5 GHz, and should be fitted to the power cable and any other cables exiting the EMI-emitting device, as close as possible to the position where the cable exits the device.

Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.

When choosing a suitable location for the product, you must aim to maintain a distance of **at least** 1 m (3.3 ft.) in all directions from any compasses.

For some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered on state.

EMC installation guidelines

Raymarine® equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system

Correct installation is required to ensure that EMC performance is not compromised.

Note:

In areas of extreme EMC interference, some slight interference may be noticed. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine® equipment and cables connected to it are:
 - At least 1 m (3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (7 ft).
 - More than 2 m (7 ft) from the path of a Radar beam. A Radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied power from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.

- Only Raymarine® specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation instructions.

Note:

Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.

Connections to other equipment

Requirement for ferrites on non-Raymarine cables.

If your product is to be connected to other equipment using a cable not supplied by Raymarine®, a suppression ferrite **MUST** always be attached to the end of the cable nearest to the Raymarine® product.

7.4 GNSS (GPS) location requirements

Your product includes a built-in GNSS (GPS) receiver that, in order to obtain a position fix, requires connection of an external passive antenna, such as the GA150 antenna.

Ensure you follow the location requirements specified in your external antenna's installation instructions.

7.5 Antenna mounting and EME exposure

Ensure that your VHF antenna is connected to the radio before transmission.

Raymarine® declares a Maximum Permissible Exposure (MPE) radius of 1.8 meters (5.9 ft.) for this system, assuming 25 watts output to an omnidirectional antenna of 3dBi gain or less.

For watercraft with suitable structures, the antenna base must be at least 3.8 meters (12.5 ft) above the main deck to meet the MPE for persons up to 2 metres (6.6 ft) tall. For watercraft without such structures, the antenna must be mounted so that its base is a minimum of 1.8 meters (5.9 ft.) vertically from heads of all persons.

The antenna must be isolated from the vessel's metalwork using an insulated (e.g. plastic) mounting bracket.

7.6 Multiple antenna installations

Important additional considerations when installing multiple antennas.

To prevent potential channel interference when installing two or more VHF radios on the same vessel, ensure that the antennas are located at least 2.4 m (8 ft.) away from each other.

7.7 Loud hailer location requirements

To avoid audio feedback, ensure that the loud hailer is at least 3 m (9.8 ft) away from the VHF base unit and any handset or fistmic at all times. When talking, ensure that the handset or fistmic is pointing in the opposite direction to the loud hailer.

7.8 Wireless product location requirements

The optional wireless hub, handset and active speakers require further considerations when selecting a mounting location

Wireless location requirements for optimum performance

All wireless devices in your system must be located in such a way that they can reliably receive and/or transmit wireless signals.

A number of factors can influence wireless performance. For example, physical obstacles and certain vessel structures and materials can all negatively impact wireless performance. Therefore, **it's important to check a product's wireless performance at the desired installation location before drilling any mounting holes.**

Vessel construction and materials

Wherever possible, mount products on surfaces constructed from GRP (e.g. fiberglass resin, or foam), or on dry wooden bulkheads. **Conductive materials in the signal path can have a significant impact on wireless signal performance.** Reflective surfaces such as metal surfaces, some types of glass and even mirrors can drastically affect performance or even block the wireless signal. Installation locations that are in close proximity to these materials should be avoided. **Do NOT mount wireless products directly to conductive materials.** This includes any mounting surface or enclosure/pod. Examples of conductive materials include, but are not limited to:

- carbon fibre, kevlar, or aramid (including sails made from these materials)
- aluminium
- steel

In installations with conductive materials, if available, mount the wireless product using an accessory pole mount or deck mounting kit. A clearance of at least 10 cm (3.9 in) is required to minimize the ground effect from conductive materials. This applies to transmitters as well as displays. If moving the product fixes the problem, consider cutting an antenna clearance hole behind the unit (once the product position and mounting have been finalized).

Wireless performance can also be degraded in locations where the wireless signal passes through a bulkhead containing power cables.

Crew members (especially when wet) can also be obstructive to wireless signals, if their bodies pass through the signal area between wireless sensor and any associated displays.

Checking and optimizing signal strength

It may be necessary to experiment with the location of your wireless products to achieve optimal wireless performance and a clear signal path.

The distance between wireless products should always be kept to a minimum. Do not exceed the maximum stated range of your wireless product (maximum range will vary for each device).

Wireless performance degrades over distance, so products farther away will receive less network bandwidth. Products installed close to their maximum wireless range may experience slow connection speeds, signal dropouts, or not being able to connect at all.

For best results, the wireless product should have a clear, direct line-of-sight to the product it will be connected to. Any physical obstructions can degrade or even block the wireless signal. Some wireless products feature a signal strength indicator to assist in the process of determining the location with the best wireless performance. Choose the location with the highest and most consistently strong direct signal reading, during a 5 minute monitoring period. Try alternative locations for the transmitter to maximize the signal strength to the displays; e.g. try locations below a hatch or skylight or near to a window. A small change in product position can result in a significant change in the signal strength.

Note:

Some wireless products (e.g. a Hull Transmitter) will not transmit data unless a transducer is connected. Also consider that an NMEA or SeaTalk NG product (e.g. an interface) will not transmit data unless an appropriate data source is connected.

Interference and other equipment

Interference from other people's wireless devices can cause interference with your products. You can use a third-party wireless analyzer tool / smartphone app to assess the best wireless channel to use (e.g. a channel not in use or one used by the least number of devices).

Wireless products should be installed at least 1 m (3 ft) away from:

- Other wireless-enabled products

- Transmitting products that send wireless signals in the same frequency range
- Other electrical, electronic or electromagnetic equipment that may generate interference.


Software updates

It's also important to ensure all your wireless products are running the latest software versions, as improvements are made over time to wireless performance.

Pre-installation site survey

Before installing a wireless device, a site survey should be performed to ensure the wireless signal strength at the desired installation location is sufficient to maintain a reliable connection.

You can perform a site survey using your smartphone or tablet and a wireless signal analyzer app, such as "Wi-Fi Analyzer" by Farproc or similar.

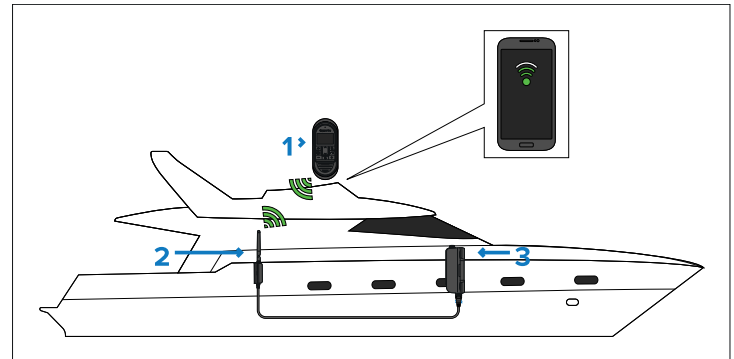

Description

- 1 Wireless handset
- 2 Wireless hub
- 3 VHF Radio

1. Install the wireless analyzer app on your smart device.
2. Connect the wireless hub to your VHF Radio.

3. Move the hub to its desired location.

The hub should be located as close to the desired location of the wireless handset as possible. An additional wireless hub antenna extension cable may also be required; this is available to order as accessory A80541, and provides an additional 5 meters of cable length.

4. Power on your VHF Radio.

5. Make a note of your wireless hub's name (SSID).

The wireless hub's name can be found using a wired handset: [Menu > Set-up > Wireless set-up > Wireless hub set-up > Hub name]. (By default the hub name will be RM followed by the full part number and serial number of the VHF Radio it is connected to, e.g.: RM E70517 107828).

6. Go to the location you have chosen for your wireless handset.

7. Open the wireless analyzer app on your smart device and scan available networks.

8. Establish the signal strength of your hub's wireless network at the chosen location.

For reliable wireless performance the signal strength should be better than -75dBm , the closer the signal is to zero the better the wireless performance will be (e.g. -40dBm is better than -75dBm).

9. If the wireless channel your hub is using is congested with wireless signals then change your hub's wireless channel ([Menu > Set-up > Wireless set-up > Wireless hub set-up > Wi-Fi channel]), and select a different wireless channel.

Try channels 1, 6 and 11 first as these are usually the preferred wireless channels. Otherwise try the channel that has the least congestion.

10. If you have a very weak or intermittent signal then you will need to investigate further, please refer to the wireless location requirements to help establish what may be causing the problem.

11. Repeat steps 6 to 10 with each wireless handset you wish to install.

CHAPTER 8: CABLES AND CONNECTIONS — GENERAL INFORMATION

CHAPTER CONTENTS

- [8.1 General cabling guidance — page 44](#)
- [8.2 Connections overview — page 45](#)

8.1 General cabling guidance

Cable types and length


It is important to use cables of the appropriate type and length.

- Unless otherwise stated only use cables supplied by Raymarine.
- Where it is necessary to use non-Raymarine cables, ensure that they are of correct quality and gauge for their intended purpose. (e.g.: longer power cable runs may require larger wire gauges to minimize voltage drop along the run).

Cable routing and bend radius

To maximize cable performance and lifespan, it's important to ensure that all cables are routed correctly and adequate space is provided to allow for each cable's minimum bend radius.

Minimum cable bend radius

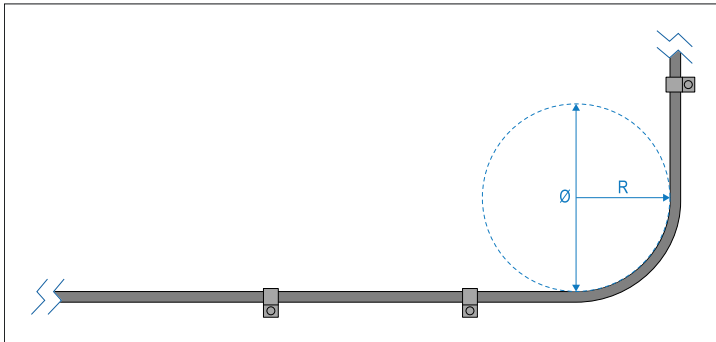

Do NOT bend cables excessively. Wherever possible, ensure that your chosen product installation location allows enough clearance for the minimum cable bend diameter specified in the following table:

	Description	Value
Ø	Cable minimum bend diameter .	200 mm (7.87 in.)
R	Cable minimum bend radius .	100 mm (3.94 in.)

Note:

For products where multiple different cable types are connected, each with a different minimum cable bend radius, the higher figure is provided in the table above (i.e. the cable with the greatest minimum bend radius is specified).

Cable routing — best practices

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using cable clips or cable ties. Coil any excess cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through (conduit).
- Do NOT run cables near to engines or fluorescent lights.
- Always route data cables as far away as possible from:
 - Other equipment and cables.
 - High current-carrying AC and DC power lines.
 - Antennas.

Strain relief

Use adequate strain relief for cabling to ensure that connectors are protected from strain and will not pull out under extreme sea conditions.

Circuit isolation

Appropriate circuit isolation is required for installations using both AC and DC current:

- Always use isolating transformers or a separate power-inverter to run PCs, processors, displays and other sensitive electronic instruments or devices.
- If using Weather FAX audio cables, always use an isolating transformer.
- If using a third-party audio amplifier, always use an isolated power supply.
- If using an RS232/NMEA converter, always ensure optical isolation on the signal lines.

- Always ensure that PCs or other sensitive electronic devices have a dedicated power circuit.

Cable shielding

Ensure that cable shielding is not damaged during installation and that all cables are properly shielded.

Important:

Be aware that some **third-party** cables and adapters (for example, certain Ethernet cables using RJ45 connectors) are not always shielded. To prevent breaks in cable shielding continuity and potential grounding issues, special attention is required to ensure that any cables, extension cables, adapters, or other signal-coupling devices used in cable runs **maintain all shield connections throughout the cable run.**

Connections to other equipment

Requirement for ferrites on non-Raymarine cables:

If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

For more information, refer to your third-party cable manufacturer.

Dust caps

To prevent potential water ingress, connectors not in use should be protected using the supplied dust caps.

Bare-ended wire connections

You must ensure that any bare-ended wires are adequately protected from short circuit and water ingress.


Bare-ended wire connections

It is recommended that bare-ended wire connections are made by soldering or using crimp connectors, and then protected by wrapping the connection in electrical insulation tape.

Unused bare-ended wires

Any unused bare-ended wires should be folded back and wrapped in electrical insulation tape.

8.2 Connections overview

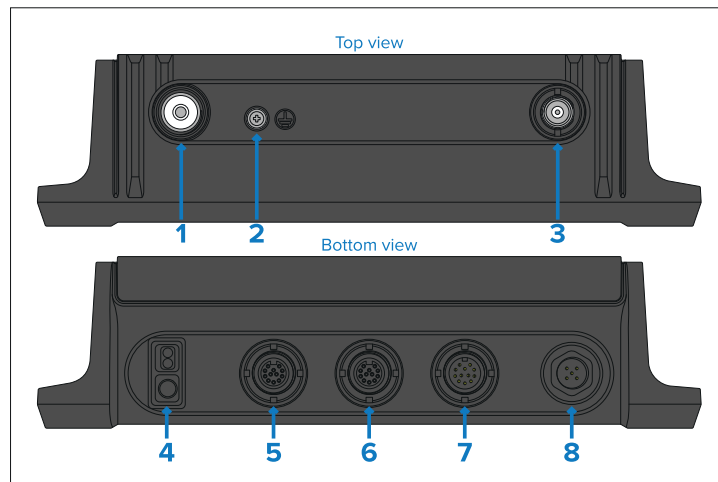

Connection	Connects to:	Suitable cables
1	GNSS (GPS) antenna connection	Passive GNSS antenna GNSS antenna's fitted cable.
2	Earth stud	DO NOT CONNECT N/A
3	VHF antenna connection	VHF antenna or Splitter VHF antenna's fitted cable.
4	Power and data connection	<ul style="list-style-type: none"> • 12 V dc power supply • NMEA 0183 devices • Loud Hailer <ul style="list-style-type: none"> • Suitable power extension or circuit breaker. • Cable supplied with your NMEA 0183 device • Loud hailer's fitted cable
5	HS 1 (Handset station 1) connection	Wired handset or Adaptor cable Wired handset's fitted cable.


	Connection	Connects to:	Suitable cables
6	HS 2 (Handset station 2) connection	Wired handset or Adaptor cable	Wired handset's fitted cable.
7	Hub connection	Wireless hub connection	Wireless hub's fitted cable.
8	NMEA 2000 connection	SeaTalk NG / NMEA 2000 backbone	The supplied DeviceNet to SeaTalk NG adaptor or a DeviceNet spur cable.

CHAPTER 9: MOUNTING

CHAPTER CONTENTS

- 9.1 Tools required — page 48
- 9.2 Mounting the Base station — page 48
- 9.3 Wired and wireless speaker mounting — page 48
- 9.4 Wired handset mounting using the holster — page 49
- 9.5 Pass-through panel kit mounting — page 50
- 9.6 Mounting the wireless hub — page 51
- 9.7 Mounting the charging holster for the wireless handset — page 52

9.1 Tools required

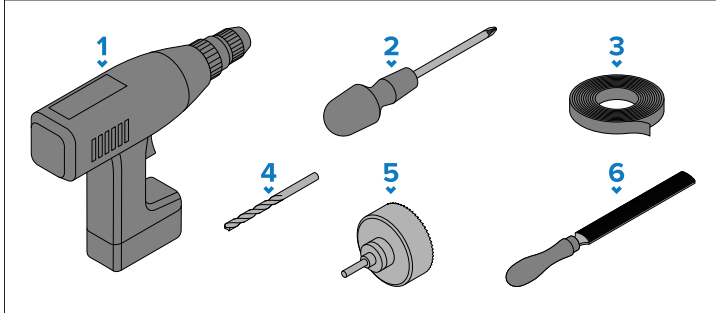


1. Power drill
2. Pozi-drive screwdriver
3. Adhesive tape
4. Suitable size drill bit
5. 89 mm (3 ½ in) Hole saw (used for speaker mounting)
6. File (for speaker cut-out)

9.2 Mounting the Base station

Before mounting, ensure that your selected location meets the location requirements found in this document.


- Also ensure you have planned the location for any additional components, such as the Handset or Speaker etc.

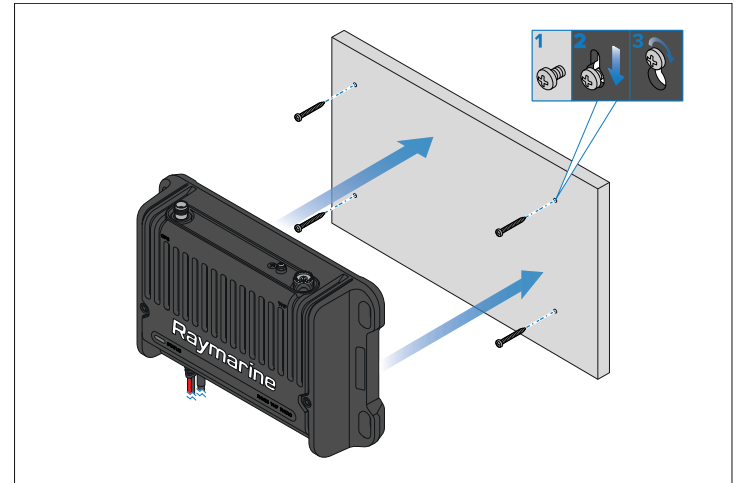

1. Using the supplied mounting template, mark the location of the fixing holes on the mounting surface.
2. Drill holes for the mounting fixings using a drill with a suitable sized drill bit.
3. Screw the fixings approximately half way into the holes in the mounting surface.
4. Place the Base station over the fixings screws and push down to lock into position.
5. Fully tighten the screws.
6. Connect the necessary cables.

9.3 Wired and wireless speaker mounting

Before mounting, ensure that your selected location meets the location requirements found in this document.

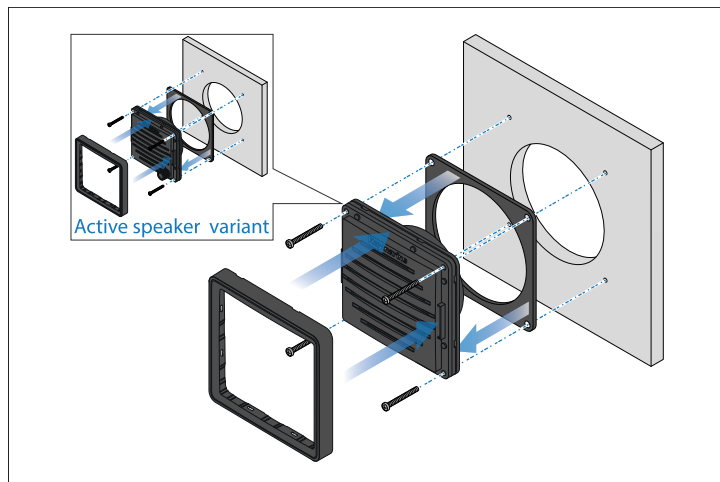


1. Remove the speaker's bezel.
2. Using the supplied mounting template, mark the location of the cut out and fixing holes on the mounting surface.
3. Using a 89 mm (3 1/2 in) hole saw, drill out the centre cut out area indicated on the mounting template.
4. Drill holes for the fixings, using a drill with a suitable sized bit.
5. Ensure that the unit fits into the removed area and then file around the cut edge until smooth.
6. Peel the backing off of the supplied gasket and place the adhesive side of the gasket onto the rear of the speaker, pressing firmly onto the flange.
7. Connect the relevant cable to the speaker.
8. Slide the speaker into place and secure using the fixings provided.
9. Fit the Bezel, ensuring it clips into place on all 4 sides.

9.4 Wired handset mounting using the holster

Follow the steps below to mount the wired handset.


Before mounting, ensure that your selected location meets the location requirements found in this document.

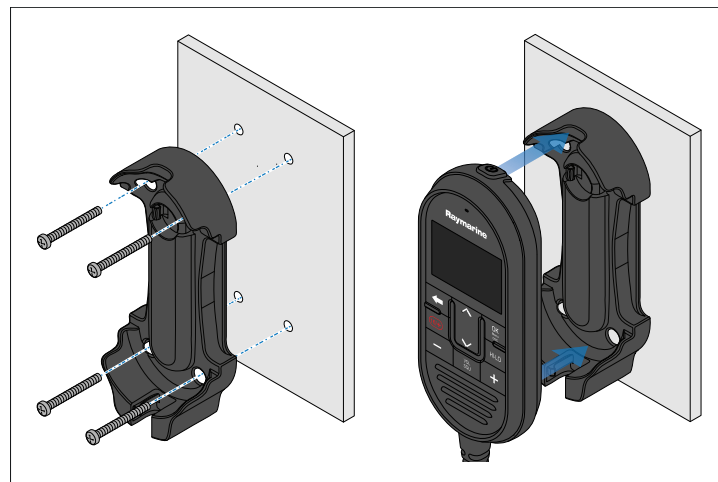

1. Check the selected location for the mounting holster, a clear flat area is required, with sufficient space around it to place and remove the handset.
2. Using a pencil, offer up the holster to the desired location and mark the location of the screw holes on the mounting surface.
3. Drill the mounting holes using a suitable size drill bit.
4. Hold the holster in place and secure using the screws provided.
5. Place the handset into the holster until it clicks into position.

9.5 Pass-through panel kit mounting


When installing handsets, the pass-through panel kit should be used to secure the cable's connector to the panel the cable has to pass through.

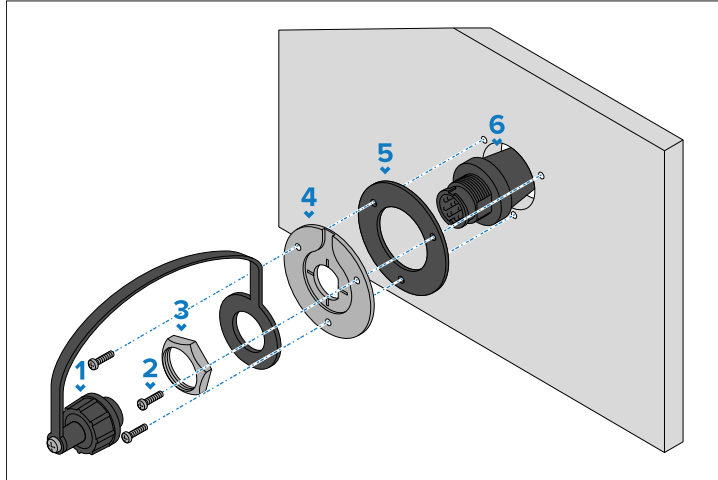

Description

- | | |
|---|-------------------------------------|
| 1 | Splash-proof dust cap with lanyard. |
| 2 | Mounting plate fixings x 3. |
| 3 | Mounting plate nut. |
| 4 | Mounting plate. |
| 5 | Mounting plate gasket. |
| 6 | Extension cable. |
1. Check the selected location for the Mounting plate, a clear flat area is required.

2. Ensuring correct orientation of the mounting plate, offer up the plate to the desired location and mark the location of the screw holes and the center hole on the mounting panel.

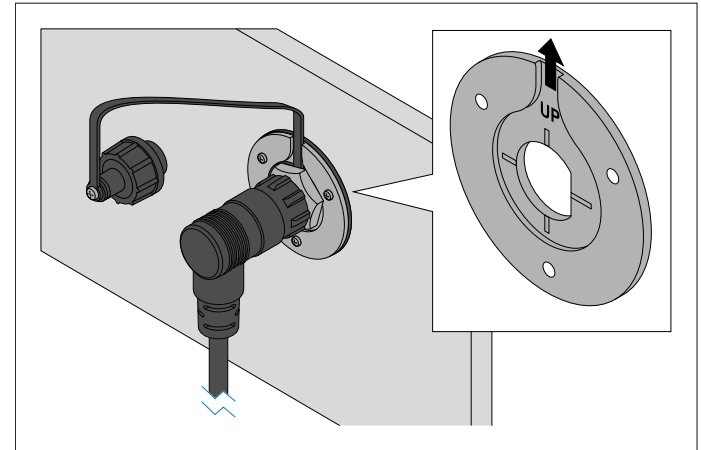

To ensure that the handset's connector points down when connected, orientate the mounting plate so that the lanyard groove is pointing straight up.

3. Drill the mounting holes using a suitable size drill bit.
4. Drill the center hole using a 25 mm (1 in.) hole cutting saw.
5. Pull the connector end of the cable through the hole in the mounting surface.
6. Place the Mounting plate gasket over the end of the connector.
7. With the recessed side facing away from the mounting panel, place the Mounting plate over the end of the connector.
8. Place the lanyard end of the Splash-proof dust cap over the connector, ensuring the lanyard sits in the recess in the Mounting plate.
9. Place the Mounting plate nut over the connector and tighten clockwise using a 13/16 in. (21 mm) socket wrench, being careful not to damage the plastic nut by overtightening.
10. Secure the Mounting plate to the mounting surface using the supplied screws.
11. Attach the Handset / Fismic connector to the cable connector and rotate the locking collar clockwise to secure.

12. Connect the opposite end of the cable to the required connector either on the Base station or to another pass-through panel mounting plate connector.


Note:

Drill bit, tap size and tightening torque is dependent on the thickness and type of material the unit is to be mounted on.

9.6 Mounting the wireless hub

Before mounting, ensure that:

- Your selected location meets the location requirements found in this document.
- You pay particular attention to the wireless location requirements.
- Sufficient space is available above or to one side of the hub for the antenna.
- The product operates correctly at the desired location before mounting.

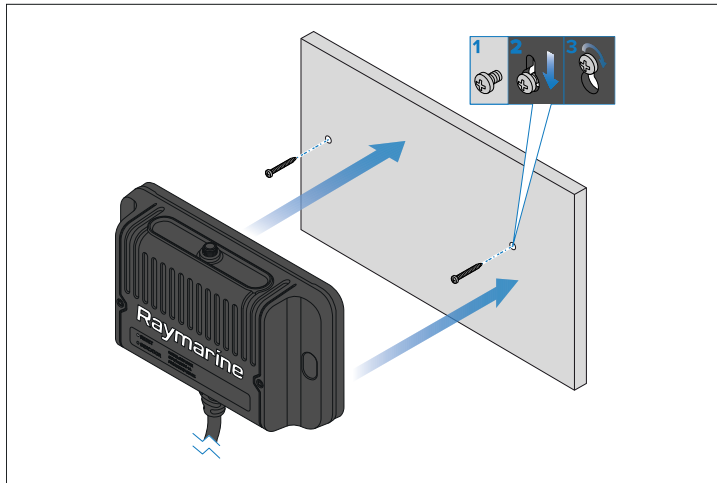


1. Using the supplied mounting template, mark the location of the fixing holes on the mounting surface.
2. Drill holes for the mounting fixings using a drill with a suitable sized drill bit.

3. Screw the fixings approximately half way into the holes in the mounting surface.
4. Place the Wireless hub over the fixing screws and push down to lock into positions
5. Fully tighten the screws.
6. Connect the antenna to the top of the hub.

Antenna orientation


Radio waves are emitted from the wireless hub perpendicular to the orientation of the hub's antenna.

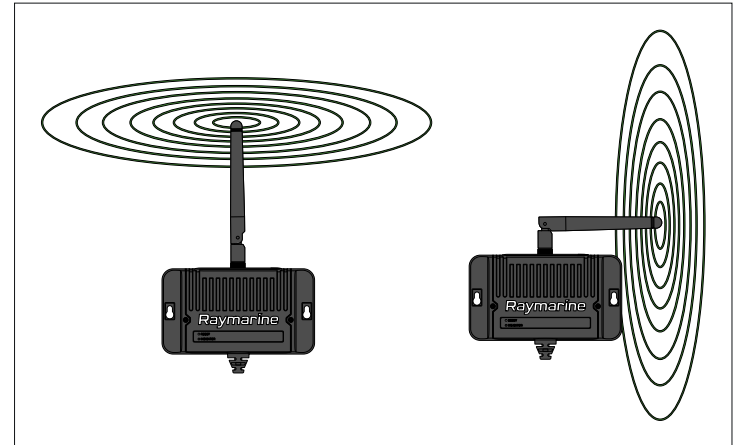

Keeping the antenna vertical should provide the best coverage for devices on the same plane as your hub. Positioning the antenna horizontally will provide better coverage above and below the hub.

Installing the wireless hub antenna extension accessory

An extension cable accessory (A80541) is available for the wireless hub's antenna. Using the extension, the distance from the wireless hub's antenna can be extended by an additional 5 m (16.4 ft).

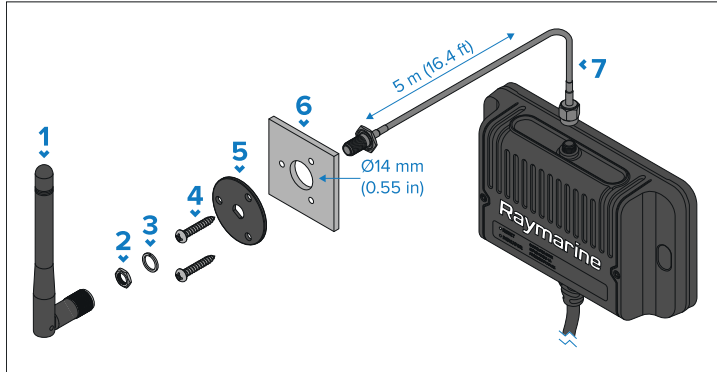

Description


- 1 Antenna (supplied with the hub).
 - 2 Nut.
 - 3 M3x10 fixing screws x 3.
 - 4 Mounting plate.
 - 5 Mounting surface (14 mm (0.55 in) diameter hole required).
 - 6 5 m (16.4 ft) antenna extension cable.
 - 7 Split washer.
 - 8 Wireless hub.
1. Check the selected location for the Mounting plate, a clear flat area is required.
 2. Using a pencil, offer up the Mounting plate to the desired location and mark the location of the screw holes and the center hole on the mounting panel.
 3. Drill holes for the mounting fixings using a drill with a suitable sized drill bit.
 4. Drill the center hole using a 14 mm (0.55 in) drill/hole cutter.

5. Pull the connector end with the exposed thread through the center hole.
6. Place the mounting plate over the end of the connector.
7. Place the split washer and nut over the end of the connector and secure by hand tightening the nut.
8. Secure the mounting plate to the mounting surface using the supplied screws.
9. Screw the antenna supplied with your hub to the connector.
10. Connect the opposite end of the extension cable to the antenna connector located on the top of the wireless hub.

9.7 Mounting the charging holster for the wireless handset

Before mounting, ensure that:

- Your selected location meets the location requirements found in this document.
- You pay particular attention to the wireless location requirements.
- The product operates correctly at the desired location before mounting.
- The product does not interfere with nearby devices.

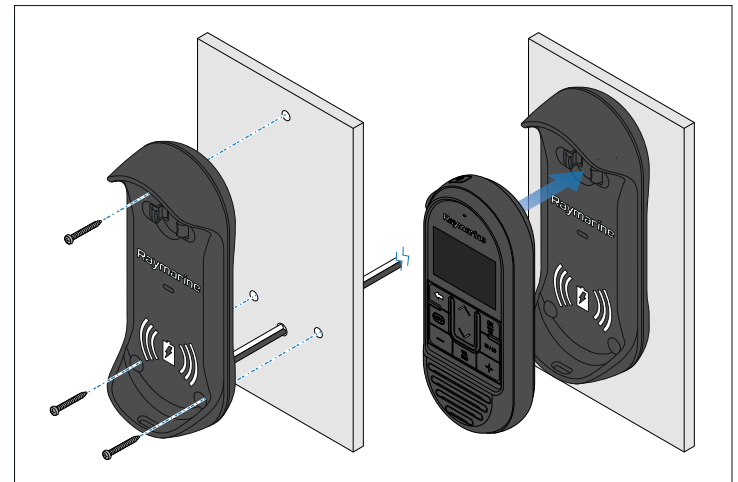


1. Using the supplied mounting template mark the location of the mounting holes and if required, the cable hole.
2. Drill the mounting holes using a suitable size drill bit.
3. If required, use a 6.5 mm (0.26 in) drill bit to drill a hole for the holster's power cable.
4. Hold the holster in place and secure using the screws provided.
5. Place the Handset into the holster, ensuring it clicks into position.

CHAPTER 10: NETWORK CONNECTIONS

CHAPTER CONTENTS

- 10.1 Connections overview — page 55
- 10.2 Handset station connection — page 55
- 10.3 Wired speaker connection — page 56
- 10.4 Connecting GNSS (GPS) and VHF antennas — page 56
- 10.5 Wireless hub connection — page 58
- 10.6 Wireless handset connections — page 58

10.1 Connections overview

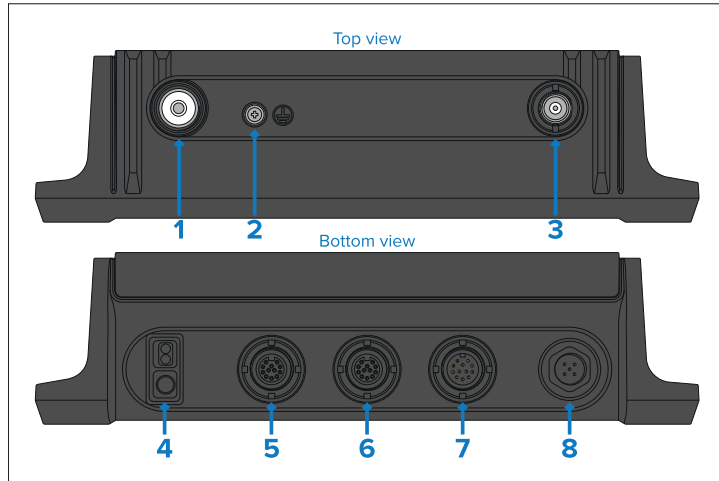


Connection	Connects to:	Suitable cables
1	GNSS (GPS) antenna connection	Passive GNSS antenna GNSS antenna's fitted cable.
2	Earth stud	DO NOT CONNECT N/A
3	VHF antenna connection	VHF antenna or Splitter VHF antenna's fitted cable.
4	Power and data connection	<ul style="list-style-type: none"> 12 V dc power supply NMEA 0183 devices Loud Hailer <ul style="list-style-type: none"> Suitable power extension or circuit breaker. Cable supplied with your NMEA 0183 device Loud hailer's fitted cable
5	HS 1 (Handset station 1) connection	Wired handset or Adaptor cable Wired handset's fitted cable.

Connection	Connects to:	Suitable cables
6	HS 2 (Handset station 2) connection	Wired handset or Adaptor cable Wired handset's fitted cable.
7	Hub connection	Wireless hub connection Wireless hub's fitted cable.
8	NMEA 2000 connection	SeaTalk NG / NMEA 2000 backbone The supplied DeviceNet to SeaTalk NG adaptor or a DeviceNet spur cable.

10.2 Handset station connection

A Wired handset can be connected to each Handset station connection (HS 1 / HS 2). Your radio is supplied with the equipment to create a full handset station (i.e.: Wired handset, Adaptor cable and Passive speaker). Additional accessories can be purchased to create a second wired handset station.

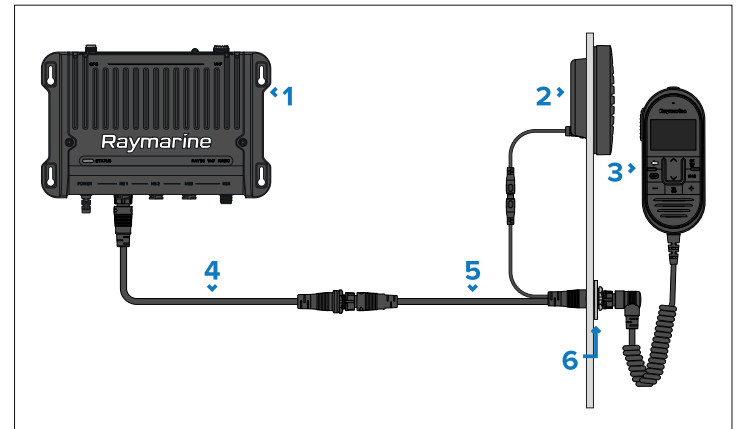

1. Base station.
2. Passive speaker (1 x supplied and available as accessory: A80542).
3. Wired handset (1 x supplied and available as accessory: A80289).

4. Wired handset extension cable, available in different lengths as optional accessories:
 - A80291 — 5 m (16.4 ft).
 - A80292 — 10 m (32.8 ft).
 - A80290 — 15 m (49.2 ft).
5. Handset station adaptor cable with RCA Audio 400 mm (1.3 ft) (1 x supplied and available as accessory: A80297).
6. Panel mount fixings kit (1 x supplied and available as a Spare: R70438).

Connecting handsets and cables

Follow the steps below to connect handsets and extension cables together.

1. If fitted, unscrew and remove the dust cap from the relevant connector.
2. Ensure the cable connectors are correctly orientated, before insertion.
3. Ensure connectors are fully inserted, before locking.
4. Tighten locking collars by Rotating clockwise.


Wired handset extension cables

Handset station cabling can be extended using approved extension cables.

The maximum length of cable from the Handset to the Base station should not exceed 50 m (164.04 ft).

10.3 Wired speaker connection

A wired speaker can be connected to a wired handset station using the RCA audio connector, available on the Handset adaptor cable.

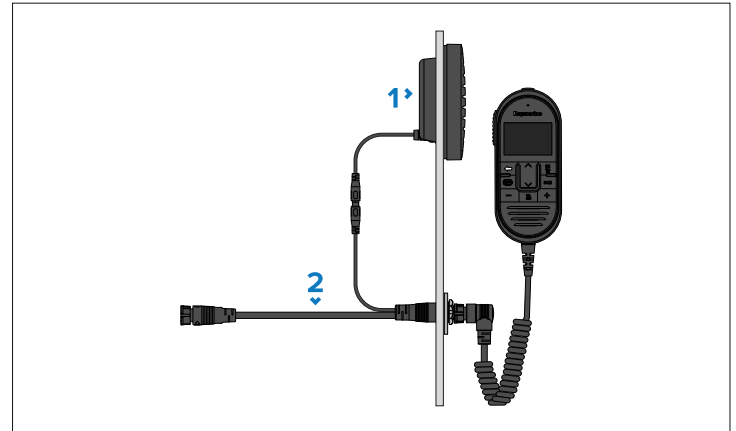

1. Wired speaker (1 x supplied and available as an accessory: A80542)
2. Wired handset adaptor cable 400 mm (1.3 ft) (1 x supplied and available as an accessory: A80297)

The wired speaker includes a 2 m (6.56 ft) audio cable terminated with a male RCA connector.

10.4 Connecting GNSS (GPS) and VHF antennas

Your radio requires a VHF antenna to function as a radio. If you intend to use the radio's internal GNSS (GPS) receiver then you will also require a GNSS (GPS) passive antenna to be connected. The antenna connections can be protected so that they cannot come into contact with any grounded bare metal. This is especially important when installing the radio on metal structure.



Pre-requisites:

- Ensure you have installed your antennas in accordance with the instructions supplied with the antennas.

- Ensure the cables have been properly routed to the Base station and that sufficient cable length is available to make the connections.

Note:


- Follow steps 2 and 3 to install the antennas with no protection.
- When mounting the Base station on metal structure, in order to prevent galvanic corrosion, ensure ALL steps are followed so that the antennas are isolated from the vessel's metalwork.

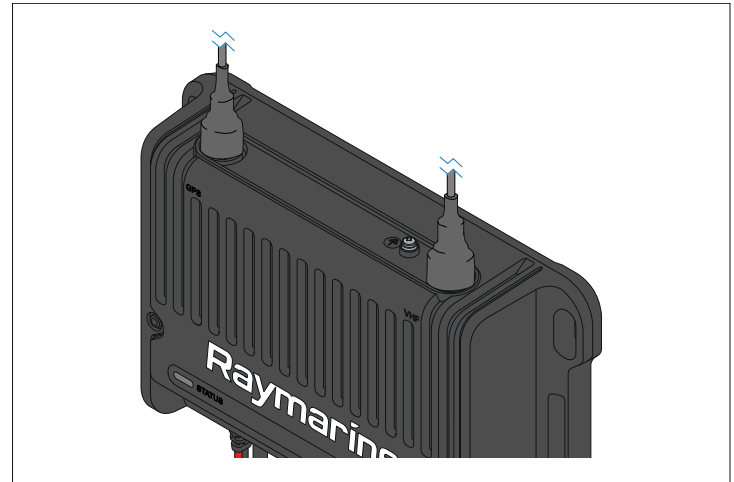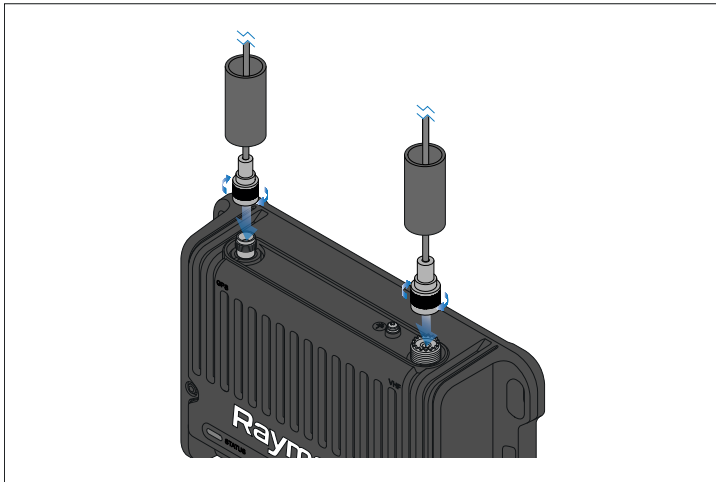

1. Feed the supplied heat shrink tubes over the connector ends of your antennas.
2. Plug the antenna connectors into the relevant antenna connections on the Base station.
3. Secure by tightening the locking collars.
4. Pull the heat shrink tubes down over the antenna connector, ensuring the connectors are fully covered.
5. Apply heat evenly over the heat shrink tubes until they are shrunk uniformly and resemble the shape of the connectors.

10.5 Wireless hub connection

The Wireless hub connects directly to the Ray90 / Ray91's Hub connection.

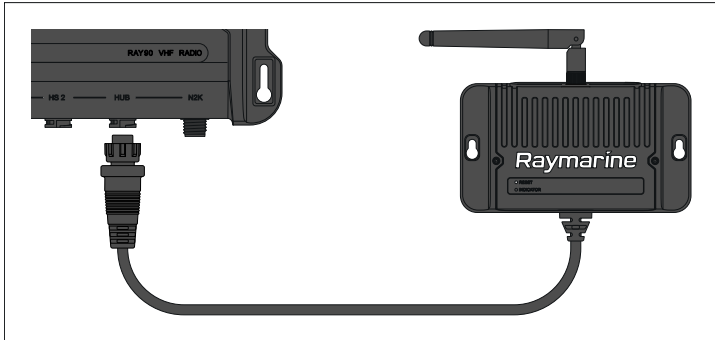

The Wireless hub is required to allow connection of wireless handset stations to the Ray90 / Ray91 base station.

10.6 Wireless handset connections

The Wireless handset connects wirelessly to the Wireless hub, and the Wireless speaker connects wirelessly to the Wireless handset.



Up to 3 Wireless handsets can be connected to the Wireless hub.
For more connection information, refer to the following section:

[p.85 — Connecting a wireless handset to the hub](#)

One Wireless speaker can be connected to each Wireless handset.
For more connection information, refer to the following section:

[p.87 — Connecting the wireless speaker to the Wireless handset](#)


CHAPTER 11: NMEA 0183 CONNECTION

CHAPTER CONTENTS

- [11.1 NMEA 0183 connection — page 60](#)

11.1 NMEA 0183 connection

The NMEA 0183 wires can be used to connect the unit to a NMEA 0183 GNSS (GPS) receiver or MFD.

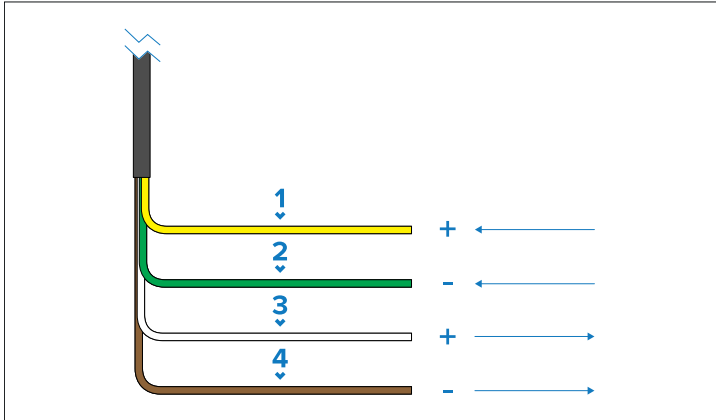

1. Yellow = Receive positive (+) wire.
2. Green = Receive negative (-) wire.
3. White = Transmit positive (+) wire.
4. Brown = Transmit negative (-) wire.

The NMEA® wires should be connected to a compatible device as shown in the table below:

NMEA 0183 wires	NMEA 0183 device
Receive positive (+), connects to:	Transmit positive (+)
Receive negative (-), connects to:	Transmit negative (-)
Transmit positive (+), connects to:	Receive positive (+)
Transmit negative (-), connects to:	Receive negative (-)

CHAPTER 12: NMEA 2000 CONNECTION

CHAPTER CONTENTS

- [12.1 NMEA 2000 / SeaTalk NG connection — page 62](#)

12.1 NMEA 2000 / SeaTalk NG connection

Your product can transmit data to devices connected on SeaTalk NG or NMEA 2000 CAN bus networks. Connection is established using the DeviceNet connector located on the bottom of the unit.



1. You can also use the supplied SeaTalk NG adaptor cable to connect your product to an available spur on your SeaTalk NG backbone.
2. Alternatively you can connect your product to a NMEA 2000 backbone using a standard DeviceNet cable (not supplied).


For a list of available SeaTalk NG cables, refer to:

[p.134 – Spares and accessories](#)

Note:

1. The product must be connected to a correctly terminated backbone.
2. You cannot connect your product directly to a Multifunction display / Chartplotter.
3. Refer to the instructions supplied with your SeaTalk NG / NMEA 2000 device for details on creating a backbone.

Connecting SeaTalk NG cables

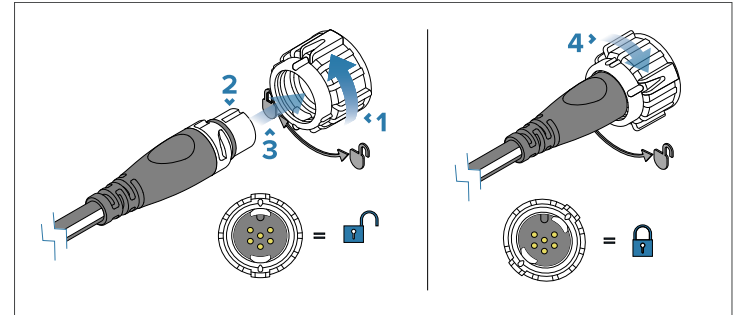

1. Rotate your product's SeaTalk NG connector locking collar counter clockwise, so that the connector is in the unlocked position.
2. Ensure the cable's connector is correctly oriented (groove pointing up).
3. Fully insert the cable connector.
4. Rotate the locking collar clockwise (2 clicks) until it is in the locked position.


CHAPTER 13: LOUD HAILER CONNECTION

CHAPTER CONTENTS

- [13.1 Loud hailer connection — page 64](#)

13.1 Loud hailer connection

A Loud hailer (M95435) can be connected to the radio using the loud hailer wires.

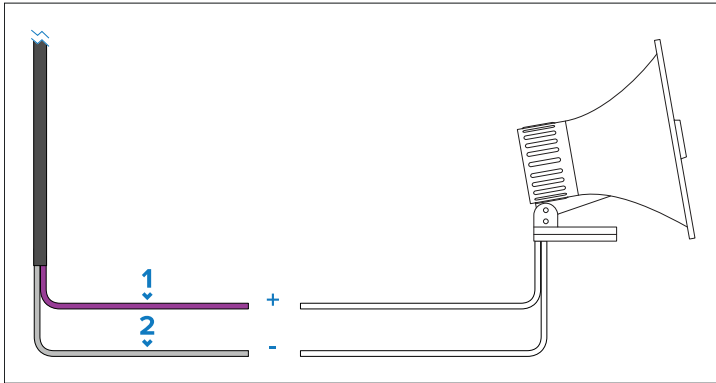

Description

- 1 Positive (+) hailer wire (Purple)
- 2 Negative (-) hailer wire (Gray)

CHAPTER 14: POWER CONNECTIONS


CHAPTER CONTENTS

- 14.1 Power connection — page 66
- 14.2 Power distribution — page 66
- 14.3 Power cable extension (12 V systems) — page 68
- 14.4 Wireless handset charging holster – power connection (Ray63 / Ray73 only) — page 69
- 14.5 Wireless speaker – power connection (Ray63 / Ray73 only) — page 69

14.1 Power connection

The power for the radio is provided directly by a 12 V power source.

The radio should be connected as shown below:

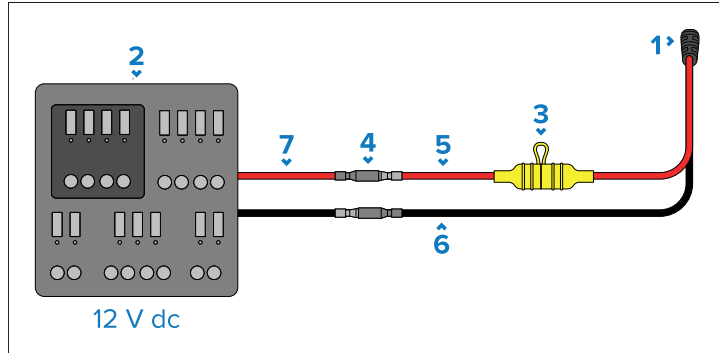

1. Radio's fitted power cable.
2. 12 V dc power source (i.e.: Distribution panel).
3. Waterproof fuse holder containing a suitably-rated inline fuse (**Supplied**), which must be fitted to the red positive wire — refer to the fuse ratings below.
4. Suitable waterproof connection (Radio is supplied with bullet crimps on power supply wires.)
5. Power supply positive (+) Red wire
6. Power supply negative (-) Black wire.
7. If, required you can extend the power cable supplied with your radio, using suitably rated cabling.

In-line fuse and thermal breaker ratings

The following in-line fuse and thermal breaker ratings apply to your product:

In-line fuse rating	Thermal breaker rating
10 A	7 A (if only connecting one device).

Note:

- The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine® dealer.
- If your product's power cable does not have a fitted in-line fuse, add an in-line fuse to the positive wire of your product's power connection.



Warning: 12 Volt dc only

This product must **ONLY** be connected to a 12 V dc power source.



Warning: Positive ground systems

Do **NOT** connect this unit to a system which has positive grounding.



Warning: Grounding not required

This product does **NOT** require separate grounding.



Warning: Chassis grounding

Do **NOT** ground this product using the chassis ground terminal.

Grounding this product to a vessel's RF ground may cause galvanic corrosion.

14.2 Power distribution

Recommendations and best practice.


- The product is supplied with a power cable, either as a separate item or a captive cable permanently attached to the product. Only use the power cable supplied with the product. Do **NOT** use a power cable designed for, or supplied with, a different product.

- Refer to the *Power connection* section for more information on how to identify the wires in your product's power cable, and where to connect them.
- See below for more information on implementation for some common power distribution scenarios:

Important:

- When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel's electrical system, which may impact the voltage available to other products during the peaks.
- The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized dealer or a suitably qualified professional marine electrician.

Implementation — connection to distribution panel (Recommended)

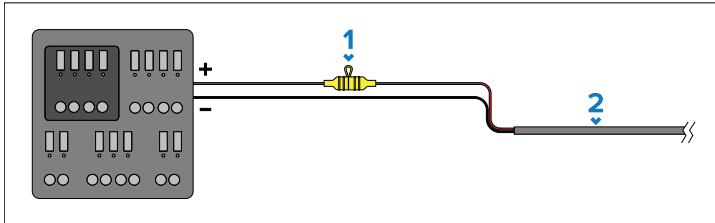


Description

- 1 Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: *Inline fuse and thermal breaker ratings*.
- 2 Product power cable.

- It is recommended that the supplied power cable is connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point.

- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm²) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than one item of equipment shares a breaker, use individual inline fuses for each power circuit to provide the necessary protection.

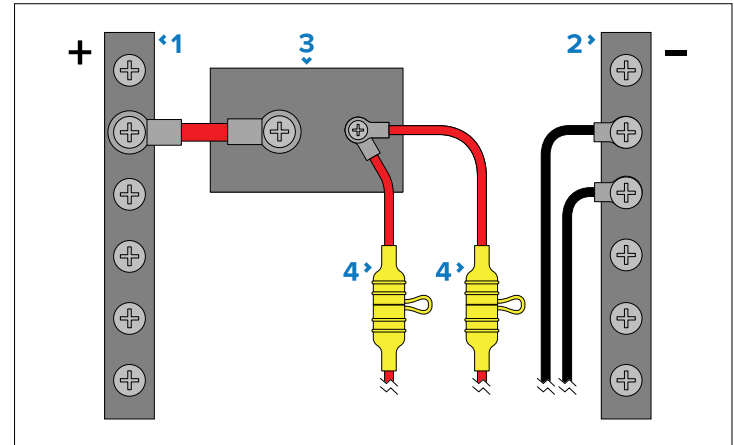

Description


- 1 Positive (+) bar
- 2 Negative (-) bar
- 3 Circuit breaker
- 4 Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: *Inline fuse and thermal breaker ratings*.

Important:

Observe the recommended fuse / breaker ratings provided in the product's documentation, however be aware that the suitable fuse / breaker rating is dependent on the number of devices being connected.

Implementation — direct connection to battery

- Where connection to a power distribution panel is not possible, the power cable supplied with your product may be connected directly to the vessel's battery, via a suitably rated fuse or breaker.
- The power cable supplied with your product does NOT include a separate drain wire. Therefore, only the power cable's red and black wires need to be connected.
- If the power cable is NOT supplied with a fitted inline fuse, you MUST fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable supplied with your product, ensure you observe the dedicated *Power cable extensions* advice provided in the product's documentation.

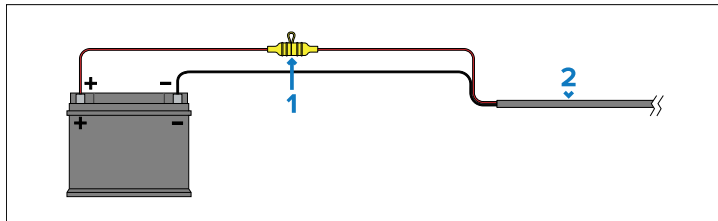

Description	
1	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: <i>Inline fuse and thermal breaker ratings</i> .
2	Product power cable.

More information

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ISO 13297: Small craft — Electrical systems — Alternating and direct current installations

- ISO 10133: Small craft — Electrical systems — Extra-low-voltage d.c. installations
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

14.3 Power cable extension (12 V systems)

If you need to extend the length of the power cable supplied with your product, ensure you observe the following advice:

- The power cable for each unit in your system should be run as a separate, single length of 2-wire cable from the unit to the vessel's battery or distribution panel.
- Ensure that the extension cable is of a sufficient gauge for the supply voltage, the total current load of the device, and the length of the cable run — as the cable run length increases, the greater the voltage drop will be from one end of the power cable to the other.
- Refer to the following table for typical **minimum** power cable wire gauges:

Cable length in meters (feet)	Wire gauge in AWG (mm ²) for 12 V supply
<8 (<25)	16 (1.31 mm ²)
16 (50)	14 (2.08 mm ²)
24 (75)	12 (3.31 mm ²)
>32 (>100)	10 (5.26 mm ²)

Important:


Be aware that some products in your system (such as sonar modules) can create voltage peaks at certain times, which may impact the voltage available to other products during the peaks.

Important:

To ensure power cables (including any extension) are of a sufficient gauge, ensure that there is a continuous **minimum** voltage of **10.8 V dc** at the end of the cable where it enters the product's power connector, even with a fully flat battery at 11 V dc. (Do not assume that a flat battery is at 0 V dc. Due to the discharge profile and internal chemistry of batteries, the current drops much faster than the voltage. A "fully flat" battery still shows a positive voltage, even if it doesn't have enough current to power your device.)

14.4 Wireless handset charging holster – power connection (Ray63 / Ray73 only)

To enable inductive charging of the wireless handset, the holster requires a 12 V dc power supply. The power cables should be connected via a distribution panel or, if required directly to a battery.

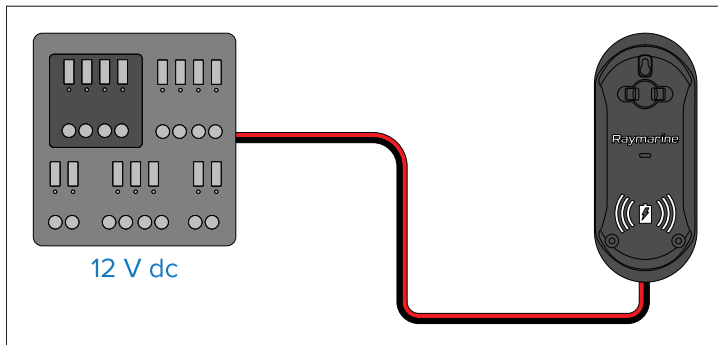

Refer to the following section for guidance on connecting to a power supply: [p.66 – Power distribution](#)

In-line fuse and thermal breaker ratings

The wireless speaker is internally fused, however it is recommended that you fit an inline fuse on the positive wire of your product's power cable or connect using a thermal breaker.

In-line fuse rating

2 A

Thermal breaker rating


2 A (refer to note below)

Note:

- The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine® dealer.

14.5 Wireless speaker – power connection (Ray63 / Ray73 only)

The wireless speaker is an active speaker that requires a 12 V dc power supply. The power cables should be connected via a distribution panel or, if required, directly to a battery.

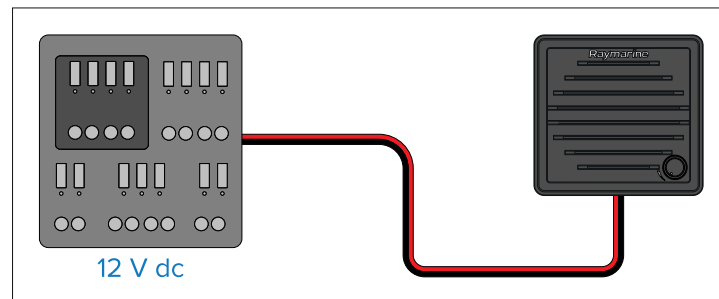

Refer to the following section for guidance on connecting to a power supply: [p.66 – Power distribution](#)

In-line fuse and thermal breaker ratings

The wireless speaker is internally fused, however it is recommended that you fit an inline fuse on the positive wire of your product's power cable or connect using a thermal breaker.

In-line fuse rating

2 A

Thermal breaker rating

2 A (refer to note below)

Note:

- The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine® dealer.

CHAPTER 15: GETTING STARTED

CHAPTER CONTENTS

- 15.1 Licensing — page 71
- 15.2 General radio operating rules — page 71
- 15.3 Handset controls — page 71
- 15.4 Powering the Base station — page 72
- 15.5 Homescreen overview — page 73
- 15.6 Multiple station operation — page 77
- 15.7 Adjusting Brightness and Contrast — page 77
- 15.8 Shared Brightness — page 77
- 15.9 Initial set up — page 78
- 15.10 Selecting a language — page 78
- 15.11 Switching on the AIS receiver — page 78
- 15.12 Selecting a network type — page 78
- 15.13 Entering your MMSI number — page 79
- 15.14 Entering your ATIS ID — page 80
- 15.15 Changing the radio region — page 82
- 15.16 Switching between high and low transmit power — page 82
- 15.17 GNSS (GPS) set up — page 82

15.1 Licensing

Prior to using this product for the first time, please check your national requirements for both operator and equipment licensing.

Important:

It is your responsibility to determine whether a license is required in your area before operating this equipment.

In many regions, the following authorizations are required from the relevant regulatory authority:

1. Ship Station VHF license;
2. Operator's license;
3. MMSI (Maritime Mobile Service Identity) number.

Licenses are typically issued by the National Regulatory Authorities (NRAs) in each country.

For a list of license and MMSI issuing authorities, refer to:
[p.143 – Licensing and MMSI issuing authorities](#)

Important:

It may also be necessary to obtain an Operator's license before an MMSI number can be obtained for your vessel. The DSC functions of the radio will not work without a valid MMSI number. For more information, refer to:
[p.29 – Obtain MMSI \(Maritime Mobile Service Identity\) number](#)

15.2 General radio operating rules


Important general rules to abide by when operating VHF radios.

1. Always identify yourself using a callsign when making calls or sending messages; however, do NOT use your personal name to identify yourself.
2. Do NOT transmit without the authority of the master of the vessel.
3. Do NOT transmit without the authority of a person with the authority to operate the radio.
4. Do NOT transmit a false distress call.
5. Do NOT turn off your radio before finishing all operations related to a distress or urgency.

6. Do NOT broadcast (i.e. transmitting without expecting a response).
7. Do NOT make unnecessary transmissions.
8. Avoid the use of profanities.
9. Only use marine frequencies.
10. Do NOT broadcast music.
11. Do NOT transmit a message intended for an address onshore in place of a phone.
12. Do NOT transmit a message which is intended for a shore-based station.
13. Maintain confidentiality in all conversations.

15.3 Handset controls

Overview of handset controls.

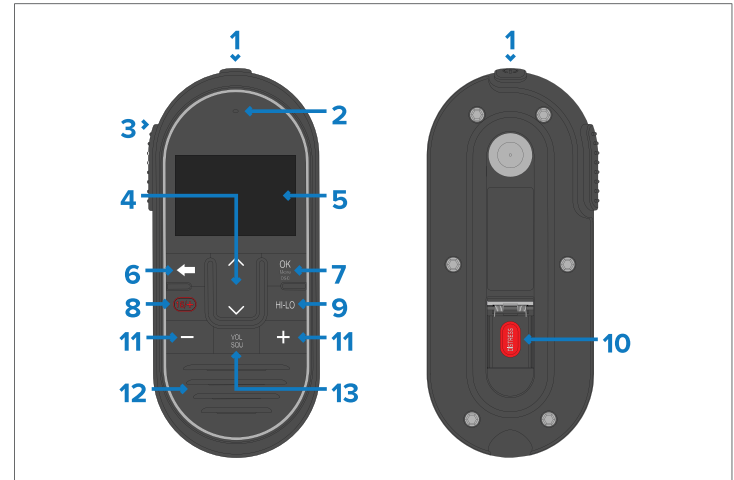

1. **[Power]**— Press to power the handset on. Press and hold for 3 seconds to power the handset off. Momentary press to access the shortcut list.
2. **Microphone location.**
3. **[PTT]**(Push to Talk) — Press and hold to send a voice message. Release to return to receive mode.


Note:

The maximum transmit time is limited to 5 minutes to prevent unintentional transmissions from occupying the VHF channel.

4. *[Channel Up]* and *[Channel Down]*— Changes to the next or previous VHF channel, also used to select or adjust options in the menu.
5. **LCD display.**
6. *[Back]*— Go to the previous menu / screen. Press and hold to return to the Homescreen.
7. *[OK / menu button]*— Press button to access menu / DSC functions and to confirm selections.
8. *[16 / +]*— When powered on press to switch between priority channels.
9. *[HI/LO]*— Press to switch between High (25 W) and Low (1 W) transmit power.
10. *[DISTRESS]*— Lift up the spring-loaded cover and press this button to make a DSC distress call.
11. *[Volume Up]* and *[Volume Down]*— Press to adjust volume or squelch intensity up or down.
12. *[Built-in speaker]*.
13. *[VOL/SQ]*— Press button to switch between volume and squelch controls.

Wireless speaker controls

The controls for the Wireless active speaker are shown below.

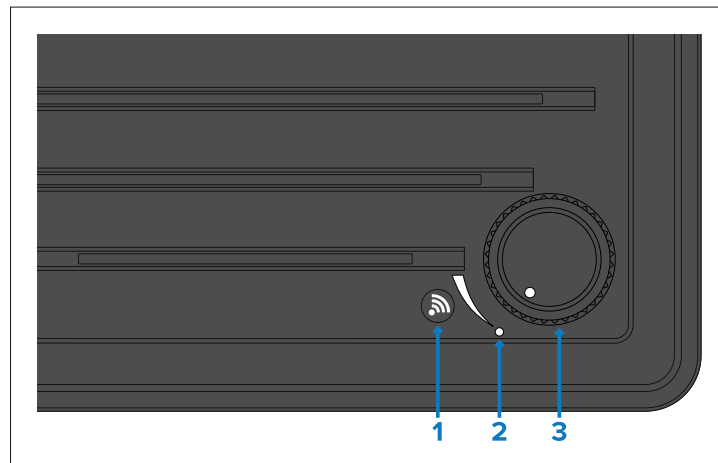

1. *[Pairing]* button — Press to place speaker in pairing mode. Pressing the *[Pairing]* button will also disconnect the speaker from the device it is currently connected to.
2. On/Off and volume control — Turn clockwise to turn on and then increase speaker volume. Turn counter-clockwise to decrease volume and then turn off.
3. LED diagnostics and status indicator.

15.4 Powering the Base station

The Base station automatically powers up when connected to a suitable power supply.

The Base station is powered down by unplugging from the power supply or, if applicable, by tripping it's circuit breaker.

Powering the handset

To power the Handset on and off follow the steps below.




With the Base station powered On:

1. Press and hold the *[Power]* button, located on the top of the Handset, for 2 seconds.
The Handset will power on.
2. To power off the Handset, press and hold the *[Power]* button for approximately 3 seconds, until the screen turns off.

15.5 Homescreen overview

The information below describes the on-screen characters and symbols which are shown on the Homescreen.

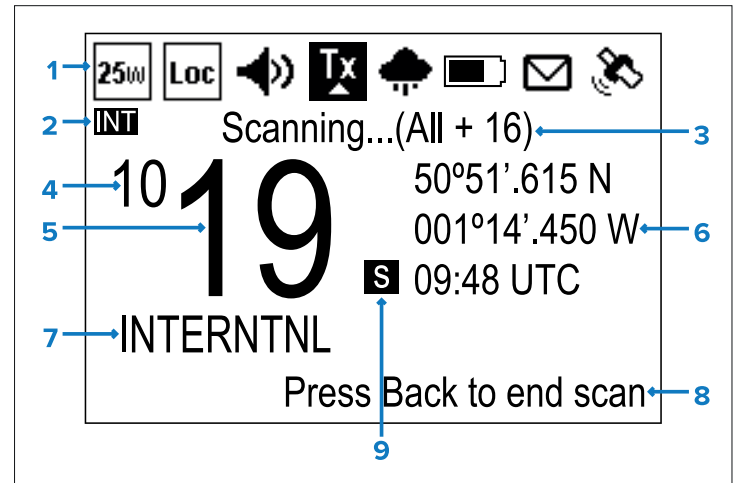

1. **Status bar** — The status bar displays symbols which indicate the current status of the unit.
2. **Frequency band** — Indicates which channel frequency band is in use:
 - USA — United States of America
 - INT — International
 - CAN — Canada
 - WX — Weather

Note:





Special licensing is required to receive USA and Canadian channel sets.








3. **Status text** — Indicates the current radio mode e.g.: ATIS Mode active, Weather Alert, Scan mode etc.
4. **New 4 digit channels** — Identifies the first 2 digits when the radio is set to one of the new 4 digit simplex channels.

5. **Channel** — Indicates the current channel number, or the last 2 digits when set to a 4 digit channel.
6. **Location / Time** or **Location / COG/SOG** — Depending on selection displays Location coordinates and current time or Location coordinates and current COG and SOG.
7. **Channel Name** — Indicates the name of the current channel.
8. **Optional text** — Provides extra user guidance.
9. **Channel type** — Indicates the type of channel:
 - **s** = Simplex — Simplex channels transmit and receive on the same frequency.
 - **d** = Duplex — Duplex channels use separate frequencies to transmit and receive.

Status bar symbols


The status bar is used to display symbols that indicate the radio's status.

Symbol	Name	Description
	Low power	Indicates the radio transmitters is in low power (1 watt) or high power (25 watt) mode
	High power	Indicates the radio transmitters is in low power (1 watt) or high power (25 watt) mode
	Local	Indicates the radio is in local reception mode, which decreases receiver sensitivity in high traffic areas to decrease unwanted reception
	Fog horn	Indicates that the radio is in Fog horn mode.

Symbol	Name	Description
	Transmit	Indicates the radio is currently transmitting (e.g. the PTT button is being pressed.)
	Receive	Indicates the radio is currently receiving a transmission.
	Weather	Indicates that the weather alerts mode is activated.
	Power supply voltage too low	Indicates the power supply to the radio is below the specified operating voltage.
	Power supply voltage too high	Indicates the power supply to the radio is above the specified operating voltage.
	DSC	Indicates that a DSC call has been received
	GNSS (GPS) Fix	Indicates if the radio has a GNSS (GPS) fix.



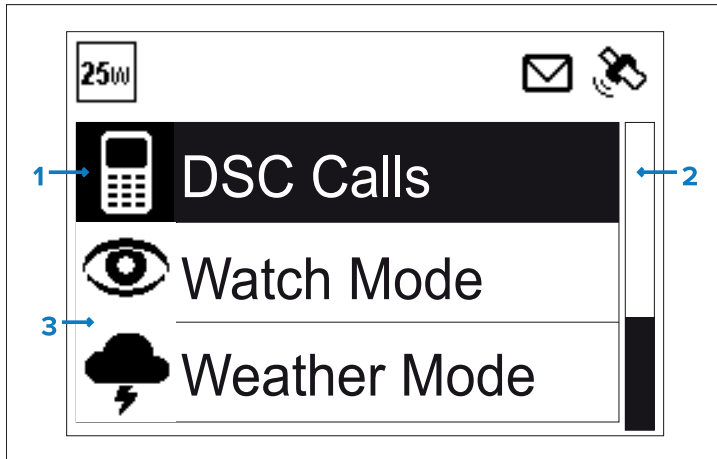


Main menu overview



The main menu is accessed by Pressing the [OK] button from the [Homescreen].



1. Currently selected menu item
2. Scroll bar
3. Menu items

The main menu includes the following items:

Symbol	Name	Sub-options
	* [DSC Calls]	<ul style="list-style-type: none"> • [Individual call] • [Distress call] • [Position request] • [Group call] • [All ships call] • [Phonebook] • [Call logs] • [Test call] • [DSC set-up]
	* [Watch Mode]	<ul style="list-style-type: none"> • [Dual watch] • [Triple watch] • [2nd priority channel]
	* [Weather Mode]	<ul style="list-style-type: none"> • [Weather Homescreen]
	* [Scan Mode]	<ul style="list-style-type: none"> • [All channels] • [All channels + 16] • [Saved channels] • [Saved channels + 16] • [Edit saved channels]
	** [Hail/Fog/Intercom]	<ul style="list-style-type: none"> • [Hailer] • [Fog horn] • [Intercom]

Symbol	Name	Sub-options
	** [Hailer/Fog horn]	<ul style="list-style-type: none"> [Hailer] [Fog horn]
	** [Intercom]	<ul style="list-style-type: none"> [Intercom]
	[Set-up]	<ul style="list-style-type: none"> [Display set-up] [Language] [Units] [Power output] [Sensitivity] [Noise cancelling (Tx)] ** [Wireless set-up] [Handset name] [Key beep] [Channel set-up] [Weather alerts] [GPS set-up] [DSC set-up] [AIS] [Network output] [ATIS set-up] [Maintenance]

Note:

* These menu items are not available when the radio has ATIS enabled, or if the radio has been pre-programmed in MARCOM-C mode.

** These menu items are only available when compatible accessories are connected to the radio.

Dealer set-up menu options

With authorised Dealer hardware connected the Dealer set-up menu will be available from the Main menu.

Menu item	Description	Options
[MMSI]	Enables editing or removal of the stored MMSI number.	Edit screen
[ATIS]	Enables editing or removal of the stored ATIS ID.	Edit screen
[Frequency bands]	Enables the dealer to select the frequency bands that are available to the user. Bands not selected will NOT be available in the Frequency band menu that is available to users.	<ul style="list-style-type: none"> International USA Canada Weather channels
[Feature on/off]	Enables the dealer to select whether certain features are available to the user. Features not selected will NOT be available to users.	<ul style="list-style-type: none"> Scan Dual / Tri watch Distant / Local Private channels

15.6 Multiple station operation

When more than one handset station is connected, other handsets become “repeater” displays and will mirror the display of the handset in use.

Other handsets cannot take control of the radio whilst another handset in use. Other handsets can take control of the radio after the last used handset has been inactive for 3 seconds or more.

15.7 Adjusting Brightness and Contrast

The LCD Brightness (Backlight) and Contrast can be adjusted using the Shortcuts list.

From any screen:

1. Press the *[Power]* button.
2. Select *[Backlight]* or *[Contrast]*.
3. Adjust the Backlight or Contrast to the desired level using the Handset's *[Channel Up]* *[Channel Down]* buttons.
4. Press the *[Back]* button to return to the previous screen.

The Backlight and Contrast settings can also be accessed from the Display set-up menu: *[Menu > Set-up > Display set-up]*.



15.8 Shared Brightness

Shared brightness enables simultaneous brightness adjustment of all products that are part of the same group. For example, these groups could be used to reflect the physical location of products on your vessel (e.g.: helm and flybridge).

The following products are compatible with shared brightness:

- Alpha-Series Performance Displays
- LightHouse 4 MFDs.
- LightHouse 3 MFDs using software v3.4.102 or later.
- SeaTalk NG Instrument displays and Pilot controllers.
- SeaTalk NG VHF DSC Radios.
- RMK-9 and RMK-10 remote keypads.

Any adjustments to the shared brightness level will be applied to all products assigned to the same group.

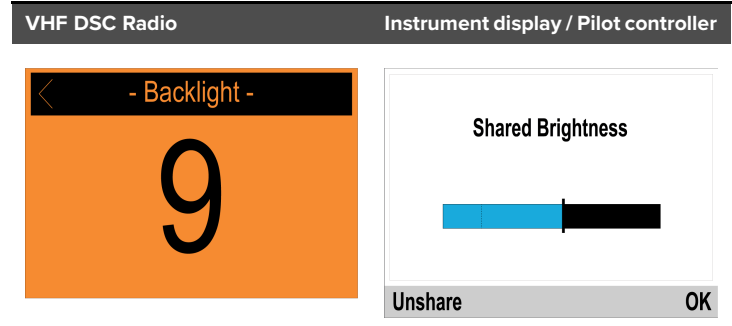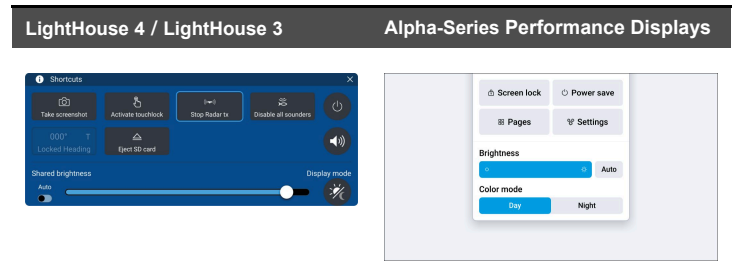

Multiple brightness groups can be configured. For example, these groups could be used to reflect the physical location of products on your vessel e.g.: helm and flybridge.

Shared brightness requires:

- All products to be compatible with the shared brightness function (see list of compatible products above).
- The *[Shared brightness]* setting set to *On* for all products in the brightness group.
- Products to be assigned to network groups.
- All the products in each group to be synchronized.

Note:

If any display in the system has automatic brightness enabled, the brightness of all displays in the same group will be automatically adjusted and synchronized, whenever a brightness adjustment is made on any of the displays in the group.

Enabling Shared Brightness

From the *[Display Set-up]* menu: (*[Menu > Set-up > Display Set-up]*).

1. Select *[Shared Brightness]*.
2. Select *[Shared Brightness]* again to enable Shared Brightness.
If Shared Brightness is already enabled then selecting this menu item will disable Shared Brightness.
3. Select *[Group]*.
4. Select the group that you want to assign the radio to.

Adjusting the Brightness setting will now change the brightness of all products assigned to that group.

15.9 Initial set up

Unless your radio has been pre-programmed; the first time you power-up your radio you will be requested to select certain options. With the exception of your MMSI and ATIS ID, you will also be requested to enter these options after a factory reset.

After acknowledging the startup screen, unless previously set you will be prompted to make the following selections:

1. *[Language selection]*— For a list of available languages, refer to: [p.78 — Selecting a language](#)
2. *[Turn on AIS reception]* (**Ray70 and Ray91 only**) — Enables the built-in AIS receiver. This step is only applicable to radios with a built-in AIS receiver. For more information, refer to: [p.78 — Switching on the AIS receiver](#)
3. *[Select network type]*— Selects which connection to transmit AIS and DSC information on, to connected equipment. This step is only applicable if the AIS receiver was turned on in the previous step. For more information, refer to: [p.78 — Selecting a network type](#)
4. *[Enter MMSI number]*— Required to enable DSC functions. This option is not required after a factory reset, or if the radio has been pre-programmed in MARCOM-C mode, or has ATIS enabled. If not already selected you will also be prompted to select your network type. For more information, refer to: [Entering an MMSI number](#)
5. *[Enter ATIS ID]*— Required when the radio will be used in the inland waterways of Europe. This step is only applicable if the radio has been pre-programmed in MARCOM-C mode. For more information, refer to: [Entering an ATIS ID](#)

6. *[Frequency band selection]*— Sets the relevant channels for your region. This step is not applicable if the radio has been pre-programmed in MARCOM-C mode. For more information, refer to: [p.82 — Changing the radio region](#)

15.10 Selecting a language

The language the radio uses can be changed.

From the Main menu:

1. Select *[Set-up]*.
2. Select *[Language]*.

The following languages available are:

- *[English]* (default) — English
- *[Español]* — Spanish
- *[Français]* — French
- *[Deutsch]* — German
- *[Italiano]* — Italian

3. Select the language that you want the radio to be set to.

The User interface language is changed to the selected language.

15.11 Switching on the AIS receiver

If your radio includes a built-in AIS receiver then it can be enabled and disabled as follows:

From the Main menu:

1. Select *[Set-up]*.
2. Select *[AIS]*.
3. Select *[On]* to switch the receiver on, or select *[Off]* to switch the receiver off.

15.12 Selecting a network type

When connecting your radio to other devices it is important to ensure you select the network connection and type that you want data to be transmitted over.

From the Main menu:

1. Select *[Set-up]*.

2. Select *[Network output]*.

The following network types are available:

- *[NMEA 2000]* (default)
- *[0183 High speed]*
- *[0183 Std speed]*

3. Select the network type relevant to the devices connected to your radio. If your radio is not connected to any other devices any option can be selected.

Selecting *[0183 Std speed]* will disable the built-in AIS receiver, where applicable.

The *[Network output]* setting determines the baud rate of the NMEA 0183 input:


Network output setting	NMEA 0183 input baud rate
NMEA 2000	Standard speed (4,800)
NMEA 0183 High Speed	High speed (38,400)
NMEA 0183 Standard Speed	Standard speed (4,800)

15.13 Entering your MMSI number

To program your radio with your MMSI number follow the steps below.

Note:

- In some regions (such as the USA), the MMSI and Static Data must be entered **only** by an authorized Raymarine dealer or other appropriately-qualified marine communications equipment installer.
- The MMSI number can only be entered when the radio is configured to use the **EUR** (Europe) channel set.

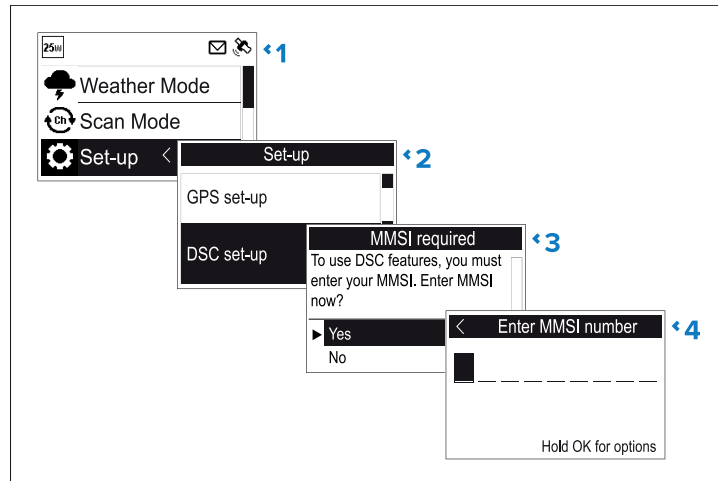

From the Set-up menu: (*[Menu > Set-up]*)

1. Select *[DSC set-up]*.
2. Select *[MMSI]*.

The **MMSI required** message will be displayed if no MMSI number has been set.

3. Select *[Yes]*.
4. Use the *[Rotary knob]* or the *[Channel Up]* and *[Channel Down]* buttons on a Raymic handset to cycle through the available numbers and press *[OK]* to confirm each number and move to the next digit.

Important:


You should only enter the unique 9 digit MMSI number provided by your licensing authority.

MMSI numbers starting with a '0' are only used for groups and coast stations. If you enter a '0' as the first digit the radio will assume you are entering a coast station MMSI and automatically assign a '0' as the second digit; this is to ensure a group MMSI is not entered as the radio's unique MMSI.

5. Press the *[Back]* button at any time to edit digits you have already entered.

6. Press and hold the *[OK]* button to display options to *[Move cursor]* back and forward through the digits.
7. When the final digit is confirmed select *[DONE]*.

Example

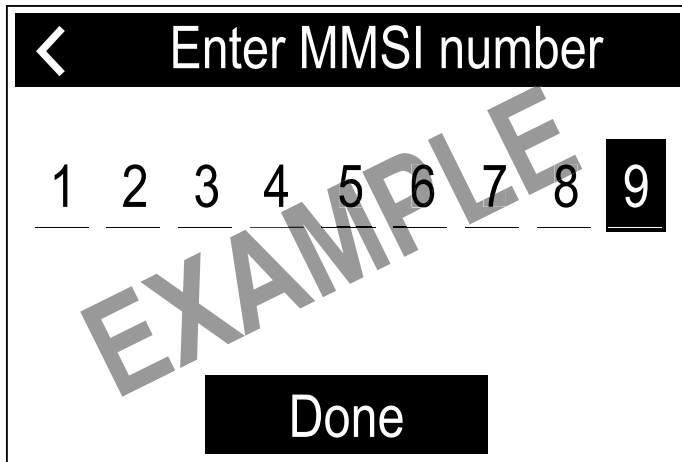


8. The MMSI is displayed onscreen, check that it is correct, then:
 - i. Select *[Yes – Save]*, or
 - ii. if the number entered is not correct select *[No – Retry]*.

Caution: MMSI and ATIS ID entry

- You can only enter the MMSI number and ATIS ID once!
- If you store an incorrect MMSI number or ATIS ID in your product, it will have to be reset by an authorized dealer.
- In some regions (such as the USA), the MMSI and Static Data must be entered **only** by an authorized Raymarine dealer or other appropriately-qualified marine communications equipment installer.
- The MMSI number and ATIS ID can only be entered when the radio is configured to use the **EUR** (Europe) channel set.

15.14 Entering your ATIS ID

A unique ATIS ID must be entered before ATIS mode can be enabled. The ATIS ID can only be entered when the **EUR** (Europe) channel set is selected.

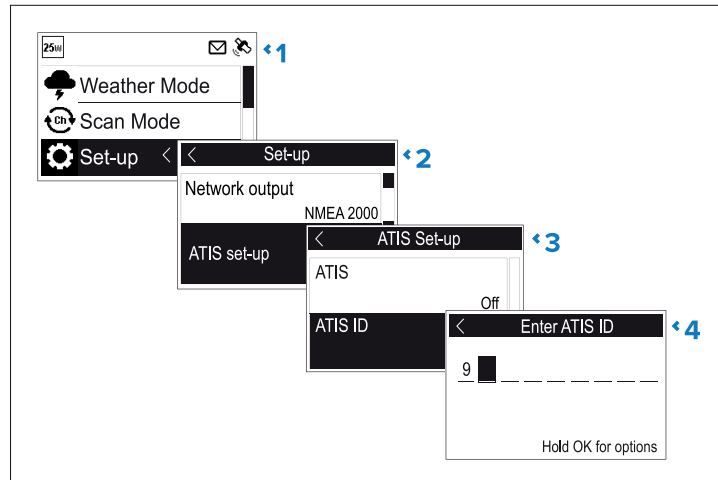

From the Main menu.

1. Select *[Set-up]*.
2. Select *[ATIS set-up]*.
3. Select *[ATIS ID]*.

Not set will be displayed if no ATIS ID has been set.

The first digit is set to a '9' and cannot be changed, this is because all ATIS IDs start with a '9'.


As most ATIS IDs consist of a '9' followed by your 9 digit MMSI number; if your radio already has an MMSI number the ATIS ID will be pre-filled in this format.

4. If the ATIS ID has been pre-filled, check it carefully against your issued ATIS ID.
5. To enter your ATIS ID manually, use the *[Rotary knob]* or the *[Channel Up]* and *[Channel Down]* buttons on a Raymic handset to cycle through the available numbers and press *[OK]* to confirm each number and move to the next digit.

You should only enter the unique 10 digit ATIS ID provided by your licensing authority.

6. Press the *[Back]* button at any time to edit digits you have already entered.
7. Press and hold the *[OK]* button to display options to *[Move cursor]* back and forward through the digits.
8. When the final digit is confirmed select *[DONE]*.

Example

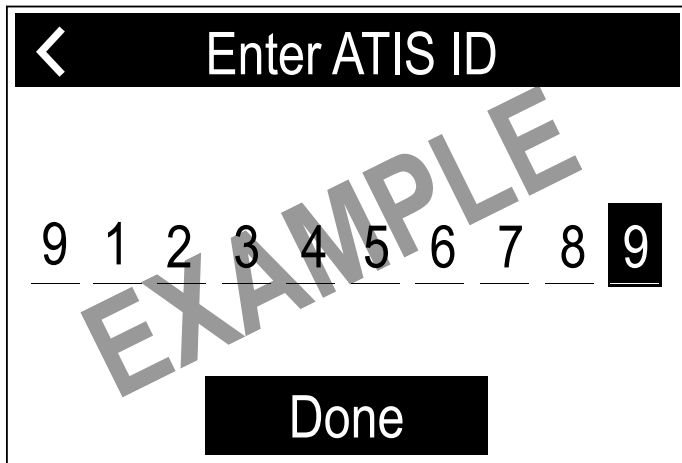

9. The ATIS ID is displayed onscreen, check that it is correct, then:
 - i. Select *[Yes – Save]*, or
 - ii. if the number entered is not correct select *[No – Retry]*.

Caution: MMSI and ATIS ID entry

- You can only enter the MMSI number and ATIS ID once!
- If you store an incorrect MMSI number or ATIS ID in your product, it will have to be reset by an authorized dealer.
- In some regions (such as the USA), the MMSI and Static Data must be entered **only** by an authorized Raymarine dealer or other appropriately-qualified marine communications equipment installer.
- The MMSI number and ATIS ID can only be entered when the radio is configured to use the **EUR** (Europe) channel set.

Enabling and disabling ATIS mode

ATIS (Automatic Transmitter Identification System) is a marine VHF radio system used for identifying vessels on some European inland waterways. A unique ATIS ID must be entered before ATIS mode can be enabled.

Note:

- ATIS is only available when the **EUR** (Europe) channel set is selected.
- A unique ATIS ID must be entered before ATIS mode can be enabled; refer to: [Entering your ATIS ID](#)

With ATIS mode enabled, the radio's region will be fixed to the EUR (Europe) channel set, and the following functions are disabled:

- DSC functions
- Watch Mode
- Scan Mode
- High / low power is restricted on certain channels

From the Main menu.

1. Select *[Set-up]*.
2. Select *[ATIS set-up]*.

3. Select *[ATIS]*.


If no ATIS ID has been set, you will be requested to enter one before ATIS mode is enabled.

4. If an ATIS ID has already been set, select *[On]* to enable ATIS mode, or *[Off]* to disable ATIS mode.

15.15 Changing the radio region

Prior to using the radio you must set the Frequency band to the region your radio will be used in.

From the Main menu:

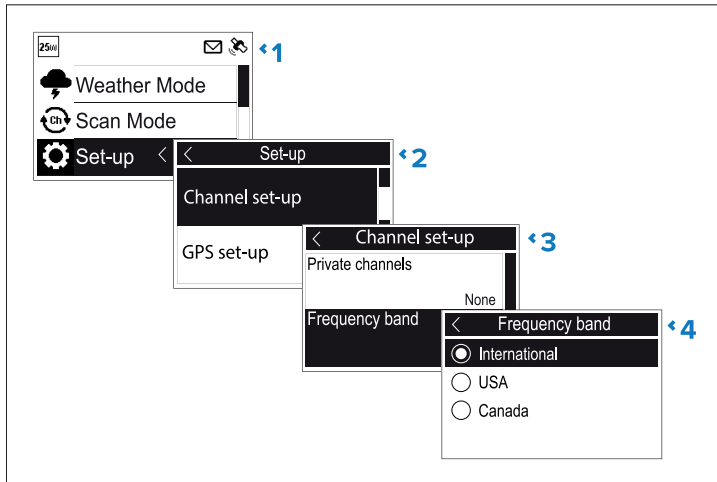

1. Select *[Set-up]*.

2. Select *[Channel set-up]*.

3. Select *[Frequency band]*.

4. Select the relevant region from the list.

The available options are:

- *[International]*
- *[USA]*
- *[Canada]*



An icon is displayed on the Homescreen that identifies which region has been set.

15.16 Switching between high and low transmit power

You can switch transmit power using the HI/LO button on the Handset / Fistic.

The transmit power can also be changed from the *[Set-up]* menu: *[Menu > Set-up]*

1. Select *[Power output]*.

Selecting the Power output option will switch between High (25 watt) and Low (1 watt) power output.

15.17 GNSS (GPS) set up

If your radio has a GNSS (GPS) position fix then the following information can be displayed:

- latitude
- longitude
- UTC time
- COG and SOG

When position data is available the satellite icon is displayed onscreen.

If no position data is available then the latitude, longitude and time can be entered manually so that it can be included in DSC distress transmissions.

Position data received from other vessels can be displayed on a connected Raymarine® multifunction display.

Enabling and disabling the internal GNSS (GPS)

From the *[GPS set-up]* menu: *[Menu > Set-up > GPS set-up]*

1. Select *[Integrated GPS]*.

Selecting *[Integrated GPS]* will switch the radio's internal GNSS receiver *On* and *Off*.

GNSS data source

Your radio includes a built-in GNSS (GPS) receiver, which can be used to obtain position data. Your radio can also use position data from a GNSS (GPS) receiver connected to the same SeaTalk NG or NMEA 2000 network.

If your radio's internal receiver cannot obtain a position fix or if your radio's internal receiver is switched off, a network data source for position data shall be used instead, if available.

Manual GPS source missing or no position data

If the manual GPS source is missing, no position data is available or position data becomes unavailable; after 10 minutes an audible warning is sounded, the GNSS (GPS) icon flashes and the **Manual GPS source missing / No position data** message is displayed.

Once the warning has been acknowledged the GNSS (GPS) icon will continue to flash. The **Manual GPS source missing / No position data** warning is repeated every 4 hours if position data is still unavailable, has not been entered manually or has been entered manually but over 23.5 hours ago.

If position data has been entered manually the display alternates between displaying the manual position and time and the **Manual Position** message. If the manually entered position has not been updated in the last 4 hours the GNSS (GPS) icon flashes and an audible warning is sounded. This warning will be repeated every 4 hours until position is manually updated or position data becomes available.

Where no position data is available or has not been manually updated for 23.5 hours then position data will change to '9's and time will change to '8's.

Entering position manually

If GNSS (GPS) position data is not available it can be entered manually.

Select *[Set manual position]* from the *[GPS set-up]* menu: *[Menu > Set-up > GPS set-up > Set manual position]*.

1. Use the *[Channel Up]* and *[Channel Down]* buttons to cycle through the available numbers and press *[OK]* to confirm each number and move to the next digit.
2. When the relevant information has been entered select *[OK]* to confirm the details.

Selecting (GNSS) GPS information to display

You can change the GNSS (GPS) data that is displayed on the Homescreen.

From the *[GPS set-up]* menu: *[Menu > Set-up > GPS set-up]*.

1. Select *[Homescreen display]*.

Selecting Homescreen display will switch between *[Location & time]* and *[Location & COG/SOG]*.

The *[Homescreen display]* option is also available from the *[Display set-up]* menu: *[Set-up > Display set-up > Homescreen display]*.

Setting time format and offset

You can change the Format and Offset that is applied to the time displayed onscreen.

From the *[Units]* menu: *[Menu > Set-up > Units]*.

1. Select *[Time format]*.
2. Select the desired format:
 - 12 hour
 - 24 Hour (default)
3. Select *[Time offset]*.
4. Adjust the offset to the desired value using the *[Channel Up]* and *[Channel Down]* buttons.
5. Select *[OK]* to confirm the selection.

CHAPTER 16: WIRELESS HANDSET STATIONS

CHAPTER CONTENTS

- 16.1 Wireless handsets — page 85
- 16.2 Connecting a wireless handset to the hub — page 85
- 16.3 Connecting the wireless speaker to the Wireless handset — page 87
- 16.4 Wireless set-up menu options — page 88

16.1 Wireless handsets

Wireless handsets are compatible with the Ray90 and Ray91 VHF DSC radios. Using the optional accessories you can create up to 3 fully functional wireless handset stations.

As a minimum the Wireless hub and Wireless handset accessories are required to create a wireless handset station. Additionally a Wireless speaker can be connected to each Wireless handset.

After connecting your Wireless hub to your Ray90 / Ray91 Base station, the process for setting up a wireless handset station should be:

1. Fully charge the Wireless handset.
2. Connect the Wireless handset to the Wireless hub.
3. If required, connect a Wireless speaker to the Wireless handset.



Warning: Retain a wired handset station


A wired handset station should always be connected and available.

Wireless handset charging

When inserted into the wireless handset charging holster, the wireless handset will be charged using inductive charging.

Attention

Ensure your wireless handset is fully charged before use.

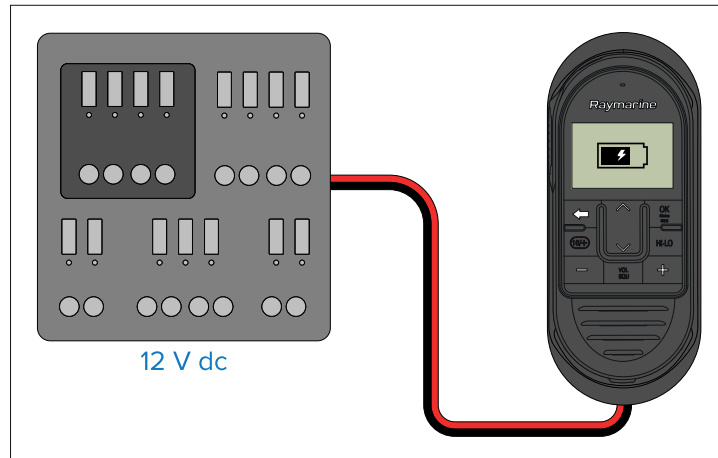

Symbol

Description



Charging

Whilst charging, the battery symbol will gradually visibly “fill up”, indicating its charging completion.



Charged

Once fully charged, the “full” battery symbol visibly reflects the full charge status.


With the Handset powered on, the battery symbol will be displayed in the status bar at the top of the screen.

With the handset powered off, the battery symbol is displayed full-screen.

16.2 Connecting a wireless handset to the hub

Wireless handsets must be connected to the radio via a Wireless hub.

When the Wireless handset is powered on for the first time you will need to connect it to a Wireless hub.

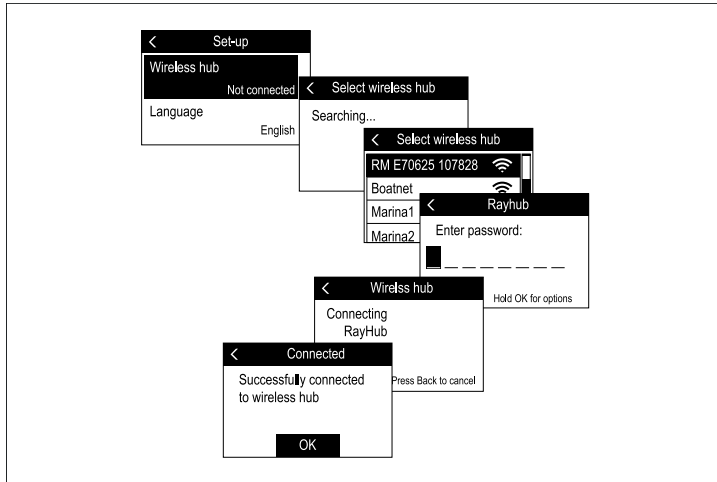

1. Select *[Wireless hub]*.
The handset will display a list of wireless devices in range.
2. Select your Wireless hub from the list.
The Wireless hub's default name is 'RM' followed by the 6 digit part number and 7 digit serial number of the radio that the Wireless hub is connected to (e.g.: Radio part number: E70625 and serial number: 1070828 = Hub name: RM E70625 107828).
3. Enter the password.
You can check the Wireless hub's password using a Wired handset by selecting: [Menu > Set-up > Wireless set-up > Wireless hub set-up > Password].
The handset will now connect to the Wireless hub.
4. Select *[OK]*.

Checking the Wireless hub's password

You can check the Wireless hub's password at anytime using a Wired handset.

1. Select *[Menu]*.
2. Select *[Set-up]*.
3. Select *[Wireless set-up]*.
4. Select *[Wireless hub set-up]*.
5. Select *[Password]*.

The current password is displayed.

Changing your wireless hub's password

If desired you can change the Wireless hub's default password using a Wired handset.

1. Select *[Wireless hub set-up]* from the *[Wireless set-up]* menu: *([Menu > Set-up > Wireless set-up > Wireless hub set-up]).*
2. Select *[Password]*.
3. Use the *[Channel Up]*, *[Channel Down]* and *[OK]* buttons to change the default password.

The password can use up to 8 characters. For the most secure password use a variety of upper and lower case letters, numbers and symbols.

4. When finished, select *[OK]* to confirm.
5. Re-connect your Wireless handset to the hub following the procedure: [p.85 — Connecting a wireless handset to the hub](#)

Note:

- While the password change is being applied the *[Wireless set-up]* menu will be unavailable.
- Ensure you make a note of your Hub's new password.

Changing the hub's wireless channel

If you experience interference with your wireless handset station, you can change the wireless channel used by the hub to a channel that is less congested with wireless signals.

You must use a Wired handset to change the Hub's wireless credentials.

1. Select *[Wireless hub set-up]* from the *[Wireless set-up]* menu: *([Menu > Set-up > Wireless set-up > Wireless hub set-up]).*
2. Select *[Wi-Fi channel]*.
3. Select a wireless channel.


Channels 1 to 13 are available; use a wireless network analyzer to find the least-congested channel. The preferred wireless channels are 1, 6 and 11, as these overlap with the fewest other wireless channels. However, if these channels are congested then try others.

Note:

- While the channel change is being applied the *[Wireless set-up]* menu will be unavailable.
- Your Wireless handset will automatically reconnect to the hub using the new channel.

16.3 Connecting the wireless speaker to the Wireless handset

You can connect a Wireless speaker to your Wireless handset.

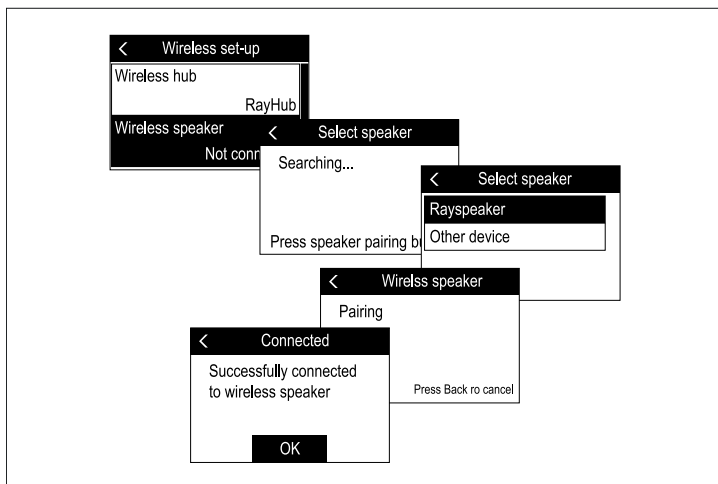

1. Power on the Wireless speaker.
2. Press the *[Pairing]* button on the front of your Wireless speaker to pair with a Wireless handset for the first time.
3. Using the Wireless handset, select *[Wireless speaker]* from the *[Wireless set-up]* menu: *[Menu > Maintenance > Wireless set-up]*
The handset will search for available devices.
4. Select your Wireless speaker from the list.
The Wireless handset will now pair with the Wireless speaker.
5. Select *[OK]*.

The Wireless handset's audio will now be heard through the Wireless speaker.

Note:

- You can only output audio to 1 speaker from the same handset.
- If the pairing is unsuccessful, power the wireless speaker off and then back on again and repeat the process.

Disconnecting a Wireless speaker

To disconnect your Wireless speaker from the Wireless handset follow the steps below:

With the speaker connected to the handset:

1. Press the *[Pairing]* button on the front of the speaker.
2. Once disconnected the speaker can be connected to any Wireless handset by following the procedure found within the following section:

[p.87 — Connecting the wireless speaker to the Wireless handset](#)

16.4 Wireless set-up menu options

The Wireless set-up menu is available when a Wireless hub is connected.

Menu item	Description	Option
<i>[Wireless hub]</i>	Enables you to search for and connect to a Wireless hub.	List of available networks.
<i>[Wireless hub set-up]</i>	Provides access to the Wireless hub's settings.	<ul style="list-style-type: none"> • <i>[Wireless hub name]</i> • <i>[Password]</i> • <i>[Wi-Fi channel]</i>
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Note: The Wireless hub set-up menu can only be accessed using a Wired handset.</p> </div>		
<i>[Wireless speaker]</i>	Enables you to search for and connect to a Wireless speaker.	Search for devices.

Wireless hub set-up menu options

Note:
The Wireless hub set-up menu can only be accessed using a Wired handset.

Menu item	Description	Options
<i>[Hub name]</i>	The Wireless hub's default name is 'RM' followed by the 6 digit part number and 7 digit serial number of the radio that the Wireless hub is connected to (e.g.: Radio part number: E70625 and serial number: 1070828 = Hub name: RM E70625 107828).	Edit hub name
<i>[Password]</i>	You can change the password to any alphanumeric (including standard symbols) password using up to 8 characters.	Change password
<i>[Wi-Fi channel]</i>	Enables you to change the wireless (2.4Ghz) channel used by the Wireless hub.	Channels 1 to 13

Wireless handset not connected menu

When a connection to a Wireless hub is not available or when a connection is cancelled, the following menu options will be displayed on the Handset.

Menu item	Description	Options
<i>[Wireless hub]</i>	Enables you to search for and connect to a Wireless hub.	List of available networks.
<i>[Language]</i>	Enables selection of the user interface language.	<ul style="list-style-type: none"> • <i>[English]</i> — English • <i>[Español]</i> — Spanish • <i>[Français]</i> — French • <i>[Deutsch]</i> — German • <i>[Italiano]</i> — Italian
<i>[Backlight]</i>	Provides access to the Backlight level	<ul style="list-style-type: none"> • <i>[1 to 9]</i> • <i>[Off]</i>

Menu item	Description	Options
<i>[Contrast]</i>	Provides access to the Contrast level	<ul style="list-style-type: none">• <i>[1 to 10]</i>
<i>[Key beep]</i>	Enables adjustment of the audible beep when pressing buttons.	<ul style="list-style-type: none">• <i>[Off]</i>• <i>[Quiet]</i>(default)• <i>[Loud]</i>

CHAPTER 17: DIGITAL SELECTIVE CALLING (DSC)

CHAPTER CONTENTS

- 17.1 Digital Selective Calling (DSC) — page 91
- 17.2 Distress calls — page 92
- 17.3 Urgency calls — page 95
- 17.4 Safety calls — page 96
- 17.5 Individual (routine) calls — page 96
- 17.6 Group calls — page 97
- 17.7 Position requests — page 98
- 17.8 Phonebook — page 98
- 17.9 Call logs — page 99
- 17.10 Test calls — page 100
- 17.11 DSC set-up menu options — page 100

17.1 Digital Selective Calling (DSC)

Traditional VHF radio systems require users to listen until someone speaks, and then determine whether the call is for them. DSC ensures that calls are received by alerting or announcing the intended recipient(s) first so they are ready to listen to the subsequent message on the relevant channel.

DSC is part of the Global Maritime Distress and Safety System (GMDSS), a maritime communications system for emergency and distress messages and all types of routine communications such as ship-to-ship or ship-to-shore.

DSC is a digital signalling system, which operates on VHF channel 70. DSC calls include other data such as your vessel's identification number, purpose of the call, your position and the channel you want to speak on.

DSC calls can be divided into 4 categories and are prioritized as shown below:

1. Distress
2. Urgency
3. Safety
4. Routine

Distress

A Distress call should only be used when there is imminent danger to a vehicle or person that requires immediate assistance. When making a distress call the following information is transmitted to all stations within range:

- Vessel MMSI number.
- Vessel position (must be input manually if no position data is available or the manual GPS source is missing).
- Local time (must be input manually if no position data is available or the manual GPS source is missing).
- Nature of the distress (when designated).
- Transmission frequency.

The call is automatically repeated at approximately 4 minute intervals until it is acknowledged either by a coast radio station (CRS) or a vessel within radio range. Distress calls must be followed by a MAYDAY call on priority channel 16.

Urgency

An urgency call should be used when there is danger to a vehicle or person that does not require immediate assistance. When making an urgency call the following information is transmitted to all stations within range:

- Vessel MMSI number.
- Vessel position (must be input manually if no position data is available or the manual GPS source is missing).
- Local time (must be input manually if no position data is available or the manual GPS source is missing).
- Transmission frequency.

Once an urgency call is sent it must be followed with a PAN PAN voice message on channel 16 and include the necessary details.

Safety

A safety call should be used when there is an important navigational warning or meteorological forecast/broadcast. Safety alerts can also be used for communications during search and rescue operations. When making a safety call the following information is transmitted to all stations within range:

- Vessel MMSI number.
- Vessel position (must be input manually if no position data is available or the manual GPS source is missing).
- Local time (must be input manually if no position data is available or the manual GPS source is missing).
- Transmission frequency.

Once a safety call is sent it must be followed with a SECURITE voice message on channel 16 and include the necessary details.

Individual (routine)

Routine calls are used for contacting other vessels, marinas, or shore stations.

Routine calls are made on channel 70 using the dedicated Maritime Mobile Service Identity (MMSI) number of the station to be contacted, selecting a VHF working channel and sending the call. Both radios automatically switch to the chosen channel for conversation.

Routine calls can also be made to groups — When groups of ships need the same information (yacht races, club rallies etc.) a special group-call identity can be used to enable restricted broadcast calls.

Note:

To transmit precise position data, the radio must be connected to a GNSS (GPS) receiver. Otherwise, regular manual position updating is required.

17.2 Distress calls

Making a designated distress call

When making a Distress call you can specify the nature of the distress, if GNSS (GPS) data is not available you must also specify your coordinates.

Note:

Your radio must have an MMSI number saved before DSC functions can be used.


From the Distress call menu: *[Menu > DSC Calls > Distress call]*

1. Select a distress type from the list.
 - If your radio is receiving a valid GNSS (GPS) position then the distress type and coordinates are displayed on-screen, otherwise you will be prompted to enter your position coordinates manually.
2. If prompted, enter your position coordinates and local time using the *[Channel Up]* and *[Channel Down]* buttons to enter the relevant details.
3. When complete press the *[OK]* button.
4. Follow the steps for *'Making a Distress Call'* to transmit the distress.

Making a Distress call

In an emergency you can make an automatic DSC distress call.

The *[DISTRESS]* button is located on the rear of the handset.

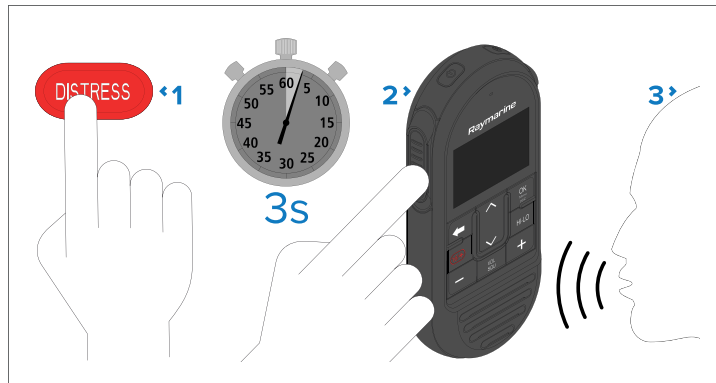

1. Open the *[DISTRESS]* button's cover and then press and hold the *[DISTRESS]* button for 3 seconds.

Once the button is pressed a 3 second count down will begin, when the count down reaches zero the DSC distress call is transmitted.

The Distress call is repeated automatically until it is acknowledged.

2. Press and hold the *[PTT]* button, then slowly and clearly speak the details of the distress in the following format:

MAYDAY, MAYDAY, MAYDAY

This is — state name of vessel 3 times

MAYDAY — state name of vessel 1 time

My position is — state latitude and longitude, or true bearing and distance from a known point

I am — state nature of distress e.g. sinking, on fire etc.

I have — state number of persons on board and any other information — drifting, flares fired etc.

I REQUIRE IMMEDIATE ASSISTANCE

OVER

3. Release the *[PTT]* button.

Making a Mayday call

In an emergency you can also make a Mayday call following the instructions below.

1. Press the *[16 PLUS]* button.
2. Press and hold the *[PTT]* button.

3. Slowly and clearly speak the details of the distress:

MAYDAY, MAYDAY, MAYDAY

This is — state name of vessel 3 times

MAYDAY — state name of vessel 1 time

My position is — state latitude and longitude, or true bearing and distance from a known point

I am — state nature of distress e.g. sinking, on fire etc.

I have — state number of persons on board and any other information — drifting, flares fired etc.

I REQUIRE IMMEDIATE ASSISTANCE

OVER

4. Release the *[PTT]* button.
5. If an acknowledgement is not received then repeat steps 2 to 4 above.

Cancelling a distress call before transmission


To cancel a distress call before it is transmitted follow the steps below:

1. Release the *[DISTRESS]* button before the countdown timer completes.

When the button is released you will be returned to normal operation.


Cancelling a distress call after transmission

A distress call can be cancelled after it has been transmitted.

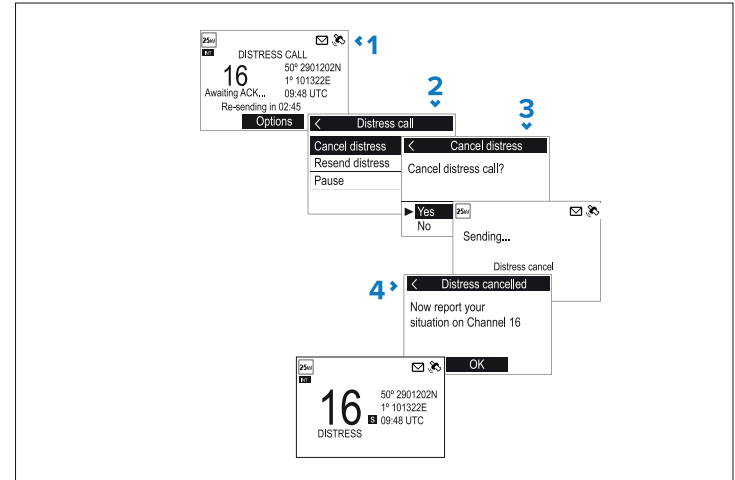

1. Select *[Options]*.
2. Select *[Cancel distress]*.
3. Select *[Yes]* to confirm cancellation.
4. Select *[OK]*.
5. Press and hold the *[PTT]* button and make a broadcast to all stations giving your vessel's name, call sign and MMSI number and cancel the false distress alert

Example: "All, Stations, All Stations, All Stations. This is: NAME, CALL SIGN, MMSI ID, POSITION. Cancel my distress alert of: DATE, TIME, NAME, CALL SIGN"

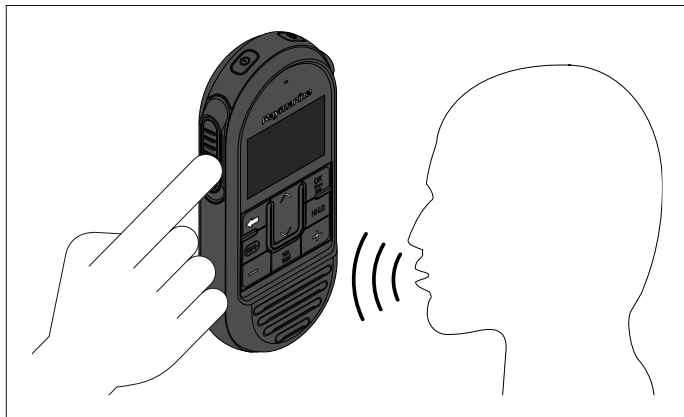


6. Repeat the broadcast described in step 5.

Receiving a distress call

It is expected that only a Coast Radio Station (CRS) will acknowledge DSC distress calls and will act as the coordinator for the rescue operation.

When a distress call is received an alarm is sounded at full volume and the LCD displays information relating to the distress.

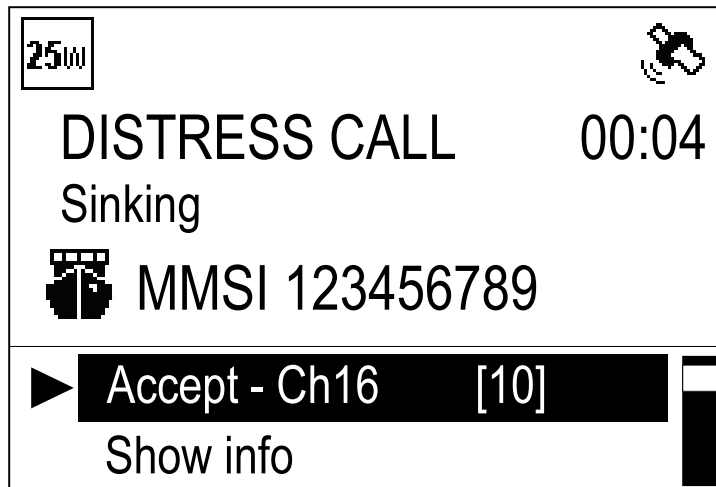

If the *[Auto channel change]* function is enabled; 10 seconds after receipt of a distress call the radio will automatically re-tune to channel 16. Otherwise the user is prompted to change channel manually.

The details of the distress call are recorded in the distress log and the envelope icon will flash to let you know a message has been received. When connected to a **Raymarine**® multifunction display (MFD) the position data from the distress call can also be displayed in the Chart application.

When the received distress call is acknowledged by the CRS or by another station the radio will resume normal operation.

Ignoring a distress call

You can ignore a distress call by muting the alarm and cancelling the distress call screen.

If your radio is already tuned to the priority channel then the *[Ignore]* option will not be available.

With an incoming distress call displayed.

1. Select *[Ignore]* from the options displayed.
Normal operation is resumed.

Acknowledging a distress call

Distress calls must only be acknowledged if the call continues without acknowledgement from a CRS, you are close enough to the distressed vessel to be of assistance and are prepared to relay the distress to a CRS by any means possible. Class D DSC radios are forbidden from automatically acknowledging distress calls. Acknowledgement must only be made by voice message on channel 16.

After receiving a distress call that has gone unanswered:

1. Switch to channel 16 to listen for the distress voice message.
2. Wait for the CRS to acknowledge the call.
3. If the distress call is not acknowledged by another station then acknowledge the call as follows:

MAYDAY

(MMSI of the vessel in distress)

Name of vessel in distress <repeated 3 times>

Call sign of the vessel in distress

This is <MMSI of your vessel>, <name of your vessel repeated 3 times> <call sign of your vessel>

RECEIVED MAYDAY

4. You **MUST** then notify the shore authorities by any means possible to relay the distress call.

Manually relaying a distress call

A distress relay should only be sent if: the person or vehicle in distress is unable to transmit the distress call itself, for example red flares sighted at night or the person or vehicle in distress is out of range of a CRS and you have already acknowledged the distress by voice message. You can also relay a received distress relay alert manually if it goes unanswered.

1. Switch to channel 16
2. Slowly and clearly speak the details of the distress:

MAYDAY RELAY, MAYDAY RELAY, MAYDAY RELAY

This is <MMSI of your vessel, name of your vessel repeated 3 times and your call sign>

Received the following MAYDAY from <MMSI of vessel in distress, name of vessel in distress, call sign of vessel in distress>

Message begins

Message received from vessel in distress or details of the distress

Message ends

OVER

Distress relays sent by other stations

When a Coast Station or another vessel, has received, and acknowledged a DSC distress alert it may transmit a distress alert relay to other vessels in the immediate area.

Distress relays sent from other stations can be received by the radio.

The radio cannot re-send a distress relay automatically. If required you can relay a distress relay message manually.

If a distress relay is sent specifically to the radio then it can be acknowledged, otherwise acknowledgement is not required.

Acknowledging a distress relay sent to your vessel

If a distress relay is specifically sent to your vessel this will be because the sender deems you to be in a position to assist in the rescue. The distress relay information is displayed onscreen.

When a distress relay is received:

1. Select *[Show info]* from the options to review the relevant details.
2. If the distress relay was sent individually to you, select *[Accept]* to send a distress relay acknowledgement.
3. Ensure the radio is tuned to channel 16.

Note:

Distress relay calls can only be acknowledged automatically when sent individually to you.

17.3 Urgency calls

Making an urgency call

An urgency call should be used when there is danger to a vehicle or person that does not require immediate assistance. Urgency calls are transmitted to all stations.

From the *[All ships call]* menu: *[Menu > DSC Calls > All ships call]*.

1. Select *[Urgency]*.

- Select the channel for subsequent communication.
The call is transmitted. Once the call has been successfully transmitted 'Sent' is displayed onscreen and the channel is changed to the specified channel.
- Press the *[OK]* button.
- Press and hold the *[PTT]* button and speak the following message:
PAN PAN, PAN PAN, PAN PAN

ALL STATIONS, ALL STATIONS, ALL STATIONS

This is — MMSI of your vessel, name of your vessel repeated 3 times, call sign of your vessel.

Position — Your vessel's position.

Reason for call — State the reason for the call and include all information which will assist in the rescue.

OVER

Receiving an urgency call

When an urgency call is received:

- Select *[Show info]* from the options to review relevant call details.
- Select *[Accept]* at any time to accept the call.
If auto channel change is turned on then the channel will automatically change after 10 seconds.
The radio is re-tuned to the specified channel.
- Listen for the urgency call message.

17.4 Safety calls

Making a safety call

Safety calls should be used when there is an important navigational warning or meteorological forecast/broadcast. Safety alerts can also be used for communications during search and rescue operations.

From the *[All ships call]* menu: *[Menu > DSC Calls > All ships call]*.

- Select *[Safety]*.
- Select the channel for subsequent communication.
The call is transmitted. Once the call has been successfully transmitted 'Sent' is displayed onscreen and the channel is changed to the specified channel.
- Press the *[OK]* button.

- Press and hold the *[PTT]* button and speak the following message:
SECURITE, SECURITE, SECURITE
ALL STATIONS, ALL STATIONS, ALL STATIONS
This is — MMSI of your vessel, name of your vessel repeated 3 times, call sign of your vessel.
Position — Your vessel's position.
Reason for call — state the reason for the safety call.
OUT

Receiving a safety call

When a safety call is received:

- Select *[Show info]* from the options to review relevant call details.
- Select *[Accept]* at any time to accept the call.
If auto channel change is turned on then the channel will automatically change after 10 seconds.
The radio is re-tuned to the specified channel.
- Listen for the safety call message.

17.5 Individual (routine) calls

Individual calls can be made to contacts saved in your Phonebook or to any station by manually entering an MMSI number.

Note:

When calling a coast station there is no need to select a channel for communication.

If a call cannot be accepted then a reason code is displayed.

Code	Reason
No Reason	No reason given
Congestion	Congestion at maritime switching centre
Busy	Station Busy
Queue	Queue indication
Barred	Station barred

Code	Reason
No operator	No operator available
Unavailable	Operator temporarily unavailable
Disable	Equipment disabled
Unable Ch	Unable to use proposed channel
Unable mode	Unable to use proposed mode

Making an Individual call

From the *[Individual Call]* menu: *[Menu > DSC Calls > Individual Call]*.

1. Select *[Phonebook]* to make a routine call to a contact saved in your Phonebook, or
2. Select *[Recent Calls]* to make a routine call to a contact that you have called recently, or
3. Select *[Enter MMSI]* to manually enter the MMSI number of the station you want to contact.
4. Select a contact or enter an MMSI manually and press the *[OK]* button.
5. Select the Channel you want to transmit the call on.

If the MMSI is a CSR then the radio will automatically tune to the correct Channel. The radio will wait for an acknowledgement to be received.

6. If an acknowledgement is received, press the *[OK]* button.
7. Press and hold the *[PTT]* button and speak your message.
8. Release the *[PTT]* button when you have completed your message.

Receiving an Individual call

With an incoming individual call displayed:

1. Select *[Show info]* from the options to review relevant call details.
2. Select *[Reply on Ch ##]* at any time to accept the call.

If auto channel change is turned on then the channel will automatically change after 10 seconds.

The radio is re-tuned to the specified channel.

3. To reject the call, select *[Reject]*.
4. If you rejected the call, select a reason for the rejection from the list.

Confirmation of the acceptance or rejection of the call is displayed. If you have accepted the call then the radio will re-tune to the requested channel.

17.6 Group calls

Group calls can be made to groups of vessels sharing the same Group MMSI numbers.

Group calls are made by selecting a saved group contact from the *[Phonebook]* or by entering the Group MMSI number for the group you want to call.

Making a group call

From the *[Group Call]* menu: *[Menu > DSC Calls > Group Call]*.

1. Select *[Phonebook]* to make a call to a group saved in your Phonebook, or
2. Select *[Recent Calls]* to make a call to a group that you have called recently, or
3. Select *[Enter MMSI]* to manually enter the MMSI number of the group you want to contact.
4. Select a group or enter an MMSI manually and press the *[OK]* button.
5. Select the Channel you want to transmit the call on.

The radio will wait for an acknowledgement to be received.

6. If an acknowledgement is received, press the *[OK]* button.
7. Press and hold the *[PTT]* button and speak your message.
8. Release the *[PTT]* button when you have completed your message.

Receiving a group call

Note:

To receive a call made to a Group, the Group's MMSI number must be saved in your Phonebook.

With an incoming group call displayed:

1. Select *[Show info]* from the options to review relevant call details.
2. Select *[Reply on Ch ##]* at any time to accept the call.

If auto channel change is turned on then the channel will automatically change after 10 seconds.

The radio is re-tuned to the specified channel.

3. To reject the call, select *[Reject]*.
4. If you rejected the call, select a reason for the rejection from the list.

Confirmation of the acceptance or rejection of the call is displayed. If you have accepted the call then the radio will re-tune to the requested channel.

17.7 Position requests

The radio can request position information from any station capable of responding to the request.

Position requests can be sent to any contact stored in the *[Phonebook]* or by manually inputting the station's MMSI number.

When connected to a Raymarine® multifunction display (MFD) the position data from the request can also be display in the Chart app.

Making a position request

You can request the position of another station.

From the *[Position Request]* menu: *[Menu > DSC Calls > Position Request]*.

1. Select *[Phonebook]* to request the position of a contact saved in your Phonebook, or
2. Select *[Recent Calls]* to request the position of a contact that you have called recently, or
3. Select *[Enter MMSI]* to manually enter the MMSI number of the station that you want to request the position of.
4. Select a contact or enter an MMSI manually and press the *[OK]* button.

The position request is sent. When a response is received the position of the contact is displayed.

Responding to a position request

With a Position request displayed:

1. Select *[Send position]* to respond with your current location, or
2. Select *[Cancel]* to ignore the request.
3. If the position reply is set to manual then select *[SEND]* to send the position report.

4. Select *[OK]* to resume normal operation.

If the *[Position requests]* setting, found in the *[GPS set-up]* menu is set to *[Auto accept]* then the response is sent automatically.

Setting automatic response to position requests

You can configure your radio to respond to incoming position requests automatically.

From the *[DSC set-up]* menu: *[Menu > Set-up > DSC set-up]*

1. Select *[Position requests]* to switch between *[Manual accept]* (default) and *[Auto accept]*.

17.8 Phonebook

The Phonebook can be used to save up to 100 contacts.

You can add, edit and delete contacts stored in the Phonebook.

Adding a Phonebook entry

You can save contacts in the Phonebook by entering their MMSI and assigning a name to the contact.

From the *[DSC Calls]* menu: *[Menu > DSC Calls]*.

1. Select *[Phonebook]*.
2. Select *[Add new]*.
3. Select the type of contact.
 - *[Vessel]*
 - *[Group]*
 - *[Coast station]*
4. Use the *[Channel Up]* and *[Channel Down]* buttons to cycle through the available numbers and press *[OK]* to confirm and move to the next digit.
5. Press the *[OK]* button to confirm the MMSI.
6. Use the *[Channel Up]* and *[Channel Down]* buttons to cycle through the available characters and press *[OK]* to confirm and move to the next character.

The maximum length for contact names is 10 characters.
7. If the Contact name is less than 10 characters, press and hold the *[OK]* button and select *[Save]*.
8. Press the *[Back]* button at any time to edit characters you have already entered.

9. Press and hold the *[OK]* button and select *[Move cursor]* to edit an existing character.
10. When complete press the *[OK]* button to return to the Phonebook.

Editing a Phonebook entry

From the *[DSC Calls]* menu: *[Menu > DSC Calls]*.

1. Select *[Phonebook]*.
2. Select the contact you want to edit.
3. Select *[Edit name]* or *[Edit MMSI]*
The contact's MMSI or name is displayed.
4. Use the *[Channel Up]* and *[Channel Down]* buttons to change a character.
5. Press the *[OK]* button to confirm each character and move to the next.
6. When you have completed your changes press the *[OK]* button again to save the changes.

Deleting a Phonebook entry

From the *[DSC Calls]* menu: *[Menu > DSC Calls]*.

1. Select *[Phonebook]*.
2. Select the contact you want to edit.
3. Select *[Delete]*.
4. Select *[Yes]*.

The contact is deleted.

17.9 Call logs

All DSC calls are logged.

The following call types are recorded in call logs:

- distress
- distress relay
- distress acknowledgements
- sent position requests
- received position requests
- group calls
- all ship calls
- individual (routine) calls

The details below are recorded for each call:

- MMSI number(s) (If a call is relayed up to 3 MMSI numbers can be recorded)
- type of call
- date and time of call
- latitude and longitude (if sent with the call)
- nature of distress (specified distress calls only)

If the call was received from a contact in the Phonebook then the contact name is displayed, otherwise the MMSI number is displayed.

Accessing the call logs

Follow the steps below to access the call logs.

From the *[DSC Calls]* menu: *[Menu > DSC Calls]*.

1. Select *[Call logs]*.
2. Select the log you want to view:
 - *[Unread]*
 - *[Distress calls]*
 - *[Non-distress calls]*
 - *[Outgoing calls]*
 - *[Position log]*
3. Select a call and press the *[OK]* button to view details.
4. Select *[Options]* to view available options.
 - *[Call Back]*— return a received call.
 - *[Resend]*— only available in the outgoing call log.
 - *[Call]*— available in the position log.
 - *[Send position]*— available in the position log.
 - *[Request position]*— available for individual and distress calls.
 - *[Save to Phonebook]*— available for received and outgoing calls to new contacts.
 - *[Send ACK]*— available for unacknowledged individual received calls.
 - *[Delete]*— deletes the log entry.

17.10 Test calls

A Test Call feature is available for the purposes of testing your DSC VHF radio for correct operation.

There are 2 types of test call:

- Test call to the US Coast Guard automated response test call service (MMSI: 003669999). This type of test call will receive an automated response (acknowledgement).
- Test call to another vessel that has a radio that supports the test call feature. Your radio will automatically acknowledge test calls received from other radios.

For radios that do NOT support the test call feature, correct radio operation can be tested by making an Individual call on channel 70 to another DSC VHF radio.

It is recommended that once you've successfully placed a test call you add the test call MMSI to your radio's Phonebook for easy retrieval for future test calls. For information on how to add an MMSI to your radio's Phonebook, refer to the "Adding a Phonebook entry" section.

Note:

Individual calls (that is, NOT a test call) to the US Coast Guard 003669999 MMSI will NOT receive an automated response.

Note:

The US Coast Guard automated response test call service is only available in the United States and its coastal waters.

Making a Test call

From the *[Test call]* menu: *[Menu > DSC Calls > Test call]*.

1. Select *[Phonebook]* to make a test call to a contact saved in your Phonebook, or
2. Select *[Recent Calls]* to make a test call to a contact that you have called recently, or
3. Select *[Enter MMSI]* to manually enter the MMSI number of the station you want to send a test call.

4. Select a contact or enter an MMSI manually and press the *[OK]* button.
The test call is sent.
5. If you called the US Coast Guard automated response test call MMSI (003669999), wait for an acknowledgement. If you made a test call to another vessel with a test call capable radio, your radio will wait for a response.
When an acknowledgement is received, an audible alarm is sounded and the message (envelope) icon is displayed.

Receiving a test call

Your radio will automatically acknowledge received Test calls from other stations

When a Test call is received a notification is displayed to alert you that a test call has been received and automatically acknowledged.

17.11 DSC set-up menu options

The DSC set-up menu options can be accessed from the following menus:

- *[Menu > DSC Calls > DSC set-up]*
- *[Menu > Set-up > DSC set-up]*

Menu item	Description	Options
<i>[MMSI]</i>	To enable the DSC functions on your radio you must enter your unique MMSI number.	
<i>[Auto channel change]</i>	When automatic channel change is turned <i>[on]</i> the radio will automatically re-tune after 10 seconds to the requested channel when DSC calls are received.	<ul style="list-style-type: none"> • <i>[On]</i> (default) • <i>[Off]</i>
<i>[Position requests]</i>	With Position requests set to <i>[Auto accept]</i> the radio will automatically send out position details when a position request is received.	<ul style="list-style-type: none"> • <i>[Auto accept]</i> (default) • <i>[Manual accept]</i>

CHAPTER 18: VHF OPERATIONS

CHAPTER CONTENTS

- 18.1 Watch modes — page 103
- 18.2 Scan Mode — page 103
- 18.3 Priority channels — page 103
- 18.4 Sensitivity — page 104
- 18.5 Private channels — page 104
- 18.6 Automatic Transmitter Identification System (ATIS) and Marcom-C mode — page 104
- 18.7 AIS receiver — page 105
- 18.8 Set-up menu options — page 105

18.1 Watch modes

Watch mode monitors priority channels and the currently selected channel.

There are 2 types of watch mode; *[Dual watch]* and *[Triple watch]* or *[Tri watch]*.

- **Dual watch** — This mode monitors priority channel 16 and the currently selected channel.
- **Triple watch** — This mode monitors priority channel 16, the second priority channel (*[Channel 09]* (default)) and the currently selected channel. The second priority channel can also be set to a user defined channel.

When the radio detects a transmission, Watch mode is suspended until the transmission ends; watch mode will then recommence.

Setting Watch mode

From the **Watch Mode** menu: *[Menu > Watch Mode]*.

1. Select *[Dual Watch]* or *[Triple Watch]* as required.
The radio is now in Watch mode.
2. Select *[2nd priority channel]* to select a different second priority channel for Triple watch.
3. During Watch mode, press the *[Back]* button at any time to end the Watch mode and resume normal operation.

18.2 Scan Mode

Scan mode enables automatic searching for channels that are currently broadcasting.

Scan mode will search through available channels and stop when it finds a channel that is currently broadcasting. If the broadcast stops or is lost for more than 5 seconds then the scan will resume.

Channels can be temporarily removed from an active scan, and the direction of scan can also be changed. When the scan reaches the last channel in the band the scan cycle is repeated.

The following scans options are available:

- *[All Channels]*— All channels in the frequency band the radio is set to are scanned in sequence.
- *[All Channels + 16]*— All channels in the frequency band the radio is set to are scanned, after each channel is scanned priority channel 16 is scanned.

- *[Saved Channels]*— Only channels saved to the radio's memory are scanned in sequence.
- *[Saved Channels + 16]*— Only channels saved to the radio's memory are scanned, after each channel is scanned priority channel 16 is scanned.

Note:

If the weather alert function is activated, the weather alert channel is included in the scan.

Setting Scan mode

Scan mode is started from the main menu.

From the *[Scan Mode]* menu: *[Menu > Scan Mode]*.

1. Select the relevant Scan mode.
The radio is now in Scan mode.
2. Select *[Edit Saved Channels]* to select the channels that will be scanned when performing a Saved channel scan.
3. During Scan mode, press the *[Back]* button at any time to end the Scan mode and resume normal operation.

18.3 Priority channels

Channel 16 is the dedicated priority channel.

The default secondary priority channel is channel 09. The second priority channel can be changed if desired.

Switching between priority channels

1. Press the *[16 / +]* button to switch between priority channels.

Setting a second priority channel

You can select which channel you want to use as the second priority channel.

From the *[Channel set-up]* menu: *[Menu > Set-up > Channel set-up]*.

1. Select *[2nd priority channel]*.
2. Select the channel that you want to assign as the second priority channel.

18.4 Sensitivity

The sensitivity level of the radio can be set to *[Local mode]* or *[Distant mode]*.

[Local mode] decreases the receiver sensitivity in high traffic areas to reduce unwanted reception. When in Local mode the 'Loc' icon is displayed in the status bar.

[Distant mode] sets the receiver sensitivity to full.

Switching sensitivity modes

You can switch between Local and Distant modes at any time.

From the *[Set-up]* menu: *[Menu > Set-up]*.

1. Select *[Sensitivity]*.

Selecting *[Sensitivity]* will switch between *[Local mode]* and *[Distant mode]* (default).

18.5 Private channels

The radio may be able to receive additional Private channels depending on the country it is used in and whether the appropriate licenses are held.

The following Private channel sets can be selected:

- *[None]*
- *[Belgium]*
- *[Denmark (pleasure)]*
- *[Denmark (fishing)]*
- *[Finland (pleasure)]*
- *[Finland (fishing)]*
- *[Holland (Netherlands)]*
- *[Norway (pleasure)]*
- *[Norway (fishing)]*
- *[Sweden (pleasure)]*
- *[Sweden (fishing)]*
- *[UK]*

Selecting a private channel set

You can select the set of private channels you want to use.

From the *[Channel set-up]* menu: *[Menu > Set-up > Channel set-up]*.

1. Select *[Private channels]*.

The list of private channel sets is displayed:

2. Select the required private channel set.

18.6 Automatic Transmitter Identification System (ATIS) and Marcom-C mode

ATIS is a European system used on some inland waterways.

VHF radios operating in an ATIS region must be programmed with a unique ATIS number; this can be obtained from the relevant licensing authority. The ATIS number is attached as a digital signal at the end of each transmission and identifies you to the relevant authorities who monitor the system.

When operating in ATIS mode, some of the products features are not available:

- Use of DSC functions is not permitted in ATIS regions.
- Watch modes are not permitted in ATIS regions.
- Channel scanning is not permitted in ATIS regions.
- ATIS regulations restrict the transmit power to 1 watt for the following channels: 6, 8, 10, 11, 12, 13, 14, 71, 72, 74 and 77.

You can enable or disable ATIS using the menus (except on Marcom-C configured units).

Marcom-C mode

Marcom-C mode is a restricted radio configuration for VHF operators with a Marcom-C license. This is applicable to radios operated exclusively in European inland waterways using the ATIS system. A Marcom-C VHF radio has the ATIS permanently enabled. You will not be able to disable ATIS operation. Marcom-C operation is set by the dealer at point of sale. If you wish to enable or disable Marcom-C mode, you must contact your Raymarine® dealer. For further information please contact Raymarine® technical support.

Enabling and disabling ATIS mode

ATIS (Automatic Transmitter Identification System) is a marine VHF radio system used for identifying vessels on some European inland waterways. A unique ATIS ID must be entered before ATIS mode can be enabled.

Note:

- ATIS is only available when the **EUR** (Europe) channel set is selected.
- A unique ATIS ID must be entered before ATIS mode can be enabled; refer to: [Entering your ATIS ID](#)

With ATIS mode enabled, the radio's region will be fixed to the EUR (Europe) channel set, and the following functions are disabled:

- DSC functions
- Watch Mode
- Scan Mode
- High / low power is restricted on certain channels

From the Main menu.

1. Select *[Set-up]*.
2. Select *[ATIS set-up]*.
3. Select *[ATIS]*.

If no ATIS ID has been set, you will be requested to enter one before ATIS mode is enabled.

4. If an ATIS ID has already been set, select *[On]* to enable ATIS mode, or *[Off]* to disable ATIS mode.

18.7 AIS receiver

Depending on variant, your radio may have a built-in AIS receiver.

With the built-in AIS receiver switched on, AIS information can be sent to a connected Raymarine® MFD using either NMEA 0183 or SeaTalk NG.

Note:

If using the built-in AIS receiver and outputting over NMEA 0183, ensure that the baud rate is set to *[0183 High speed]*. *[Menu > Set-up > Network output]*.

Switching AIS on and off

From the *[Set-up]* menu: *[Menu > Set-up]*.

1. Select *[AIS]*.

Selecting AIS will switch the internal AIS receiver *[On]* and *[Off]*.

18.8 Set-up menu options

The Set-up menu options can be accessed from the Main menu.

Menu item	Description	Options
<i>[Display set-up]</i>	Provides access to the display settings menu.	<ul style="list-style-type: none">• <i>[Backlight]</i>• <i>[Shared brightness]</i>• <i>[Contrast]</i>• <i>[Homescreen display]</i>
<i>[Language]</i>	Enables selection of the user interface language.	<ul style="list-style-type: none">• <i>[English]</i> — English• <i>[Español]</i> — Spanish• <i>[Français]</i> — French• <i>[Deutsch]</i> — German• <i>[Italiano]</i> — Italian
<i>[Units]</i>	Provides access to units of measure selection settings.	<ul style="list-style-type: none">• <i>[Time format]</i>• <i>[Time offset]</i>• <i>[Bearing mode]</i>• <i>[Speed unit]</i>
<i>[Power output]</i>	Switches the Power output of the radio.	<ul style="list-style-type: none">• <i>[Distant]</i> (default)• <i>[Local]</i>
<i>[Sensitivity]</i>	Switches the Sensitivity of the radio.	<ul style="list-style-type: none">• <i>[Low]</i>• <i>[High]</i> (default)

Menu item	Description	Options
<i>[Noise cancelling (Tx)]</i>	Switches the transmission noise cancellation feature On and Off.	<ul style="list-style-type: none"> • <i>[On]</i> (default) • <i>[Off]</i>
<i>[Wireless set-up]</i>	Provides access to settings which apply to wireless devices.	<ul style="list-style-type: none"> • <i>[Wireless hub set-up]</i> • <i>[Wireless hub]</i> • <i>[Wireless speaker]</i>
	<div style="border: 1px solid black; padding: 5px;"> <p>Note: Menu only available when a Wireless hub is connected.</p> </div>	
<i>[Key Beep]</i>	Enables adjustment of the beep which is heard when pressing buttons.	<ul style="list-style-type: none"> • <i>[Off]</i> • <i>[Quiet]</i> (default) • <i>[Loud]</i>
<i>[Channel set-up]</i>	Provides access to the Channel set-up menu.	<ul style="list-style-type: none"> • <i>[Channel name]</i> • <i>[2nd priority channel]</i> • <i>[Private channels]</i> • <i>[Frequency band]</i>
<i>[GPS set-up]</i>	Provides access to the GPS set-up menu.	<ul style="list-style-type: none"> • <i>[Internal GPS]</i> • <i>[Homescreen display]</i> • <i>[Bearing mode]</i> • <i>[Position requests]</i> • <i>[Set manual position]</i>

Menu item	Description	Options
<i>[DSC set-up]</i>	Provides access to the DSC set-up menu.	<ul style="list-style-type: none"> • <i>[MMSI]</i> • <i>[Auto channel change]</i> • <i>[Position requests]</i>
<i>[AIS]</i>	Switches the internal AIS receiver on and off on.	<ul style="list-style-type: none"> • <i>[Off]</i> (default) • <i>[On]</i>
	<div style="border: 1px solid black; padding: 5px;"> <p>Note: Menu only available on Ray91.</p> </div>	
<i>[Network output]</i>	Enables you to select the network to be used to output and receive data.	<ul style="list-style-type: none"> • <i>[NMEA 2000]</i> • <i>[0183 High speed]</i> • <i>[0183 Std speed]</i>
<i>[ATIS set-up]</i>	Enables you to switch ATIS mode on and off and enter your ATIS ID.	<ul style="list-style-type: none"> • <i>[ATIS]</i> • <i>[ATIS ID]</i>
<i>[Maintenance]</i>	Enables you to view system details and functions that may be required during maintenance and troubleshooting.	<ul style="list-style-type: none"> • <i>[About this unit]</i> • <i>[System reset]</i> • <i>[System test]</i>

Display Set-up menu

The following menu options are available from the Display Set-up menu.

Menu	Description	Options
<i>[Backlight]</i>	Increases and decreases the LCD and button backlight level.	<ul style="list-style-type: none">• <i>[0 to 9]</i>• <i>[Off]</i>
<i>[Shared brightness]</i>	Enables set-up of Shared Brightness.	<ul style="list-style-type: none">• <i>[Shared brightness]</i>• <i>[Group]</i>
<i>[Contrast]</i>	Increases and decreases the LCD Contrast level.	<ul style="list-style-type: none">• <i>[0 to 10]</i>
<i>[Homescreen display]</i>	Determines the details displayed onscreen.	<ul style="list-style-type: none">• <i>[Location & Time]</i>• <i>[Location & COG/SOG]</i>

Shared Brightness menu

The following menu options are available from the Shared Brightness menu.

Menu	Description	Options
<i>[Shared brightness]</i>	Enables and disables Shared Brightness.	<ul style="list-style-type: none">• <i>[On]</i>• <i>[Off]</i>
<i>[Group]</i>	Enables you to assign the radio to a Shared Brightness group.	<ul style="list-style-type: none">• <i>[Helm 1]</i>• <i>[Helm 2]</i>• <i>[Cockpit]</i>• <i>[Flybridge]</i>• <i>[Mast]</i>• <i>[Group 1 to Group 5]</i>

CHAPTER 19: HAILER, FOG HORN, AND INTERCOM

CHAPTER CONTENTS

- 19.1 Hailer Fog Intercom menu — page 109
- 19.2 Loud hailer — page 109
- 19.3 Fog horn — page 109
- 19.4 Intercom — page 110

19.1 Hailer Fog Intercom menu

The menu options available are determined by the accessories connected to your radio.

Menu name	Connected devices
<i>[Hail/Fog/Int]</i>	Loud hailer and second station connected.
<i>[Hailer/Fog]</i>	Loud hailer connected, no second station.
<i>[Intercom]</i>	Second station connected, no loud hailer.

Note:

For simplicity the procedures in this section all refer to the *[Hail/Fog/Int]* menu.

19.2 Loud hailer

The Ray70, Ray73, Ray90 and Ray91 VHF Radios can be connected to a Loud hailer.

In hailer mode anything spoken into the handset is amplified and broadcast from the hailer. The message is not transmitted over VHF/DSC.

When the hailer is active VHF calls cannot be sent or received.

Using the hailer

From the *[Hail/Fog/Int]* menu: *[Menu > Hail/Fog/Int]*.

1. Select *[Hailer]*.
Hailer mode is now active
2. Press and hold the *[PTT]* button.
3. Speak your message.
4. Release the *[PTT]* button.
5. Press the *[Back]* button to exit Hailer mode.
6. The hailer listening volume can be adjusted at any time in Listening mode using the *[Volume Control]*.
7. The hailer talking volume can be adjusted at any time, with the *[PTT]* button pressed using the *[Volume Control]*.

Important:

To avoid audio feedback, ensure that the loud hailer is at least 3 m (9.8 ft) away from the VHF base unit and any handset or fisticmic at all times. When talking, ensure that the handset or fisticmic is pointing in the opposite direction to the loud hailer.

19.3 Fog horn

The fog horn function requires an optional loud hailer to be connected. Please check your product description to ensure a loud hailer can be connected.

The fog horn function can be set to manual or to predefined automatic modes.

In manual mode a continuous tone is sounded for as long as the *[PTT]* button is pressed.

In automatic mode the selected tone will repeat every 2 minutes until interrupted or cancelled. In automatic mode the radio can be used as normal between the fog horn patterns.

Fog mode	Description	Pattern
<i>[Underway]</i>	Vessel underway.	1 long tone.
<i>[Underway/Stopped]</i>	Vessel not underway.	2 long tones.
<i>[Sailing/Fishing]</i>	sailing vessel or any vessel fishing but not trolling.	1 long tone and 2 short tones.
<i>[Restrict/Tow]</i>	Restricted in ability to maneuver or towing another vessel.	1 long tone and 2 short tones.
<i>[Under tow]</i>	This vessel is being towed.	1 long tone and 3 short tones.
<i>[Pilot vessel]</i>	This vessel is a pilot vessel.	4 short tones.

Fog mode	Description	Pattern
<i>[At anchor]</i>	Vessel is at anchor.	12 consecutive rings.
<i>[Aground]</i>	Vessel is aground.	3 short rings, 12 consecutive rings, 3 short rings.

Using the fog horn in manual mode

From the *[Hail/Fog/Int]* menu: *[Menu > Hail/Fog/Int]*.

1. Select *[Fog horn]*.
2. Select *[Manual mode]*.
3. Press and hold the *[PTT]* button to sound a continuous fog horn tone.
4. Press the *[Back]* button to exit Fog horn mode.

Using automatic fog horn modes

From the *[Hail/Fog/Int]* menu: *[Menu > Hail/Fog/Int]*.

1. Select *[Fog horn]*.
2. Select *[Automatic mode]*.
3. Select an automatic pattern.
The selected pattern will play and repeat until interrupted.
4. Select *[Stop fog horn]* to exit the automatic fog horn mode, or
5. Select *[Change pattern]* to select a different fog horn pattern.
6. To continue using the radio whilst in automatic fog horn mode select *[Back]* 4 times to return to the Homescreen.

You can now continue to use the radio as normal. The fog horn pattern will continue to repeat every 2 minutes. If you are making a call when it is due to sound the fog horn will be suspended until you finish your call.

Switching off Fog Horn mode

Automatic Fog Horn mode will remain active until switched off.

From the *[Hail/Fog/Int]* menu: *[Menu > Hail/Fog/Int]*.

1. Select *[Fog horn]*.
2. Select *[Stop fog horn]* to switch off the automatic fog horn mode.

19.4 Intercom

The Intercom function is available when more than 1 station is connected to your radio.

The intercom function allows voice communication between handset stations. Calls can be initiated from either station.

Using the intercom

From the *[Hail/Fog/Int]* menu: *[Menu > Hail/Fog/Int]*.

1. Select *[Intercom]*.
2. ⁽¹⁾Select the handset you want to call.
The selected handset will ring.
3. Wait for the handset station to acknowledge the call.
4. Press and hold the *[PTT]* button and speak your message.

Note:

⁽¹⁾Step not required when only 2 handsets are connected.

Responding to the intercom

1. Press the *[PTT]* button and acknowledge the call and to respond to subsequent voice messages.

CHAPTER 20: MAINTENANCE

CHAPTER CONTENTS

- [20.1 Maintenance — page 112](#)

20.1 Maintenance

This product has no user serviceable parts or adjustments. Never remove the cover or attempt to service the product, doing so may invalidate your product warranty.

The following preventive measures should be followed:

- Although the product is waterproof, keep the unit as dry as possible.
- If you remove a connection ensure a dust cap is fitted to the connector.

Routine checks

The following periodic checks should be made:

- Examine cables for signs of damage, such as chafing, cuts or nicks.
- Check that the cable connectors are firmly attached and that their locking mechanisms are properly engaged.

Note:

Cable checks should be carried out with the power supply switched off.

Caution: Product cleaning

When cleaning products:

- Switch off power supply.
- Use a clean damp cloth to wipe clean.
- Do NOT use: abrasive, acidic, ammonia, solvent or other chemical-based cleaning products.
- Do NOT use a jet wash.

Unit cleaning instructions

The unit does not require regular cleaning. However, if you find it necessary to clean the unit, please follow the steps below:

1. Ensure power is switched off.
2. Wipe unit clean with a damp cloth.
3. If necessary, use a mild detergent solution to remove grease marks.

CHAPTER 21: TROUBLESHOOTING

CHAPTER CONTENTS

- 21.1 LED diagnostics — Ray90 / Ray91 Base station — page 114
- 21.2 LED diagnostics — Wireless (Active) speaker — page 114
- 21.3 Troubleshooting — page 115
- 21.4 Power up troubleshooting — page 116
- 21.5 Audio troubleshooting (transmission / reception) — page 117
- 21.6 GNSS (GPS) troubleshooting — page 119
- 21.7 DSC troubleshooting — page 120
- 21.8 AIS troubleshooting (Ray70 / 73 / 91 only) — page 121
- 21.9 Wired handset troubleshooting — page 121
- 21.10 Wireless troubleshooting (Ray63 / 73 / 90 / 91 only) — page 122

21.1 LED diagnostics — Ray90 / Ray91 Base station

Sequence	Status
	Green <ul style="list-style-type: none"> • SeaTalk NG Bus healthy, no communication faults. • All modules ready (GPS, VHF, AIS).
	Red <ul style="list-style-type: none"> • SeaTalk NG Bus not connected. • NMEA 0183 not connected.
	Red <ul style="list-style-type: none"> • Connected but not receiving data.
	Green <ul style="list-style-type: none"> • VHF transceiver module initializing / not ready.
	Green <ul style="list-style-type: none"> • GNSS (GPS) sensor initializing / not ready.
	Red <ul style="list-style-type: none"> • Internal fault (No GNSS (GPS) signal, No antenna, lost signal).

21.2 LED diagnostics — Wireless (Active) speaker

Sequence	Status
	Purple Powering on
	Red and Blue Ready to pair / connect
	Red Paired OK
	Red Connected, no audio
	Purple Connected, audio active
	Red Powered on, not connected

21.3 Troubleshooting

The troubleshooting section provides possible causes and the corrective action required for common problems that are associated with the installation and operation of your product.

Before packing and shipping, all products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product, this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the *Technical support and servicing* section of this manual for useful links and contact details.

Performing a system reset

Note:

Performing a reset will not reset MMSI and ATIS ID number.

From the Maintenance menu: *[Menu > Set-up > Maintenance]*.

1. Select *[System reset]*.
2. Select *[Yes]*.

The system is now reset to factory defaults.

Note:

Performing the reset will delete all contacts in your Phonebook and reset all user options.

System test

The system test menu can be used to show the status of the system and connected devices.

The System test menu show the status of the following system components and connected devices:

- GPS
- DSC
- Battery
- Hailer

- Remote handset

[OK] is displayed next to each item that is either connected or enabled.

[No] is displayed next to items that are either not connected or disabled.

Checking for RF interference

If you suspect a device may be causing radio frequency (RF) interference you can use your VHF radio to check.

1. Turn off the suspect device.
2. Tune your VHF radio to a quiet channel such as Channel 13.
3. Adjust your radio's Squelch control until the radio outputs audio noise.
4. Re-adjust your radio's Squelch control until the audio is quiet, only slightly above the noise threshold.
5. Turn on the suspect device.
 - If the radio's audio noise increases then the device is causing RF interference.
 - If there is no change in the radio's audio noise then the device is not causing RF interference.

Note:

If RF interference is present then it is likely that both VHF and AIS reception are being degraded by the device.

Multiple antenna installations

Important additional considerations when installing multiple antennas.

To prevent potential channel interference when installing two or more VHF radios on the same vessel, ensure that the antennas are located at least 2.4 m (8 ft.) away from each other.

21.4 Power up troubleshooting

Problems at power up and their possible causes and solutions are described here.

Product does not turn on or keeps turning off

Possible causes	Possible solutions
Operation.	<ol style="list-style-type: none">1. Ensure that the radio is fully powered on, by holding the Power button for at least 3 seconds.2. If your system includes a handset, it has its own independent power button, located on the top edge of the handset. Press and hold the button for at least 3 seconds, until the display lights up.
Blown fuse / tripped breaker.	<ol style="list-style-type: none">1. Check the fuse, located inline with the power cable. Ensure that it has the correct rating (10 A), as an under-rated fuse can affect the power supplied to the radio. If the fuse has blown, replace with a new 10 A fuse.2. Check the condition of relevant / additional fuses and breakers and connections, replace if necessary.3. If fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring.

Possible causes	Possible solutions
Poor / damaged / insecure power supply cable / connections.	<ol style="list-style-type: none">1. Check that the power cable connector is fully inserted into the unit and locked in position.2. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary.3. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary.4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary.5. With the product under load (when transmitting at 25 W), using a multi-meter, check for a high voltage drop across all connectors /fuses etc, and replace if necessary.
Incorrect power connection.	The power supply may be wired incorrectly, ensure the installation instructions have been followed.
Power source insufficient.	Check that your power supply (battery or distribution panel) is providing a minimum of 10.2 V to the radio when in standby, and also when transmitting at 25W.

Product will not boot up (re-boot loop)

Possible causes	Possible solutions
Power supply and connection.	See possible solutions from 'Products does not turn on or keeps turning off' above.
Software corruption.	In the unlikely event that the product's software has become corrupted, please try re-flashing the radio and the handsets with the latest software from the Raymarine website: www.raymarine.com/software If you have a handset in your system (Ray63 / 73 / 90 / 91 only) with old software, you might need to put it into programming mode in order to update the software along with the radio. To do this, connect it and then press and hold the <i>[DISTRESS]</i> and <i>[PTT]</i> buttons together. While holding these buttons, press the <i>[Power]</i> button on the handset for 3 seconds. The handset backlight will start flashing. This means that the handset is now in programming mode. Follow the update instructions provided on the software download web page.

21.5 Audio troubleshooting (transmission / reception)

Problems with your VHF radio and their possible causes and solutions are described below:

No audio transmission

Possible causes	Possible solutions
Incorrect settings.	Reset the radio to factory defaults, using the Maintenance menu: <i>[Menu > Set-up > Maintenance > System reset]</i> .
Dirt or debris blocking the microphone on the fist mic or Raymic handset.	Check the microphone on the fist mic or Raymic to ensure that the microphone port is clear and not blocked. Clean if necessary.
Incorrect channel type in use.	Ensure you are using only Simplex channels for testing, if communicating with another vessel. For example, channels 6, 8, 9, 10, 13, 67, 72, or 73.
Insufficient transmission power.	When communicating with vessels at a distance, ensure the radio is set to transmit at 25 W power. Press the <i>[HI / LO]</i> button on the fist mic or the Raymic handset and ensure that the 25 W symbol is displayed.

No audio reception

Possible causes	Possible solutions
Incorrect settings.	Reset the radio to factory defaults, using the Maintenance menu: <i>[Menu > Set-up > Maintenance > System reset]</i> .
Incorrect channel type in use.	Ensure you are using only Simplex channels for testing, if communicating with another vessel. For example, channels 6, 8, 9, 10, 13, 67, 72, or 73.
Incorrect volume or squelch level.	1. Firstly, verify that noise is audible from the speakers, by setting the Squelch level to zero. To do this, press the <i>[Vol/Sq]</i> button

Possible causes	Possible solutions
	a few times until Squelch is displayed. Then adjust the level to zero.
2.	If there is no noise from the speaker, try adjusting the volume. To do this, press the <i>[Vol/Sq]</i> button a few times until Volume is displayed. Then adjust the level as required.
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>Note: Volume control on each handset in the system and the radio units themselves is independent.</p> </div>	
3.	If audio / noise can be heard, press the <i>[Vol/Sq]</i> button a few times until Squelch is displayed. Then adjust the squelch level until the noise stops.
4.	If no audio / noise is heard from the speaker after completing the above steps, contact Product Support for further guidance.

Passive speaker troubleshooting

Passive speaker no alarm audio

Possible causes	Possible solutions
Passive speaker connected to second station connector.	Alarm audio is not available on passive speakers connected to the second station connector. Alarm audio should still be heard via the second station handset.

21.6 GNSS (GPS) troubleshooting

Problems with the GNSS (GPS) and their possible causes and solutions are described below.

Before troubleshooting GNSS (GPS) problems, ensure your product has the latest software, by checking the Software Updates page on the Raymarine website www.raymarine.com/software

No Fix

Possible causes	Possible solutions
No GNSS (GPS) receiver connected.	In order to obtain a position fix your product requires a GNSS (GPS) receiver. Your product may include an internal GNSS (GPS) receiver, if not then an external GNSS (GPS) receiver such as the RS150 is required.
No antenna connected to GNSS (GPS) receiver.	Depending on variant, your product may include an internal GNSS (GPS) receiver. The receiver may or may not include an internal antenna. If your product's internal GNSS (GPS) receiver does not include an internal antenna then you will need to connect an external passive antenna to the GNSS (GPS) / GA150 connection.
GNSS (GPS) Antenna location.	For optimum performance, external GNSS (GPS) antennas and GNSS (GPS) receivers that include an internal antenna should be mounted above decks and have a clear, unobstructed view of the sky, and not be in close proximity to any structural bulkheads or other electrical equipment or cables which may cause interference.
GNSS (GPS) switched off.	Ensure your internal GNSS (GPS) receiver is switched on in the relevant settings menu.
Geographic location or prevailing conditions preventing satellite fix.	Check periodically to see if a fix is obtained in better conditions or another geographic location.

No position data or manual GPS source missing

Possible causes	Possible solutions
Internal receiver is switched off.	Ensure your external or internal receiver is switched on.
Wrong Network output selected.	Ensure the correct network type and speed is selected in the <i>[Network output]</i> menu: <i>[Menu > Set-up > Network output]</i> .
Poor / damaged / insecure cable / connection.	<ol style="list-style-type: none">1. Check that the connectors are fully inserted into the unit and locked in position.2. Check the cables and connectors for signs of damage or corrosion, replace if necessary.

21.7 DSC troubleshooting

DSC functions are not available / working

Possible causes	Possible solutions
MMSI number not programmed.	Programme your MMSI number. Each VHF radio requires a unique MMSI number. In the United States, this MUST be programmed into the unit by an authorized dealer. For more information, refer to: p.120 — Obtain MMSI (Maritime Mobile Service Identity) number
Radio is set to ATIS or Marcom-C mode.	Use of DSC is not permitted when in ATIS or Marcom-C mode. You will be unable to make DSC distress and other types of digital selective call. If you are not in an ATIS region switch off ATIS mode: <i>[Menu > Set-up > ATIS set-up > ATIS].</i>

Obtain MMSI (Maritime Mobile Service Identity) number

Before commencing installation ensure you have obtained an MMSI number for your vessel.

An MMSI is a 9 digit number which is sent over a radio frequency channel in order to identify the originating vessel/station. If your vessel already has an MMSI number (used for a VHF DSC radio) then the same MMSI number must be used to program your product.

Note:

If an MMSI number is not entered, the DSC functionality of your radio will be disabled.

In the United States of America, the MMSI and Static Data must be entered only by a Raymarine® dealer or other appropriately qualified installer of marine communications equipment on board vessels. The user is NOT authorized to do this.

In some areas, a radio operator licence is required before an MMSI number will be issued. You can request an MMSI number from same agency that issues radio or Ship Radio licences in your area.

In Europe and other parts of the world outside of the United States of America, the MMSI and Static data can be set up by the user.

For further details, refer to the relevant Telecommunications Regulatory Body for your area.

For a list of issuing authorities for licences and MMSI numbers in each region, refer to: [p.143 — Licensing and MMSI issuing authorities](#)

21.8 AIS troubleshooting (Ray70 / 73 / 91 only)

AIS functions are not available / working (Ray70 / Ray63 / Ray91 only)

Possible causes	Possible solutions
MMSI number not programmed.	Programme your MMSI number. Each VHF radio requires a unique MMSI number. In the United States, this MUST be programmed into the unit by an authorized dealer. For more information, refer to: p.120 – Obtain MMSI (Maritime Mobile Service Identity) number
VHF radio is not connected to a multifunction display via SeaTalk NG / NMEA®, or the connection is not correctly configured.	Check the diagnostics on the multifunction display to confirm that the VHF radio is connected on the network. Access the VHF radio's <i>[Set-up]</i> menu and ensure that the <i>[Network output]</i> option is set correctly. If the VHF radio is connected to an MFD via NMEA 0183, ensure that the VHF radio's <i>[Network output]</i> option in the Set-up menu is set to "0183 High Speed". Ensure also that the MFD's NMEA 0183 connection is configured to 38400 baud rate.
AIS functions are not enabled on the VHF radio.	Access the VHF radio's <i>[Set-up]</i> menu and ensure that the <i>[AIS]</i> option is set to "On".
AIS functions are not enabled on the MFD.	Ensure that both <i>[AIS Presentation]</i> and <i>[AIS Targets]</i> are enabled for the MFD. For instructions on how to do this, refer to the Operation instructions for your MFD.

21.9 Wired handset troubleshooting

Wired handset will not power up

Possible causes	Possible solutions
Handset not turned on	The Wired handset is supplied power from the Base station. Press the Power button located on the top of the Handset to power it on. If you have a handset in your system with old software, you might need to put it into programming mode in order to update the software along with the radio. To do this, connect it and then press and hold the <i>[DISTRESS]</i> and <i>[PTT]</i> buttons together. While holding these buttons, press the <i>[Power]</i> button on the handset for 3 seconds. The handset backlight will start flashing. This means that the handset is now in programming mode. Follow the update instructions provided on the software download web page.
Software Base station / Handset mismatch	The Handset and Base station must both be running compatible software, refer to the Raymarine website for details of compatible software versions: www.raymarine.com/software .
Poor / damaged / insecure cables / connections	<ol style="list-style-type: none"> 1. Check that the Base station radio is correctly powered. 2. With the Handset turned on, try flexing the cable near to the connectors to see if this causes the Handset to re-boot/loose power, replace if necessary. 3. Check cable connections are secure, clean and free from corrosion, replace if necessary.

Handset display problems

Possible causes	Possible solutions
Handset is not powered on	Hold down the <i>[Power]</i> button located on the top edge of the handset, until the display backlight comes on.
Incompatible software	The handset software may need updating, or there may be a mismatch between the handset and basestation software versions. To update the software, visit www.raymarine.com/software and download the latest software. Ensure the VHF radio is connected via SeaTalk NG to a Raymarine multifunction display (MFD), and then follow the instructions provided on the software download website. (The VHF radio software can only be updated via a Raymarine MFD).

21.10 Wireless troubleshooting (Ray63 / 73 / 90 / 91 only)

Before troubleshooting problems with your wireless connection, ensure that you have followed the Wireless location requirements guidance provided in the relevant installation instructions and performed a power cycle/reboot of the devices you are experiencing problems with.

Wireless handset not powering up

Possible causes	Possible solutions
Wireless handset's battery is not charged.	<ol style="list-style-type: none">1. Ensure the handset's charging holster is correctly connected to a 12 V dc power supply.2. Place the handset in the charging holster.3. Ensure the battery symbol is displayed on the handset screen.

Note:

When charging a very low or completely flat battery, it might take some time for the display to light up once placed in the cradle and charging.

Cannot find network

Possible causes	Possible solutions
Devices not powered or connected.	Ensure the Wireless hub is connected to the Hub connection on the Base station and that the Base station is powered on.
Devices out of range or signal being blocked.	Move devices closer together or, if possible remove the obstructions and then re-scan available networks.
Software mismatch on radio / wireless hub / wireless handset.	The radio, wireless hub, and wireless handset must all be running compatible software. If the software on the radio and handsets is up to date, the wireless hub will update automatically. To obtain information on compatible software versions and also to obtain the latest software, visit the Raymarine website: www.raymarine.com/software

Cannot connect to hub

Possible causes	Possible solutions
Trying to connect to the wrong device.	Ensure you are trying to connect to the correct device; you can find your Wireless hub's name using a Wired handset: (<i>Menu > Set-up > Wireless set-up > Wireless hub set-up > Hub name</i>).
Incorrect password.	Ensure you are trying to connect using the correct password; you can find your Wireless hub's password using a Wired handset: (<i>Menu > Set-up > Wireless set-up > Wireless hub set-up > Password</i>).
Bulkheads, decks and other heavy structure can degrade and even block the wireless signal. Depending on the material and its thickness, it may	<ol style="list-style-type: none">1. Try repositioning the Wireless hub so that heavy structure is removed from the direct line-of-sight between the devices, or:2. Use the Wireless hub antenna extension accessory (A80541) to move the wireless hub to an area with fewer obstacles.

Possible causes	Possible solutions
not always be possible to pass a wireless signal through certain structures.	

Connection extremely slow and/or keeps dropping out

Possible causes	Possible solutions
Wireless performance degrades over distance, so products farther away will receive less network bandwidth. Products installed close to their maximum wireless range will experience slow connection speeds, signal drop outs or no connection at all.	Move devices closer together.
Interference being caused by other wireless-enabled devices.	<ol style="list-style-type: none">1. Change the hub's wireless channel and retry the connection. You can use free wireless analyzer apps on your smartphone or tablet to help you choose a less-congested channel.2. Switch off each wireless device in turn until you have identified the device causing the interference.
Interference caused by other devices that use the 2.4 GHz frequency See list below of	Switch off each device in turn until you have identified the device causing the interference, then remove or reposition the offending device(s) or your wireless hub / handset.

Possible causes	Possible solutions
<p>some common devices that use the 2.4 GHz frequency:</p> <ul style="list-style-type: none"> • Microwave ovens • Fluorescent lighting • Cordless phones / baby monitors • Motion sensors 	
<p>Interference caused by electrical and electronic devices and associated cabling could generate an electromagnetic field which may interfere with the wireless signal.</p>	<p>Switch off each item in turn until you have identified the device causing the interference, then remove or reposition the offending device(s) or your wireless hub / handset.</p>
<p>Interference from devices on other vessels. When in close proximity to other vessels, many other wireless signals may be present; for example, when moored up in a marina.</p>	<ol style="list-style-type: none"> 1. Change the hub's wireless channel and retry the connection. You can use free wireless analyzer apps on your smartphone or tablet to help you choose a less congested channel. 2. If possible, move your vessel to a location with less wireless traffic.

Network connection established but no data

Possible causes	Possible solutions
<p>Connected to the wrong network.</p>	<p>Ensure that your handset is connected to the correct wireless hub.</p>
<p>Device software incompatibility.</p>	<p>The radio, wireless hub, and wireless handset must all be running compatible software. If the software on the radio and handsets is up to date, the wireless hub will update automatically. You can check device software from the Maintenance menu: <i>[Menu > Set-up > Maintenance > About this unit]</i>. To obtain information on compatible software versions and also to obtain the latest software, visit the Raymarine website: www.raymarine.com/software</p>
<p>It may be possible that the device has become defective.</p>	<ol style="list-style-type: none"> 1. Try updating software to a later version, or try reinstalling the current software. 2. Contact technical support for further assistance.

CHAPTER 22: TECHNICAL SUPPORT

CHAPTER CONTENTS

- 22.1 Raymarine technical support and servicing — page 126
- 22.2 Viewing product information — page 127
- 22.3 Learning resources — page 127

22.1 Raymarine technical support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Visit the Raymarine website to **read the latest warranty policy**, and **register** your product's warranty online:

- www.bit.ly/rym-warranty

United Kingdom (UK), EMEA, and Asia Pacific:

- Web: www.bit.ly/rym-service
- Tel: +44 (0)1329 246 932

United States (US):

- Web: www.bit.ly/rym-service
- Tel: +1 (603) 324 7900

Web support

Please visit the “Support” area of the Raymarine website for:

- **Manuals and Documents** — www.bit.ly/rym-docs
- **Technical support forum** — www.bit.ly/rym-support
- **Software updates** — www.bit.ly/rym-software

Telephone and online support

Region	Contact details
All regions	Online support: www.bit.ly/rym-support
United Kingdom (UK) and EMEA	Telephone: +44 (0)1329 246 777 Address: Marine House, Cartwright Drive, Fareham, PO15 5RJ, UK.
United States (US)	Telephone: Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539) Address: 110 Lowell Road, Hudson, NH 03051, USA.
Australia and New Zealand (Raymarine subsidiary)	Telephone: +61 2 8977 0300 Address: Suite 1.01, 26 Rodborough Road, Frenchs Forest, NSW, 2086, Australia.
France (Raymarine subsidiary)	Telephone: +33 (0)1 46 49 72 30 Address: 35 avenue Michel Crépeau, 17000 La Rochelle - France.
Germany (Raymarine subsidiary)	Telephone: +49 40 237 808 0 Address: Atlantic-Haus, Zirkusweg 1, 20359 Hamburg.
Italy (Raymarine subsidiary)	Telephone: +39 02 9945 1001 Address: Via L. Manara 2, 20812 Limbiate (MB), Italy.
Spain (Authorized Raymarine distributor)	Telephone: +34 96 2965 102 Email: sat@azimut.es
Netherlands / Benelux (Authorized Raymarine distributor)	Telephone: +31 (0)26 3614 905 Address: Florijnweg 21G, 6883 JN VELD, Nederland.

Region	Contact details
Sweden (Raymarine subsidiary)	Telephone: +46 (0)317 633 670 Address: Bolshedens Industriväg 18, 427 50 Billdal, Sweden.
Finland (Raymarine subsidiary)	Telephone: +358 (0)207 619 937 Address: Suomalaistentie 1-3, 02270 Espoo, Finland.
Norway (Raymarine subsidiary)	Telephone: +47 692 64 600 Address: Årvollskogen 30, 1529 Moss, Norway.
Denmark (Raymarine subsidiary)	Telephone: +45 437 164 64 Address: Centervej 7, 4600 Køge, Denmark.
Russia (Distributor)	Telephone: Tel: +7 495 788 0508 Email: info@mikstmarine.ru

22.2 Viewing product information

Product information can be found on the Startup screen.

1. Power up the radio.

The startup screen is displayed which shows the model and software version of the product.

Alternatively product information can also be displayed by selecting *[About this unit]* from the *[Maintenance]* menu: *[Menu > Set-up > Maintenance]*.

22.3 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

Video tutorials

Raymarine official channel on YouTube

- <http://www.youtube.com/user/RaymarineInc>

Technical support

Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- www.bit.ly/rym-training

Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- www.bit.ly/rym-support

CHAPTER 23: TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 23.1 Technical specification — Base station — page 129
- 23.2 Technical specification — Wired handset (Raymic) — page 131
- 23.3 Technical specification — Wired (Passive) speaker — page 131
- 23.4 Technical specification — Wireless hub — page 131
- 23.5 Technical specification — Wireless handset — page 132
- 23.6 Technical specification — Wireless handset charging holster — page 132
- 23.7 Technical specification — Wireless (Active) speaker — page 132
- 23.8 Radio usage — page 133

23.1 Technical specification — Base station

The following technical specification applies to the Ray90 and Ray91.

Power specification

Specification	
Nominal supply voltage:	12 V dc (with over-voltage protection)
Operating voltage range:	10.2 V dc to 16 V dc
Fuse requirements:	<ul style="list-style-type: none"> • Inline fuse = 10 A • Thermal breaker = 7 A
Current consumption:	<ul style="list-style-type: none"> • Less than 6 A at high power (13.6 V) • Standby: 600 mA • Receive: 2 A • Loud hailer: 3 A (8 Ω) / 6 A (4 Ω)
LEN:	1

Environmental specification

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7

Connection specification

Specification	
Wired handsets:	x 2 via HS1 and HS2 connectors
Wireless hub:	x 1 via Hub connector
GNSS (GPS) antenna:	x 1 via GPS connector (TNC)
VHF antenna / splitter:	x 1 via VHF connector (50 Ω SO239)
NMEA 0183 input:	x 1 via bare-ended wires on data cable
NMEA 0183 output:	x 1 via bare-ended wires on data cable
NMEA 2000 / SeaTalk NG:	x 1 via N2K (DeviceNet) connector
Loud hailer:	x 1 via bare-ended wires on data cable.

VHF Transmitter specification

Specification	
Channels:	All available US, International and Canadian VHF marine bands
Frequency Range:	156.025 MHz to 157.425 MHz / 155.500 MHz to 161.425 MHz (Private channels)
Frequency stability:	+/- 1.5 ppm
Channel Spacing:	25 kHz
Power Output:	<ul style="list-style-type: none"> • Low power setting — 1 W • High power setting — 25 W
Spurious emissions:	Better than -36 dBm at 25 W (Less than 0.25 μW)
Maximum deviation:	+/- 5 KHz
Antenna impedance:	50 Ω (typical)

Receiver specification

Specification	
Receiver type:	Double conversion super heterodyne
Channels:	All available US, International and Canadian VHF marine bands
Frequency range:	156.050 MHz to 163.275 MHz / 155.500 MHz to 161.425 MHz (Private channels)
Sensitivity:	Better than 1 microvolt EMF @ 20dB SINAD
Squelch sensitivity:	Less than -2 dB μ EMF
Hum and noise:	Better than -40 dB
Audio distortion:	Less than 10%
Receiver sensitivity:	<ul style="list-style-type: none">• Distance — 119dBm (0.25uV) @ 12dB SINAD (typical)• Local — 110dBm (0.7uV) @ 12dB SINAD (typical)
Adjacent channel selectivity:	More than 70 dB
Spurious response rejection:	More than 70 dB
Inter modulation rejection:	More than 68 dB

GNSS (GPS) specification

Specification	
Channels:	72
Cold start:	29 seconds

Specification	
Receiver IC Sensitivity:	<ul style="list-style-type: none">• Tracking and navigation = -167 dBm• Reacquisition = -160 dBm• Cold start = -146 dBm• Hot start = -156 dBm
GNSS compatibility:	<ul style="list-style-type: none">• GPS• GLONASS• Beidou
SBAS compatibility:	<ul style="list-style-type: none">• QZSS• WAAS• EGNOS• MSAS• GAGAN
Special features:	Active Jamming and Interference Reduction
Operating frequency:	<ul style="list-style-type: none">• GPS L1 C/A• GLONASS L10F• Beidou B1
Signal Acquisition:	Automatic
Almanac Update:	Automatic
Geodetic Datum:	WGS-84 (alternatives available through Raymarine MFD)
Refresh Rate:	20 Hz (20 times per second Concurrent GNSS)
Antenna:	<ul style="list-style-type: none">• External — An external passive antenna is required
Horizontal Position Accuracy:	<ul style="list-style-type: none">• Autonomous = 2.5 m (8.2 ft)• SBAS = 2 m (6.56 ft)

AIS (Ray91 only)

Specification	
Class type:	Receiver only

23.2 Technical specification — Wired handset (Raymic)

The following technical specifications apply to the Wired handset.

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7
Max speaker power output:	1 W (16 Ω)
VHF radio compatibility:	<ul style="list-style-type: none">• Ray90 / Ray91• Ray63 / Ray73• Ray60 / Ray70

23.3 Technical specification — Wired (Passive) speaker

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7
Max speaker power output:	5 W (8 Ω)

Specification	
Connection:	RCA female connector, connects to Wired handset via adaptor cable (A80297)
VHF radio compatibility:	<ul style="list-style-type: none">• Ray90 / Ray91• Ray53 / Ray63 / Ray73• Ray50 / Ray52 / Ray60 / Ray70

23.4 Technical specification — Wireless hub

The following technical specification applies to the Wireless hub accessory.

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7
Wireless frequency:	2.4 GHz
Connections:	<ul style="list-style-type: none">• Connects to Base station via 12-pin connector.• Connects wireless handsets via 2.4 GHz wireless connection.
VHF radio compatibility:	<ul style="list-style-type: none">• Ray90 / Ray91• Ray63• Ray73

23.5 Technical specification — Wireless handset

Wireless handset

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7
Max speaker power output:	1 W (16 Ω)
Wireless frequency:	2.4 GHz
Connections:	<ul style="list-style-type: none">• x 1 Wireless hub connection via 2.4 GHz wireless connection• x 1 Wireless (Active) speaker via 2.4 GHz wireless connection
VHF radio compatibility:	<ul style="list-style-type: none">• Ray90 / Ray91• Ray63 / Ray73

Battery specification

Specification	
Battery type:	Rechargeable Lithium ion
Replaceable:	No
Capacity:	2000 mAh
Talk time:	8 hours
Standby:	100 hours
Charge time:	5 hours

23.6 Technical specification — Wireless handset charging holster

Power specification

Specification	
Nominal supply voltage:	12 V dc (with over-voltage protection)
Operating voltage range:	10.2 V dc to 16 V dc
Fuse requirements:	<ul style="list-style-type: none">• Inline fuse = 2 A• Thermal breaker = 2 A
Current consumption:	1 A nominal
Charge type:	Wireless inductive charging
Power output:	1 A

Environmental specification

Specification	
Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7

23.7 Technical specification — Wireless (Active) speaker

Power specification

Specification	
Nominal supply voltage:	12 V dc (with over voltage protection)
Operating voltage range:	10.2 V dc to 16 V dc

Specification

Fuse requirements:	<ul style="list-style-type: none">• Inline fuse = 2 A• Thermal breaker = 2 A
Current consumption:	1 A nominal
Max speaker power output:	5 W (8 Ω)

Environmental specification

Specification

Operating temperature:	-25°C (-13°F) to +55°C (131°F)
Storage temperature:	-25°C (-13°F) to +70°C (158°F)
Relative humidity:	95%
Water proofing:	IPx6 & IPx7

Connections

Specification

Connection:	x 1 Wireless handset connection via 2.4 GHz Wireless connection
VHF radio compatibility (via wireless hub):	<ul style="list-style-type: none">• Ray90 / Ray91• Ray63 / Ray73

23.8 Radio usage

The radio can be used worldwide, including the following European countries:

Countries

AT	CZ	FI	IE	LU	PL	SK
BE	DE	FR	IS	LV	PT	TR
BG	DK	GB	IT	MT	RO	
CH	EE	GR	LI	NL	SE	
CY	ES	HU	LT	NO	SI	

CHAPTER 24: SPARES AND ACCESSORIES

CHAPTER CONTENTS

- 24.1 Ray90 / Ray91 spares — page 135
- 24.2 Extension cables — page 135
- 24.3 Accessories — page 135
- 24.4 SeaTalk NG cables and accessories — page 136

24.1 Ray90 / Ray91 spares

The following spares are available for the Ray90 / Ray91:

Part number	Description
R70624	Ray90 base station
R70625	Ray91 base station
R70616	Wireless handset
R70617	Wireless handset charging holster
R70618	Volume knob for the wireless active speaker
R70619	Bezel for passive and active speaker
R70492	Wired handset holster
R70438	Panel mount fixing kit
R70484	Handset hook plate (mounting clip)

24.2 Extension cables

The following extension cables are available:

Part number	Description
A80291	Wired handset extension cable 5 m (16.4 ft)
A80292	Wired handset extension cable 10 m (32.8 ft)
A80290	Wired handset extension cable 15 m (49.2 ft)
A80297	Wired handset adaptor cable with male RCA audio (400 mm 1.3 ft)

24.3 Accessories

The following accessories are available;

Base station accessories

Part number	Description
A80288	Passive GNSS (GPS) antenna
M95435	Loud hailer / Fog horn

Wired handset station accessories

Part number	Description
A80542	Wired passive speaker
A80289	Wired handset including mounting holster
A80291	Wired handset extension cable 5 m (16.4 ft)
A80292	Wired handset extension cable 10 m (32.8 ft)
A80290	Wired handset extension cable 15 m (49.2 ft)
A80297	Wired handset adaptor cable with male RCA audio (400 mm 1.3 ft)

Wireless handset station accessories

Part number	Description
A80540	Wireless hub
A80541	Wireless hub antenna extension 5m (16.4 ft)
A80543	Wireless active speaker
A80544	Wireless handset including charging holster
R70739	Wireless hub adaptor for Ray63/Ray73


24.4 SeaTalk NG cables and accessories

SeaTalk NG cables and accessories for use with compatible products.

SeaTalk NG kits


SeaTalk NG kits enable you to create a simple SeaTalk NG backbone.

Starter kit (part number: T70134) consists of:

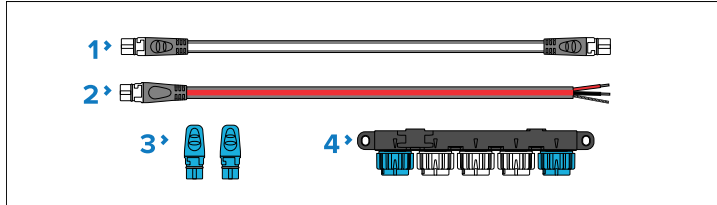

- 1 x Spur cable 3 m (9.8 ft) (part number: **A06040**). Used to connect device to the SeaTalk NG backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalk NG backbone.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.
- 1 x 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalk NG devices. Multiple connector blocks can be 'daisy chained' together.


Backbone kit (part number: A25062) consists of:

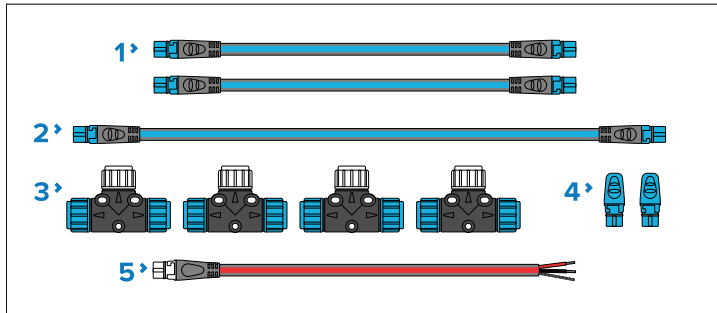

- 2 x Backbone cables 5 m (16.4 ft) (part number: **A06036**). Used to create and extend the SeaTalk NG backbone.


- 1 x Backbone cable 20 m (65.6 ft) (part number: **A06037**). Used to create and extend the SeaTalk NG backbone.
- 4 x T-piece (part number: **A06028**). Each T-piece allows connection of one SeaTalk NG device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalk NG backbone.

Evolution-Series autopilot cable kit (part number: R70160) consists of:

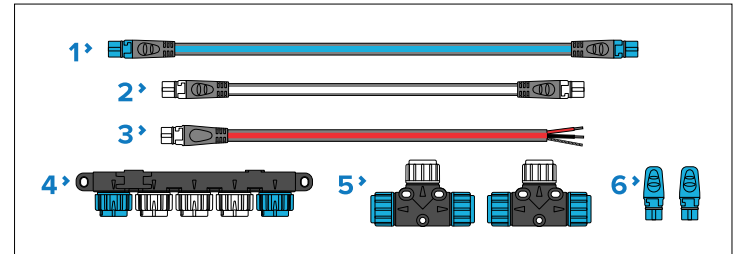


- 1 x Backbone cable 5 m (16.4 ft) (part number: **A06036**). Used to create and extend the SeaTalk NG backbone.
- 1 x Spur cable 1 m (3.3 ft) (part number: **A06040**). Used to connect device to the SeaTalk NG backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalk NG backbone.
- 1 x 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalk NG devices. Multiple connector blocks can be 'daisy chained' together.
- 2 x T-pieces (part number: **A06028**). Each T-piece allows connection of one SeaTalk NG device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.

SeaTalk 1 to SeaTalk NG converter kit (part number: E22158) consists of:

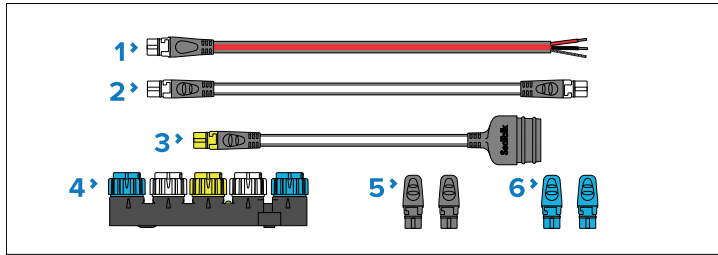

- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalk NG backbone.
- 1 x Spur cable 1 m (3.3 ft) (part number: **A06039**). Used to connect a device to the SeaTalk NG backbone.
- 1 x SeaTalk 1 (3 pin) to SeaTalk NG adapter cable 0.4 m (1.3 ft) (part number: **A22164**). Used to connect SeaTalk 1 devices to the SeaTalk NG backbone via the SeaTalk 1 to SeaTalk NG converter.
- 1 x SeaTalk 1 to SeaTalk NG converter (part number: **E22158**). Each converter allows connection of one SeaTalk 1 device and up to 2 SeaTalk NG devices.
- 2 x Spur blanking plugs (part number: **A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors and SeaTalk 1 to SeaTalk NG converter.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.

NMEA 0183 VHF 2-wire to SeaTalk NG converter kit (part number: E70196) consists of:

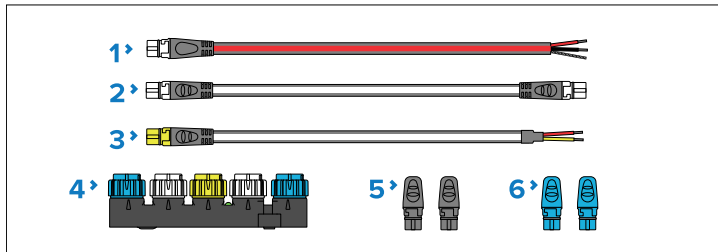


- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalk NG backbone.
- 1 x Spur cable 1 m (3.3 ft) (part number: **A06039**). Used to connect a device to the SeaTalk NG backbone.

- 1 x NMEA 0183 VHF stripped-end (2-wire) to SeaTalk NG adapter cable 1 m (3.3 ft) (part number: **A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalk NG backbone via the NMEA 0183 to SeaTalk NG converter.
- 1 x SeaTalk 1 to SeaTalk NG converter (part number: **E22158**). Each converter allows connection of one SeaTalk 1 device and up to 2 SeaTalk NG devices.
- 2 x Spur blanking plugs (part number: **A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors, and the SeaTalk 1 to SeaTalk NG converter.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.

SeaTalk NG spur cables

SeaTalk NG spur cables are required to connect devices to the SeaTalk NG backbone.

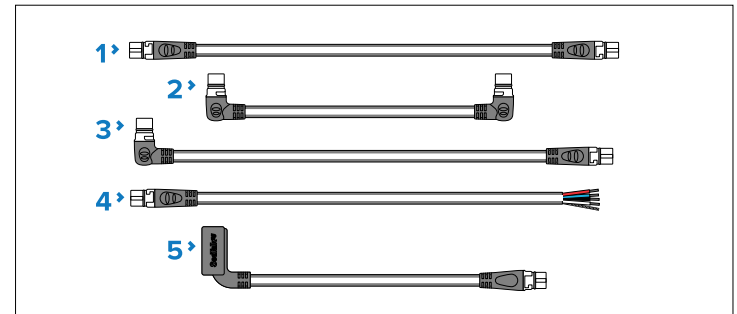


- SeaTalk NG spur cables:
 - Spur cable 0.4 m (1.3 ft) (part number: **A06038**).
 - Spur cable 1 m (3.3 ft) (part number: **A06039**).
 - Spur cable 3 m (9.8 ft) (part number: **A06040**).
 - Spur cable 5 m (16.4 ft) (part number: **A06041**).
- Elbow (right-angled) to elbow (right-angled) spur cable 0.4 m (1.3 ft) (part number: **A06042**). Used in confined spaces where a straight spur cable will not fit.
- Elbow (right-angled) to straight spur cable 1 m (3.3 ft) (part number: **A06081**). Used in confined spaces where a straight spur cable will not fit.

4. SeaTalk NG to stripped-end spur cables (connects compatible products that do not have a SeaTalk NG connector, such as transducer pods):
 - SeaTalk NG to stripped-end spur cable 1 m (3.3 ft) (part number: **A06043**)
 - SeaTalk NG to stripped-end spur cable 3 m (9.8 ft) (part number: **A06044**)
5. ACU-Series / SPX-Series autopilot to SeaTalk NG spur cable 0.3 m (1.0 ft) (part number **R12112**). Connects the course computer to the SeaTalk NG backbone. This connection can also be used to provide 12 V dc power to the SeaTalk NG backbone.

SeaTalk NG backbone cables


SeaTalk NG backbone cables are used to create or extend a SeaTalk NG backbone.

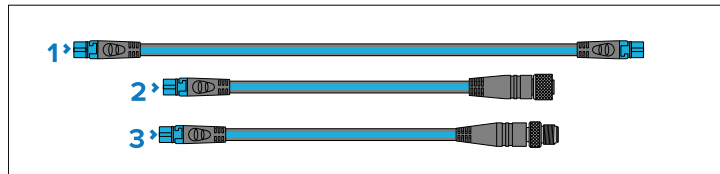

1. Backbone cables:
 - Backbone cable 0.4 m (1.3 ft) (part number: **A06033**).
 - Backbone cable 1 m (3.3 ft) (part number: **A06034**).
 - Backbone cable 3 m (9.8 ft) (part number: **A06035**).
 - Backbone cable 5 m (16.4 ft) (part number: **A06036**).
 - Backbone cable 9 m (29.5 ft) (part number: **A06068**).
 - Backbone cable 20 m (65.6 ft) (part number: **A06037**).
2. SeaTalk NG to DeviceNet (female) Backbone cable 0.4 m (1.3 ft) (part number: **A80675**)
3. SeaTalk NG to DeviceNet (male) Backbone cable 0.4 m (1.3 ft) (part number: **A80674**)

SeaTalk NG power cables


SeaTalk NG power cables are used to provide the SeaTalk NG backbone with a single 12 V dc power source. The power connection must include a 5 amp inline fuse (not supplied).

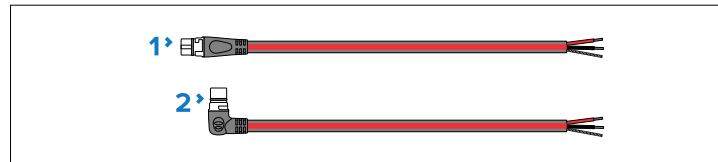

1. Power cable (straight) 2 m (6.6 ft) (part number: **A06049**).
2. Elbow (right-angled) power cable 2 m (6.6 ft) (part number: **A06070**).

SeaTalk NG connectors


SeaTalk NG connectors are used to connect SeaTalk NG devices to the SeaTalk NG backbone and to create and extend the backbone.

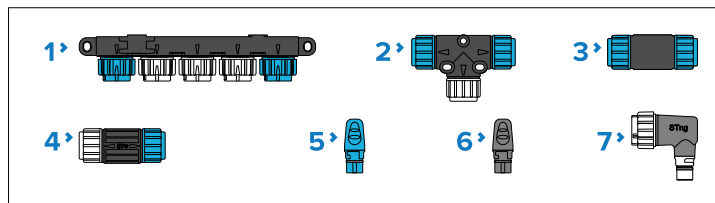

1. 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalk NG devices. Multiple connector blocks can be 'daisy chained' together.
2. T-piece (part number: **A06028**). Each T-piece allows connection of one SeaTalk NG device. Multiple T-pieces can be 'daisy chained' together.
3. Backbone extender (part number: **A06030**). Used to connect 2 backbone cables together.
4. Inline terminator (part number: **A80001**). Used to connect a spur cable and SeaTalk NG device at the end of a backbone instead of a backbone terminator.
5. Backbone terminator (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalk NG backbone.
6. Spur blanking plug (part number: **A06032**). Used to cover unused spur connections in 5-Way blocks, T-piece connectors, or the SeaTalk 1 to SeaTalk NG converter.
7. Elbow (right-angled) spur connector (part number: **A06077**). Used in confined spaces where a straight spur cable will not fit.

SeaTalk NG adaptors and adaptor cables

SeaTalk NG adaptor cables are used to connect devices designed for different CAN Bus backbones (e.g.: SeaTalk 1 or DeviceNet) to the SeaTalk NG backbone.

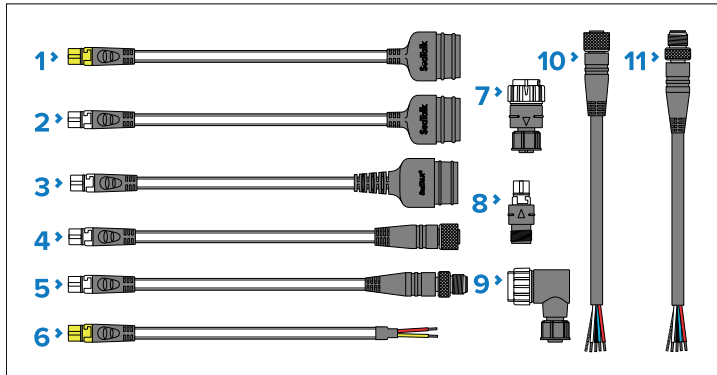

1. SeaTalk 1 (3 pin) to SeaTalk NG converter cable 1 m (3.3 ft) (part number: **A22164 / A06073**). Can be used to connect a SeaTalk 1 device to a SeaTalk NG backbone via the SeaTalk 1 to SeaTalk NG converter, or to connect a SeaTalk NG product directly to a SeaTalk 1 network.
2. SeaTalk 1 (3 pin) to SeaTalk NG adaptor cable 0.4 m (1.3 ft) (part number: **A06047**). Can be used to connect a SeaTalk 1 device to a SeaTalk NG backbone via the SeaTalk 1 to SeaTalk NG converter, or to connect a SeaTalk NG product directly to a SeaTalk 1 network.
3. SeaTalk 2 (5 pin) to SeaTalk NG adaptor cable 0.4 m (1.3 ft) (part number: **A06048**). Used to connect SeaTalk 2 devices or networks to a SeaTalk NG backbone.
4. SeaTalk NG to DeviceNet (female) adaptor cables connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalk NG backbone, or connects SeaTalk NG devices to an NMEA 2000 network. The following cables are available:
 - SeaTalk NG to DeviceNet (female) adaptor cable 0.4 m (1.3 ft) (part number: **A06045**).
 - SeaTalk NG to DeviceNet (female) adaptor cable 1 m (3.3 ft) (part number: **A06075**).
5. SeaTalk NG to DeviceNet (male) adaptor cables. Connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalk NG backbone, or connect SeaTalk NG devices to an NMEA 2000 network. The following cables are available:
 - SeaTalk NG to DeviceNet (male) adaptor cable 0.1 m (0.33 ft) (part number: **A06078**).
 - SeaTalk NG to DeviceNet (male) adaptor cable 0.4 m (1.3 ft) (part number: **A06074**).
 - SeaTalk NG to DeviceNet (male) adaptor cable 1 m (3.3 ft) (part number: **A06076**).
 - SeaTalk NG to DeviceNet (male) adaptor cable 1.5 m (4.92 ft) (part number: **A06046**).
6. NMEA 0183 stripped-end (2-wire) to SeaTalk NG adapter cable 1 m (3.3 ft) (part number: **A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalk NG backbone via the NMEA 0183 to SeaTalk NG converter.
7. SeaTalk NG (male) to DeviceNet (female) adaptor (**A06082***).
8. SeaTalk NG (female) to DeviceNet (male) adaptor (**A06083***).
9. SeaTalk NG (male) to DeviceNet (female) elbow (right-angled) adaptor (**A06084***).
10. DeviceNet (female) to stripped-end adaptor cable (0.4 m (1.3 ft)) (part number: **E05026**).
11. DeviceNet (male) to stripped-end adaptor cable (0.4 m (1.3 ft)) (part number: **E05027**).

Important:

* Do NOT connect the A06082, A06083, or A06084 adaptors directly to a backbone. Only connect as part of a **spur** connection between backbone and device.

Appendix A NMEA 0183 sentences

The radio supports the following NMEA 0183 sentences.

Sentence	Description	Ray90 Receive	Ray90 Transmit	Ray91 Receive	Ray91 Transmit
DSC	Digital Selective Calling		●		●
DSE	Expanded Digital Selective Calling		●		●
VDM	AIS VHF Data Link Message				●
GGA	Global Positioning System Fix Data	●		●	
GLL	Geographic Position — Lat/Long	●		●	
GNS	GNSS Fix Data	●		●	
RMA	Recommended Minimum Specific Loran-C Data	●		●	
RMC	Recommended Minimum Specific GNSS Data	●		●	
DTM	Datum	●		●	

Appendix B NMEA 2000 PGN list

The radio supports the following NMEA 2000 PGNs. These are applicable to NMEA 2000 and SeaTalk NG protocols.

Sentence	Description	Ray90 Receive	Ray90 Transmit	Ray91 Receive	Ray91 Transmit
59392	ISO Request	●	●	●	●
59904	ISO Acknowledgement	●	●	●	●
60928	ISO Address Claim	●	●	●	●
126208	NMEA® — Group Function	●	●	●	●
126464	PGN List		●		●
126996	Product Information		●		●
127258	Magnetic variation	●		●	
129026	COG / SOG Rapid Update	●		●	
129029	GNSS Position Data	●	●	●	●
129038	AIS Class A Position Report				●
129039	AIS Class B Position Report				●
129040	AIS Class B Extended Position Report				●
129041	AIS Aids to Navigation (AtONs)				●
129044	Datum	●		●	
129793	AIS UTC and Date Report				●
129794	AIS Class A Static and Voyage Related data				●
129798	AIS SAR Aircraft Position Report				●
129801	AIS Addressed Safety Related Message				●
129802	AIS Safety Related Broadcast Message				●
129808	DSC Call Information		●		●
129809	AIS Class B “CS” Static Data Report, Part A				●
129810	AIS Class B “CS” Static Data Report, Part B				●

Appendix C Licensing and MMSI issuing authorities

The following table lists the relevant issuing authority for licences and MMSI numbers in each region, along with a link to the relevant website. Many authorities allow you to apply for a license online.

Country & regulatory authority	Website
Argentina (AR): Ente Nacional de Comunicaciones	http://www.enacom.gob.ar
Australia (AU): Australian Communications and Media Authority	http://www.acma.gov.au/
Austria (AT): Austrian Regulatory Authority for Broadcasting and Telecommunications	http://www.rtr.at
Belgium (BE): Belgian Institute for Postal services and Telecommunications (BIPT)	http://www.bipt.be
Brazil (BR): Agencia Nacional de Telecomunicacoes	http://www.anatel.gov.br
Bulgaria (BG): Communications Regulation Commission	http://www.crc.bg
Canada (CA): Industry Canada	https://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/home
China (ZH): Ministry of Information Industry	http://www.mii.gov.cn
Costa Rica (CR): Superintendencia de Telecomunicaciones	http://sutel.go.cr
Croatia (HR): Croatian Post and Electronic Communications Agency	http://www.hakom.hr/default.aspx?id=7

Country & regulatory authority	Website
Cyprus (CY): Office of Electronic Communications & Postal Regulation	http://www.ocecpr.org.cy/nqcontent.cfm?a_id=767&tt=ocecpr&lang=gr
Czech Republic (CZ): The Czech Telecommunication Office	http://www.ctu.eu/main.php?pageid=178
Denmark (DK): Danish Energy Agency	https://ens.dk/en
Estonia (EE): Estonian Competition Authority	http://www.konkurentsiamet.ee/?lang=en
Finland (FI): Finnish Communications Regulatory Authority	http://www.ficora.fi/en
France (FR): Autorité de Régulation des Communications Électroniques et des Postes	http://www.arcep.fr
Germany (DE): Bundesnetzagentur	http://www.bundesnetzagentur.de
Greece (EL): Hellenic Telecommunications and Post Commission	http://www.eett.gr/opencms/opencms/EETT_EN/index.html
Holland (NL): Autoriteit Consument & Markt	https://www.acm.nl/nl
Hong Kong (HK): Office of Communications Authority	http://www.ofca.gov.hk
Hungary (HU): National Media and Infocommunication Authority	http://www.nmhh.hu
Iceland (IS): Post and Telecom Administration	http://www.pfs.is/default.aspx?cat_id=101

Country & regulatory authority	Website
Indonesia (ID): Indonesian Telecommunications Regulatory Authority	http://www.brti.or.id
Ireland (IE): Commission for Communications Regulation	http://www.comreg.ie
Isle of Man (IM): Communications Commission	http://www.gov.im/government/boards/cc.xml
Italy (IT): Autorità per le Garanzie nelle Comunicazioni	http://www.agcom.it
Jamaica (JM): Spectrum Management Authority	http://www.sma.gov.jm
Japan (JP): Ministry of Internal Affairs and Communications	http://www.soumu.go.jp/english/index.html
Korea, South (KR): Korea Communications Commission	http://eng.kcc.go.kr
Lichtenstein (LI): Office for Communications	http://www.llv.li/amtstellen/llv-ak-english-page.htm
Lithuania (LT): Communications Regulatory Authority	http://www.rtt.lt/en/home.html
Luxembourg (LU): Institut luxembourgeois de régulation	http://www.ilr.public.lu
Latvia (LV): Elektronisko sakaru direkcija	https://www.vases.lv/lv/content/juras-sakaru-atlaujas
Malaysia (MY): Malaysian Communications and Multimedia Commission	http://www.mcmc.gov.my

Country & regulatory authority	Website
Malta (MT): Malta Communications Authority	http://www.mca.org.mt
Mexico (MX): Instituto Federal de Telecomunicaciones	http://www.ift.org.mx
New Zealand (NZ): Commerce Commission of New Zealand	http://www.comcom.govt.nz
Norway (NO): Norwegian Communications Authority	http://www.nkom.no
Panama (PA): Autoridad Nacional de los Servicios Públicos	http://www.asep.gob.pa/default.asp
Poland (PL): Prezes Urzędu Komunikacji Elektronicznej	http://www.uke.gov.pl
Portugal (PT): Autoridade Nacional de Comunicações	https://www.anacom.pt
Romania (RO): National Authority for Management and Regulation in Communications of Romania	http://www.ancom.org.ro/en
Russia (RU): Ministry of Telecom and Mass Communications of the Russian Federation	https://minsvyaz.ru/en
Saudi Arabia (SA): Communications and Information Technology Commission (Saudi Arabia)	http://www.citc.gov.sa

Country & regulatory authority	Website
Singapore (SG): Info-communications Media Development Authority of Singapore	https://www.imda.gov.sg
Slovenia (SI): Agency for communication networks and services of the Republic of Slovenia	http://www.akos-rs.si/akos-ang
Slovakia (SK): Telecommunications Regulatory Authority of the Slovak Republic	http://www.teleoff.gov.sk / index.php?ID=9
South Africa (ZA): Independent Communications Authority of South Africa	http://www.icasa.org.za
Spain (ES): Comisión Nacional de los Mercados y la Competencia	https://www.cnmc.es/en
Sweden (SE): Swedish Post and Telecom Authority	http://www.pts.se
Switzerland (CH): Office fédéral de la communication	http://www.bakom.admin.ch/ themen/frequenzen/00689/ 01563/index.html?lang=fr
Taiwan (TW): National Communications Commission	http://www.ncc.gov.tw/english/ index.aspx
Thailand (TH): National Broadcasting and Telecommunications Commission	http://nbt.go.th/wps/portal/ NTC/eng
Turkey (TR): Information And Communication Technologies Authority	http://eng.btk.gov.tr

Country & regulatory authority	Website
United Arab Emirates (AE): Telecommunications Regulatory Authority	http://www.tra.ae
United Kingdom and Northern Ireland (UK (NI)): OFCOM	http://www.ofcom.org.uk
United States (US): FCC	https://www.fcc.gov/bureau- divisions/mobility-division/ship- radio-stations#block-menu- block-4

Appendix D VHF Channels

International Marine VHF Channels and Frequencies

CH No.	TX Freq	RX Freq (MHz)	Single Freq (MHz)	Use
01	156.050	160.650		Public correspondence, Port operations and Ship movement.
02	156.100	160.700		Public correspondence, Port operations and Ship movement.
03	156.150	160.750		Public correspondence, Port operations and Ship movement.
04	156.200	156.800		Public correspondence, Port operations and Ship movement.
05	156.250	156.850		Public correspondence, Port operations and Ship movement.
06	156.300	156.300	x	Intership. Coordinated search and rescue and ship stations working frequency
07	156.350	160.950		Public correspondence, Port operations and Ship movement.
08	156.400	156.400	x	Intership. Preferred intership channel
09	156.450	156.450	x	Intership, Port operations and Ship movement.
10	156.500	156.500	x	Intership, Port operations and Ship movement. SAR, Pollution incidents, MSI broadcasts coordinated with HMCG.
11	156.550	156.550	x	Port operations and Ship movement.
12	156.600	156.600	x	Port operations and Ship movement.
13	156.650	156.650	x	Intership navigation safety (Bridge-to-bridge). International navigation safety channel. May also be used for ship movement, port operations and limited coast stations.
14	156.700	156.700	x	Port operations and Ship movement.
15	156.750	156.750	x	On-board communications. 1 watt maximum power.
16	156.800	156.800	x	International Distress, Safety and Calling.
17	156.850	156.850	x	On-board communications. 1 watt maximum power.
18	156.900	161.500		Public correspondence, Port operations and Ship movement.
19	156.950	161.550		Public correspondence, Port operations and Ship movement.

CH No.	TX Freq	RX Freq (MHz)	Single Freq (MHz)	Use
1019	156.950	156.950	x	Port operations and Ship movement.
2019	161.550	161.550	x	Port operations and Ship movement. Channel is limited to coast stations only unless otherwise permitted by UK regulation.
20	157.000	161.600		Public correspondence, Port operations and Ship movement.
1020	157.000	157.000	x	Public correspondence, Port operations and Ship movement.
2020	161.600	161.600	x	Public correspondence, Port operations and Ship movement. Channel is limited to coast stations only unless otherwise permitted by UK regulation.
21	157.050	161.650		Public correspondence, Port operations and Ship movement. Available for VDSMS
22	157.100	161.700		Public correspondence, Port operations and Ship movement. Available for VDSMS
23	157.150	161.750		Safety. HNCG — SAR and MSI broadcasts.
24	157.200	161.800		Public correspondence, Port operations and Ship movement. Available for VDSMS
1024	157.200	157.200	x	For future use
2024	161.800	161.800	x	For future use
25	157.250	161.850		Public correspondence, Port operations and Ship movement. Available for VDSMS
1025	157.250	157.250	x	For future use
2025	161.850	161.850	x	For future use
26	157.300	161.900		Public correspondence, Port operations and Ship movement. Available for VDSMS
1026	157.300	157.300	x	For future use
2026	161.900	161.900	x	For future use
27	157.350	161.950		Public correspondence, Port operations and Ship movement. Available for testing of new AIS applications.
1027	157.350	157.350	x	Port operations and Ship movement.

CH No.	TX Freq	RX Freq (MHz)	Single Freq (MHz)	Use
2027	161.950	161.950	x	Application specific message (ASM1)
28	157.400	162.000		Public correspondence, Port operations and Ship movement. Available for testing of new AIS applications.
1028	157.400	157.400	x	Port operations and Ship movement.
2028	162.00	162.00	x	Application specific message (ASM2)
60	156.025	160.625		Public correspondence, Port operations and Ship movement.
61	156.075	160.675		Public correspondence, Port operations and Ship movement.
62	156.125	160.725		Public correspondence, Port operations and Ship movement.
63	156.175	160.775		Public correspondence, Port operations and Ship movement.
64	156.225	160.825		Public correspondence, Port operations and Ship movement.
65	156.275	160.875		UK National Coastwatch.
66	156.325	160.925		Public correspondence, Port operations and Ship movement.
67	156.375	156.375	x	Intership, Port operations and Ship movement. HMCG — SAR and Safety.
68	156.425	156.425	x	Port operations and Ship movement.
69	156.475	156.475	x	Intership, Port operations and Ship movement.
71	156.575	156.575	x	Port operations and Ship movement.
72	156.625	156.625	x	Intership. Preferred intership channel.
73	156.675	156.675	x	Intership, Port operations and Ship movement. HMCG — SAR and MSI broadcasts.
74	156.725	156.725	x	Port operations and Ship movement.
75	156.775	156.775	x	Intership Navigation related communications only with 1 watt maximum power.
76	156.825	156.825	x	Intership Navigation related communications only with 1 watt maximum power.
77	156.875	156.875	x	Intership. Preferred intership channel.

CH No.	TX Freq	RX Freq (MHz)	Single Freq (MHz)	Use
78	156.925	161.525		Public correspondence, Port operations and Ship movement.
1078	156.925	156.925	x	Port operations and Ship movement.
2078	161.525	161.525	x	Port operations and Ship movement. Channel is limited to coast stations only unless otherwise permitted by UK regulation.
79	156.975	161.575		Public correspondence, Port operations and Ship movement.
1079	156.975	156.975	x	Port operations and Ship movement.
2079	161.575	161.575	x	Port operations and Ship movement. Channel is limited to coast stations only unless otherwise permitted by UK regulation.
80	157.025	161.625		Public correspondence, Port operations and Ship movement. Also marinas and yacht clubs UK only. Available for VDSMS.
81	157.075	161.675		Public correspondence, Port operations and Ship movement. Available for VDSMS
82	157.125	161.725		Public correspondence, Port operations and Ship movement. Available for VDSMS
83	157.175	161.775		Public correspondence, Port operations and Ship movement. Available for VDSMS
84	157.225	161.825		Port operations and Ship movement. HMCG — SAR and MSI broadcasts.
1084	157.225	157.225	x	For future use
2084	161.825	161.825	x	For future use
85	157.275	161.875		Public correspondence, Port operations and Ship movement. Available for VDSMS
1085	157.275	157.275	x	For future use
2085	161.875	161.875	x	For future use
86	157.325	161.925		Port operations and Ship movement. HMCG — SAR and MSI broadcasts.
1086	157.325	157.325	x	For future use
2086	161.925	161.925	x	For future use

CH No.	TX Freq	RX Freq (MHz)	Single Freq (MHz)	Use
87	157.375	157.375	x	Port operations and Ship movement. Available for testing of new AIS applications.
88	157.425	157.425	x	Port operations and Ship movement. Available for testing of new AIS applications.

Please be aware that:

- Intership channels are for communications between ship stations. Intership communications should be restricted to channels 6, 8, 72 and 77. If these are not available, the other channels marked for Intership may be used.
- Channel 70 is used exclusively for Digital Selective Calling (DSC) and is not available for regular voice communications.

Note:

1. Channel 06 may also be used for communications between ship stations and aircraft engaged in coordinated search and rescue operations. Ship stations should avoid harmful interference to such communications on channel 06 as well as to communications between aircraft stations, ice breakers and assisted ships during ice seasons.
2. Within the European Maritime Area and in Canada, channels 10, 67 and 73 may also be used by the individual administrations concerned for communication between ship stations, aircraft stations and participating land stations engaged in coordinated search and rescue and anti-pollution operations in local areas. Channel 10 or 73 (depending on location) are also used for the broadcast of Marine Safety Information by the Maritime and Coast Guard Agency in the UK only.
3. Channel 13 is designated for use on a worldwide basis as a navigation safety communication channel, primarily for intership navigation safety communications.
4. Channels 15 and 17 may also be used for on-board communications provided the effective radiated power does not exceed 1 Watt.
5. The use of channels 75 and 76 should be restricted to navigation related communications only and all precautions should be taken to avoid harmful interference to channel 16. Transmit power is limited to 1 Watt.

Private Channels (Europe only)

Country	Channel Designations	TX Freq	RX Freq	Channel Use
Belgium	96	162.425	162.425	Marina
Denmark	L1	155.500	155.500	Pleasure
Denmark	L2	155.525	155.525	Pleasure
Finland, Norway & Sweden	L1	155.500	155.500	Pleasure

Country	Channel Designations	TX Freq	RX Freq	Channel Use
Finland, Norway & Sweden	L2	155.525	155.525	Pleasure
Finland, Norway & Sweden	L3	155.650	155.650	Pleasure
Holland (Netherlands)	31	157.550	162.150	Marina
Holland (Netherlands)	37	157.850	157.850	Leisure
Denmark, Finland, Norway & Sweden	F1	155.625	155.625	Fishing
Denmark, Finland, Norway & Sweden	F2	155.775	155.775	Fishing
Denmark, Finland, Norway & Sweden	F3	155.825	155.825	Fishing
United Kingdom	M1	157.850	157.850	Marina
United Kingdom	M2	161.425	161.425	Marina

The national channels listed above have been allocated for the specific use within the countries listed. To use these channels you must have the appropriate license.

US Marine VHF Channels and Frequencies

Note:

Some of the channel numbers have recently changed. For completeness, both old and new numbers are shown in the table below.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Use
1001	01A	156.050	156.050	x	Port operations and commercial, VTS. Available only in New Orleans / Lower Mississippi area.
1005	05A	156.250	156.250	x	Port operations or VTS in the Houston, New Orleans and Seattle areas.
06	06	156.300	156.300	x	Intership Safety.
1007	07A	156.350	156.350	x	Commercial. VDSMS.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Use
08	08	156.400	156.400	x	Commercial (Intership only). VDSMS.
09	09	156.450	156.450	x	Boater calling. Commercial and Non-commercial. VDSMS.
10	10	156.500	156.500	x	Commercial. VDSMS.
11	11	156.550	156.550	x	Commercial. VTS in selected areas. VDSMS.
12	12	156.600	156.600	x	Port operations. VTS in selected areas.
13	13	156.650	156.650	x	Intership navigation safety (Bridge-to-bridge). Ships >20 metres in length maintain a listening watch on this channel in US waters.
14	14	156.700	156.700	x	Port operations. VTS in selected areas.
15	15	-	156.750	x	Environmental (Receive only). Used by Class 'C' EPIRBs.
16	16	156.800	156.800	x	International Distress, Safety and Calling. Ships required to carry radio, USCG, and most coast stations maintain a listening watch on this channel.
17	17	156.850	156.850	x	State Control.
1018	18A	156.900	156.900	x	Commercial. VDSMS.
1019	19A	156.950	156.950	x	Commercial. VDSMS.
20	20	157.000	161.600		Port operations (duplex).
1020	20A	157.000	157.000	x	Port operations.
1021	21A	157.050	157.050	x	US Coast Guard only.
1022	22A	157.100	157.100	x	Coast Guard Liaison and Maritime Safety Information Broadcasts. Broadcasts announced on channel 16.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Use
1023	23A	157.150	157.150	x	US Coast Guard only.
24	24	157.200	161.800		Public correspondence (Marine operator).
25	25	157.250	161.850		Public correspondence (Marine operator).
26	26	157.300	161.900		Public correspondence (Marine operator).
27	27	157.350	161.950		Public correspondence (Marine operator).
28	28	157.400	162.000		Public correspondence (Marine operator).
1063	63A	156.175	156.175	x	Port operations and commercial VTS, Available only in New Orleans / Lower Mississippi area.
1065	65A	156.275	156.275	x	Port operations.
1066	66A	156.325	156.325	x	Port operations.
67	67	156.375	156.375	x	Commercial. Used for bridge-to-bridge communications in lower Mississippi river (Intership only).
68	68	156.425	156.425	x	Non-commercial. VDSMS.
69	69	156.475	156.475	x	Non-commercial. VDSMS.
71	71	156.575	156.575	x	Non-commercial. VDSMS.
72	72	156.625	156.625	x	Non-commercial (Intership only). VDSMS.
73	73	156.675	156.675	x	Port operations.
74	74	156.725	156.725	x	Port operations.
77	77	156.875	156.875	x	Port operations (Intership only).
1078	78A	156.925	156.925	x	Non-commercial. VDSMS.
1079	79A	156.975	156.975	x	Commercial. Non-commercial in Great Lakes only). VDSMS.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Use
1080	80A	157.025	157.025	x	Commercial. Non-commercial in Great Lakes only). VDSMS.
1081	81A	157.075	157.075	x	US Government only — Environmental protection operations.
1082	82A	157.125	157.125	x	US Government only.
1083	83A	157.175	157.175	x	US Coast Guard only.
84	84	157.225	161.825		Public correspondence (Marine operator). VDSMS.
85	85	157.275	161.875		Public correspondence (Marine operator). VDSMS.
86	86	157.325	161.925		Public correspondence (Marine operator). VDSMS.
87	87	157.375	161.975		Public correspondence (Marine operator). VDSMS.
88	88	157.425	157.425		Commercial, Intership only. VDSMS.

Please be aware that:

- Recreational boaters normally use channels listed as Non-commercial: 68, 69, 71, 72 1078.
- Channel 70 is used exclusively for DSC and is not available for regular voice communications.
- Channels 75 and 76 are reserved as guards bands for channel 16 and are not available for regular voice communications.

Note:

1. Four digit channels indicate simplex use of the ship station transmit side of an international semi-duplex channel. Operations are different from that of international operations on that channel.
2. Channel 13 should be used to contact a ship when there is danger of collision. All ships of length 20 metres or greater are required to guard VHF channel 13, in addition to VHF channel 16, when operating within US territorial waters.
3. Channel 15 is receive only.
4. Channel 16 is used for calling other stations or for distress calls.
5. Channel 17 and channel 77 have a fixed power output of 1 watt.
6. Channel 13 and channel 67 have an initial power output of 1 watt. User can temporarily override this restrictions to transmit at high power.
7. VDSMS (VHF Digital Small Message Services). Transmissions of short digital messages in accordance with RTCM Standard 12301.1 is allowed.

WX Channels (North America only)

Weather Channel	Frequency in MHz
WX1	162.550
WX2	162.400
WX3	162.475
WX4	162.425
WX5	162.450
WX6	162.500
WX7	162.525
WX8	161.650
WX9	161.775
WX10	163.275

Canadian Marine VHF Channels and Frequencies**Note:**

Some of the channel numbers have recently changed. For completeness, both old and new numbers are shown in the table below.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
01	01	156.050	160.650		BCC	Public correspondence.
02	02	156.100	160.700		BCC	Public correspondence.
03	03	156.150	160.750		BCC	Public correspondence.
1004	04A	156.200	156.200	x	BCC, EC	Intership, Ship/Shore, Commercial and Safety DFO / Canadian Coast Guard only in BCC area. Commercial fishing in EC area.
1005	05A	156.250	156.250	x	AC, BCC, EC, GL, NL, INLD BC, WC	Ship movement.
06	06	156.300	156.300	x	All areas	Intership, Commercial, Non-Commercial and Safety Maybe used for search and rescue communications between ships and aircraft.
1007	07A	156.350	156.350	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore and Commercial.
08	08	156.400	156.400	x	EC, INLD BC, WC	Intership, Commercial and Safety. Also assigned for Intership in the Lake Winnipeg area.
09	09	156.450	156.450	x	AC, INLD PRA, BCC	Intership, Ship/Shore, Commercial, Non-commercial, Safety and Ship movement. Commercial — BCC area. May be used to communicate with aircraft and helicopters in predominantly maritime support operations.
10	10	156.500	156.500	x	AC, BCC, GL	Intership, Ship/Shore, Commercial, Non-commercial, Safety and Ship movement. Commercial — BCC area. May also be used for communications with aircraft engaged in coordinated search and rescue and antipollution operations.
11	11	156.550	156.550	x	AC, BCC, GL	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. VTS — BCC area. Also used for pilotage purposes.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
12	12	156.600	156.600	x	AC, BCC, GL, WC	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. VTS — BCC area. Port operations and pilot information and messages.
13	13	156.650	156.650	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Commercial, Non-commercial and Ship movement. VTS — BCC area. Bridge-to-bridge navigational traffic.
14	14	156.700	156.700	x	AC, BCC, GL	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. VTS — BCC area. Port operations and pilot information and messages.
15	15	156.750	156.750	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. Port operations and Ship movement — BCC area. All operations limited to 1 watt maximum power. May also be used for on-board communications.
16	16	156.800	156.800	x	All areas	International distress, safety and calling.
17	17	156.850	156.850	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. Port operations and Ship movement — BCC area. All operations limited to 1 watt maximum power. May also be used for on-board communications.
1018	18A	156.900	156.900	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore and Commercial. Towing — BCC area.
1019	19A	156.950	156.950	x	All areas	Intership and Ship/Shore. DFO / Canadian Coast Guard. Pacific Pilots — BCC area.
20	20	157.00	161.600		AC, BCC, EC, GL, NL, INLD BC, WC	Ship/Shore, Safety and Ship movement. Port operations only with 1 watt maximum power.
1021	21A	157.050	157.050	x	All areas	Intership and Ship/Shore. DFO / Canadian Coast Guard only.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
2021	21B	-	161.650	x	All areas	Safety Continuous Marine Broadcast (CMB) service.
1022	22A	157.100	157.100	x	All areas	Intership, Ship/Shore, Commercial and Non-commercial. For communications between Canadian Coast Guard and non-Canadian Coast Guard stations only.
23	23	157.150	161.750		BCC, INLD BC	Ship/Shore and Public correspondence.
2023	-	-	161.750	x	GL	Safety Continuous Marine Broadcast (CMB) service.
24	24	157.200	161.800		All areas	Ship/Shore and Public correspondence.
25	25	157.250	161.850		BCC	Ship/Shore and Public correspondence.
2025	25B	-	161.850	x	AC	Safety Continuous Marine Broadcast (CMB) service.
26	26	157.300	161.900		All areas	Safety and Public correspondence.
27	27	157.350	161.950		AC, BCC, GL	Ship/Shore and Public correspondence.
28	28	157.400	162.00		BCC	Ship/Shore, Safety and Public correspondence.
2028	28B	-	162.000	x	AC, GL	Safety Continuous Marine Broadcast (CMB) service.
60	60	156.025	160.625		BCC	Ship/Shore and Public correspondence.
1061	61A	156.075	156.075	x	BCC	Intership, Ship/Shore and Commercial DFO / Canadian Coast Guard only in BCC area. Commercial fishing only in EC area.
1062	62A	156.125	156.125	x	BCC, EC	Intership, Ship/Shore and Commercial DFO / Canadian Coast Guard only in BCC area. Commercial fishing only in EC area.
1063		156.175	156.175	x	BCC	Intership, Ship/Shore and Commercial. Tow boats — BCC area.
64	64	156.225	160.825		BCC	Ship/Shore and Public correspondence.
1064	64A	156.225	156.225	x	EC	Intership, Ship/Shore and Commercial Commercial fishing only.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
1065	65A	156.275	156.275	x	All areas	Intership, Ship/Shore, Safety, Commercial and Non-commercial. Search and rescue and antipollution operations on the Great Lakes. Towing on the Pacific coast. Port operations only in the St. Lawrence river area with 1 watt maximum power. Intership in INLD PRA area.
1066	66A	156.325	156.325	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Safety, Commercial and Non-commercial. Port operations only in the St. Lawrence river / Great Lakes areas with 1 watt maximum power. 1 watt marine channel in BCC area.
67	67	156.375	156.375	x	All areas	Intership Ship/Shore, Safety, Commercial and Non-commercial. May also be used for communications with aircraft engaged in coordinated search and rescue and antipollution operations. Commercial fishing only in EC and INLD PRA areas. Pleasure craft — BCC area.
68	68	156.425	156.425	x	All areas	Intership, Ship/Shore and Non-commercial. For marinas, yacht clubs and pleasure craft.
69	69	156.475	156.475	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Commercial and Non-commercial. Commercial fishing only — EC area. Pleasure craft — BCC area.
71	71	156.575	156.575	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Safety, Commercial,, Non-commercial and Ship movement. Ship movement — BCC area. Marinas and yacht clubs — EC area and on Lake Winnipeg.
72	72	156.625	156.625	x	BCC, EC	Intership, Commercial and Non-commercial May be used to communicate with aircraft and helicopters in predominantly maritime support operations. Pleasure craft — BCC area.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
73	73	156.675	156.675	x	All areas	Intership, Ship/Shore, Safety, Commercial and Non-commercial. May also be used for communications with aircraft engaged in coordinated search and rescue and antipollution operations. Commercial fishing only in EC and INLD PRA areas.
74	74	156.725	156.725	x	BCC, EC	Intership, Ship/Shore, Commercial, Non-commercial and Ship movement. VTS and Ship movement — BCC area.
75		156.775	156.775	x	All areas	Intership, Ship/Shore, Commercial and Ship movement. Simplex port operation, ship movement and navigation related communication only. 1 watt maximum power.
76		156.825	156.825	x	All areas	Intership, Ship/Shore, Commercial and Ship movement. Simplex port operation, ship movement and navigation related communication only. 1 watt maximum power.
77	77	156.875	156.875	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore, Safety and Ship movement. Pilotage BCC area, 25 watts. Port operations only in the St. Lawrence River/Great Lakes areas with 1 watt maximum power.
1078	78A	156.925	156.925	x	BCC, EC	Intership, Ship/Shore and Commercial. Fishing industry — BCC area.
1079	79A	156.975	156.975	x	BCC, EC	Intership, Ship/Shore and Commercial. Fishing industry — BCC area.
1080	80A	157.025	157.025	x	BCC, EC	Intership, Ship/Shore and Non-commercial. Whale watching — BCC area.
1081	81A	157.075	157.075	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership, Ship/Shore and Safety. DFO / Canadian Coast Guard use only.
1082	82A	157.125	157.125	x	AC, BCC, EC, GL, NL, INLD BC, WC	Intership and Ship/Shore. DFO / Canadian Coast Guard use only.

(New) CH No.	(Old) CH No.	TX Freq (MHz)	RX Freq (MHz)	Single Freq	Areas of operation	Use
1083	83A	157.175	157.175	x	BCC, EC	Intership and Ship/Shore DFO / Canadian Coast Guard and other government agencies.
2083	83B	-	161.775	x	AC, BCC, GL	Safety Continuous Marine Broadcast (CMB) service.
84	84	157.225	161.825		BCC	Ship/Shore and Public correspondence.
85	85	157.275	161.875		AC, BCC, GL ,NL	Ship/Shore and Public correspondence.
86	86	157.325	161.925		BCC	Ship/Shore and Public correspondence.
87	87	157.375	157.375	x	AC, BCC, GL, NL	Intership, Non-commercial and Ship movement. Port operation and ship movement — EC area. Pleasure craft — BCC area.
88	88	157.425	157.425	x	AC, BCC, GL, NL	Intership, Commercial and Ship movement. Port operation and ship movement — BCC area.

Area of operation:

- **AC** — Atlantic Coast, Gulf and St. Lawrence River up to and including Montreal.
- **BCC** — British Columbia Coast (Pacific Coast).
- **EC** — East Coast: includes NL, AC, GL and Eastern Arctic areas.
- **GL** — Great Lakes: includes St. Lawrence above Montreal.
- **NL** — Newfoundland and Labrador.
- **WC** — West Coast: includes BCC, Western Arctic and Athabasca-Mackenzie Watershed areas.
- **INLD BC** — Inland waters of BC and the Yukon
- **INLD PRA** — Inland waters of MB, SK and AB

Note:

1. Four digit channels indicate simplex use of the ship station transmit side of an international semi-duplex channel. Operations are different from that of international operations on that channel.
2. Channel 16 is used for calling other stations or for distress calls.
3. Channel 70 is used exclusively for Digital Selective Calling and is not available for regular voice communications.

Appendix E Phonetic alphabet

To help make call letters more clearly understood, and to assist in spelling out similar sounding or unfamiliar word, radiotelephone users employ the international phonetic alphabet.

Letter	Word
A	ALPHA
B	BRAVO
C	CHARLIE
D	DELTA
E	ECHO
F	FOXTROT
G	GOLF
H	HOTEL
I	INDIA
J	JULIET
K	KILO
L	LIMA
M	MIKE
N	NOVEMBER
O	OSCAR
P	PAPA
Q	QUEBEC
R	ROMEO
S	SIERRA
T	TANGO
U	UNIFORM
V	VICTOR
W	WHISKEY

Letter	Word
X	X-RAY
Y	YANKEE
Z	ZULU

Appendix F Prowords

Prowords can be used to simplify and speed up radio communications.

Proword	Meaning
ACKNOWLEDGE	Have you received and understood?
CONFIRM	Is that correct?
CORRECTION	An error has been made?
I SAY AGAIN	I repeat (e.g. important information).
I SPELL	Phonetically spelling of the word.
OUT	End of communication.
OVER	I have completed this part of the message and am inviting you to reply.
RECEIVED	Receipt acknowledgement.
SAY AGAIN	Repeat your message.
STATION CALLING	Used when a station is uncertain of the identity of a station which is calling.

Index

A

Accessories.....	135
SeaTalk NG adaptor cables.....	139
SeaTalk NG backbone cables.....	138
SeaTalk NG cables.....	136
SeaTalk NG connectors.....	138
SeaTalk NG kits.....	136
SeaTalk NG Power cables.....	138
SeaTalk NG spur cables.....	137
Wired.....	135
Wireless.....	135
AIS receiver.....	105
Applicable products.....	16
ATIS	
Enabling/Disabling.....	81, 105
ATIS ID.....	30, 80

B

Backlight adjustment.....	77
Base station	
Power.....	72
Brightness.....	77
Adjustment.....	77
Shared.....	77

C

Cable	
Bend radius.....	44
Protection.....	44–45
Routing.....	44
Security.....	44
Strain relief.....	44
Cable routing.....	38
Cabling	
Circuit isolation.....	44
Call log.....	99
Details.....	99
Types.....	99

Checking password.....	86
Circuit isolation.....	44
Cleaning.....	112
Compass safe distance.....	39
Connections.....	66
Bare-ended wires.....	45
Battery.....	68
DeviceNet.....	62
Distribution panel.....	67
GNSS antenna.....	57
GPS antenna.....	57
Loud hailer.....	64
NMEA 0183.....	60
NMEA 2000.....	62
Overview.....	45, 55
Power.....	66
Raymic handset.....	55
SeaTalk NG.....	62
VHF antenna.....	57
Wire.....	45
Wired speaker.....	56
Wireless handset.....	58
Wireless hub.....	85
Wireless speaker.....	69, 87
Contrast adjustment.....	77
Controls	
Raymic.....	71
Wired handset.....	71
Wireless handset.....	71

D

Dealer set-up.....	76
Declaration of Conformity.....	13
Diagnostics	
Base station.....	114
Wireless speaker.....	114
Digital Selective Calling, <i>See</i> DSC	
Dimensions	
Active speaker.....	34
Base station.....	34
Passive speaker.....	34
Raymic.....	35

Wired handset	35
Wireless hub	35
Display set-up	107
Distress call	91–92
Cancelling	93
Making	92
Documentation	
Product	16
DSC set-up	100

E

Electromagnetic Compatibility	39
EMC	39

F

FCC ID	28
Fuse rating	66
Wireless speaker	69

G

GNSS	
Antenna	19
Displayed data	83
Enabling/Disabling	83
Integrated	83
Internal	83
No position data	83
Position information	83
set-up	82
GPS, <i>See</i> GNSS	
Group call	97
Making	97
Receiving	97

H

Handset	
Power	73
Homescreen	73

I

IC ID	28
Individual call	91
Making	97
Reason codes	96
Receiving	97
Installation	
Best practice	68
EMC guidelines	39
multiple antennas	40, 115
surface requirements	38
Ventilation	38
VHF antenna requirements	40
Intercom	110
Interference	39
<i>See also</i> Compass safe distance	
Electrical	38
RF	38
ISED ID	28

L

LED	
Base station	114
Wireless speaker	114
Licensing	
Additional information	28
Europe requirement	26
ISED (Canada) requirement	26
Issuing authorities	143
Requirement	13, 25, 71
Rest of World requirement	28
USA Requirement	25
Location requirements	
GNSS	39
GPS	39
Wireless	40–41
Wireless interference	41
Loud hailer	64, 109
location requirements	40

M

Maintenance.....	112
Making designated call	92
Manual position.....	83
Mayday call	92
Menus	
Dealer set-up.....	76
Display set-up.....	107
DSC set-up.....	100
Fog	109
Hailer.....	109
Intercom	109
Main menu	75
Set-up.....	105
Wireless set-up	88
MMSI	29, 120
Issuing authorities.....	143
MMSI number	79
Mounting	
Base station	48
Pass-through panel kit	50
Wired handset	49
Wired speaker	49
Wireless handset.....	52
Wireless hub.....	51
Wireless speaker	49
MPE.....	40
Multiple station operation	77

N

Network	
Selection	78
NMEA	
Settings	
Baud rate.....	78
NMEA 0183	
Sentences.....	141
NMEA 2000	
PGNs	142

P

Parts supplied.....	32
Phonebook	98
Adding entry.....	98
Delete entry	99
Editing entry	99
Position request	98
Automatic response	98
Making	98
Responding.....	98
Power	66
Battery connection.....	68
Connection to battery.....	68
Connection to distribution panel	67
Distribution	66
Distribution panel	67
Grounding.....	66
Sharing a breaker	67
Power cable extension.....	68
Printed manual.....	16
Product	
Overview	19
Product documentation.....	16
SeaTalk NG documentation	16
Product recycling (WEEE).....	14
Product support	126

R

Radio Frequency (RF) interference.....	38
Raymic handset.....	22
Routine call, <i>See</i> Individual call	
Routine checks	112

S

Safety call	91
Making.....	96
Receiving.....	96
Scan mode.....	103
Setting	103
SeaTalk NG.....	62

Adaptor cables.....	139
Backbone cables.....	138
Connectors	138
Kits.....	136
Power cables.....	138
Spur cables.....	137
SeaTalk NG cables.....	136
Service Center	126
Servicing	112
Set-up menu.....	105
Shared brightness.....	77
Shared Brightness	77
Software update.....	21
Raymic handset.....	22
Wired handset	22
Software updates	21, 41
Software version	16, 21
Spares	135
Status bar	74
Support forum.....	127
Suppression ferrites	39
<i>See also</i> EMC	
Switching power output	82

T

Technical specification	
Ray90 / Ray91	
AIS (Ray91 only).....	131
Connection specification	129
Environmental specification	129
GNSS (GPS) specification.....	130
Power specification.....	129
Receiver specification.....	130
VHF Transmitter specification.....	129
Wired (Passive) speaker	131
Wired handset (Raymic).....	131
Wireless (Active) speaker	
Connections.....	133
Environmental specification	133
Power specification.....	133
Wireless handset.....	132
Battery specification.....	132

Wireless handset charging holster	
Environmental specification	132
Power specification.....	132
Wireless hub.....	131
Technical support.....	126–127
Test call.....	100
Making.....	100
Receiving.....	100
Thermal breaker rating.....	66
Wireless speaker	69
Training courses.....	127
Transmit power	82
Troubleshooting	115
GNSS.....	119
GPS.....	119
Handset	121
Power	116
VHF radio AIS functions	121
VHF radio alarm audio	118
VHF radio audio	117
VHF radio DSC functions.....	120
Wireless handset / hub.....	122

U

Urgency call	91
Making.....	95
Receiving.....	96

V

VHF antenna	19
VHF channel	
Private (Europe).....	150
VHF channels	
Canada	155
International	146
United States.....	151
Weather (North America).....	155

W

Warranty.....	14, 126
Watch mode.....	103
Dual watch.....	103
Setting.....	103
Triple watch.....	103
WEEE Directive.....	14
Wired components.....	19
Wireless	
Channel.....	42
Channel changing.....	86
Password changing.....	86
Wireless charging.....	85
Wireless components.....	20
Wireless handset stations.....	85
Wireless hub.....	86
Antenna extension.....	52
Pairing.....	85
Password.....	86, 88
Wireless hub settings.....	88
Wireless menu.....	88
Wireless set-up.....	88
Wireless speaker	
Disconnecting.....	87
Pairing.....	87
WirelessPre-installation	
Analyzer.....	41
Site survey.....	41